

Instruction Manual

Flow Measurement Transmitter

NivuFlow Mobile 550 / NivuFlow Mobile 550 Ex



Firmware Revision: 3.5.x

Document revision: 00 / 10.07.2020

Original Manual: German / rev. 00 as of 07.07.2020

NIVUS AG, Switzerland

Burgstrasse 28
8750 Glarus, Switzerland
Phone +41 (0)55 6452066
Fax +41 (0)55 6452014
swiss@nivus.com
www.nivus.de

NIVUS Austria

Muehlbergstrasse 33B
3382 Loosdorf, Austria
Phone +43 (0) 2754 567 63 21
Fax +43 (0) 2754 567 63 20
austria@nivus.com
www.nivus.de

NIVUS Sp. z o.o., Poland

ul. Hutnicza 3 / B-18
81-212 Gdynia, Poland
Phone +48 (0) 58 7602015
Fax +48 (0) 58 7602014
biuro@nivus.pl
www.nivus.pl

NIVUS France

67870 Bischoffsheim, France
Phone +33 (0)3 88 9992 84
info@nivus.fr
www.nivus.fr

NIVUS Ltd., United Kingdom

Wedgewood Rugby Road
Weston under Wetherley
Royal Leamington Spa
CV33 9BW, Warwickshire
Phone +44 (0)8445 3328 83
nivusUK@nivus.com
www.nivus.com

NIVUS Middle East (FZE)

Building Q 1-1 ap. 055
P.O. Box: 9217
Sharjah Airport International
Free Zone
Phone +971 6 55 78 224
Fax +971 6 55 78 225
middle-east@nivus.com
www.nivus.com

NIVUS Korea Co. Ltd.

#2502 M Dong, Technopark IT Center,
32 Song-do-gwa-hak-ro, Yeon-su-gu,
INCHEON, Korea 21984
Phone +82 32 209 8588
Fax +82 32 209 8590
korea@nivus.com
www.nivus.com

NIVUS Vietnam

21 Pho Duc Chinh, Ba Dinh
Hanoi, Vietnam
Phone +84 12 0446 7724
vietnam@nivus.com
www.nivus.com

Copyrights and property rights

This document and its contents are proprietary to NIVUS GmbH and are not to be reproduced or copied without the express written permission of NIVUS GmbH.

Violations oblige to compensation.



Important Note

This instruction manual may exclusively - even in parts - be copied or translated in any other way with the express written consent of NIVUS GmbH.

Translation

If the device is sold to a country in the European Economic Area (EEA) this instruction manual must be translated into the language of the country in which the device is to be used.

Should the translated text be unclear, the original instruction manual (German) must be consulted or the NIVUS GmbH contacted for clarification.

Copyright

No part of this publication may be reproduced, transmitted, sold or disclosed without prior permission. Damages will be claimed for violations.

All rights reserved.

Names

The use of general descriptive names, trade names, trade-marks and the like in this manual does not entitle the reader to assume they may be used freely by everyone. They are often protected registered trademarks even if not marked as such.

Document modifications

Rev.	Modifications	Editor in charge	Date
00	First version based on the German document	MoG	10.07.2020

Table of contents

<u>Copyrights and property rights</u>	3
<u>Document modifications</u>	4
<u>Table of contents</u>	5
<u>General</u>	10
1 About this manual.....	10
1.1 Applicable documentation	10
1.2 Signs and definitions used	10
1.3 Abbreviations used.....	11
1.3.1 Colour code for wires and single conductors	11
2 Connections and Operating Elements	11
2.1 Power Supply	11
2.1.1 Transmitter	11
2.1.2 Rechargeable Batteries	12
2.2 NivuFlow Mobile Operating Elements.....	12
2.3 Interfaces	13
<u>Safety Instructions</u>	14
3 Used symbols and Signal words	14
3.1 Valuation of the accident level	14
3.2 Warning notices on the product (option)	15
4 Safeguards and Precautions.....	15
5 Warranty.....	17
6 Liability disclaimer	17
7 Use in accordance with the requirements	17
8 Ex Protection	18
9 User's Responsibilities	19
10 Personnel requirements	20
<u>Delivery, Storage and Transport</u>	21
11 Delivery	21
12 Reception inspection	21
13 Storage.....	22
14 Transport.....	22
15 Return.....	22
<u>Product Specification</u>	23
16 Product Construction and Overview.....	23
16.1 Enclosure Dimensions	24
16.2 Directly Connectable Sensors.....	24
17 Device Identification	24
18 Specifications	26
19 Configuration/Device Types	27

Functional description	29
20 Operating Ranges	29
21 Functional Principles	29
21.1 Flow Velocity Determination – Doppler Principle	29
21.2 Level Measurement.....	30
Installation and Connection	31
22 In General.....	31
22.1 Installation Place	31
22.2 Before Installation	32
22.2.1 PU stickers on enclosure frame	32
22.2.2 Gaskets	32
22.2.3 Securing the Instrument.....	32
22.2.4 Connection Sockets	32
23 Electrical Installation/Power Supply	33
23.1 Rechargeable Battery Pack	33
23.1.1 Removing/Inserting the Rechargeable Battery Pack	34
23.1.2 Charging the rechargeable battery pack.....	35
23.1.3 Operation/Charging via an Alternative Power Supply	37
23.1.4 Operation/Charging with direct connection to mains power	38
24 Sensor Installation.....	38
24.1 Sensor Installation Basics	38
24.2 Definition of Channel Shape	39
24.3 Installation of the Level sensor	39
24.4 Installation of the Radar sensor	39
25 Connection of Sensors	39
25.1 Cable for Sensor connection.....	39
25.2 Sensor connection	40
25.3 Overvoltage Protection Measures.....	40
26 Single external Connection for Inputs/Outputs	41
27 Connecting the Connector Box for Inputs/Outputs	41
28 (T-Shape) Antenna for GPRS Data Remote Transmission	43
Putting into Operation	44
29 Notes to Users.....	44
30 Indication System of Status LED on NivuFlow Mobile	44
31 Setting Up Connection	45
31.1 General.....	45
31.2 Android Operating System	45
31.3 iOS Operating System	48
31.4 Windows Operating System.....	51
32 Menu Operation/Overview	54
32.1 Display Overview	54
32.2 Saving Parameters.....	55
32.3 Menus.....	56

Commissioning Example	57
33 Contactless Measurement in a rectangular Channel	57
33.1 General.....	57
33.2 Easy Parameterisation Process in a specific Example.....	57
Main Display	60
34 Functions of the Main display.....	60
Parameter Setting	66
35 General Programming.....	66
35.1 Save Parameters	66
35.2 Change WLAN Password	66
35.3 Change Instrument SSID	67
35.4 Lost Password.....	67
35.5 Automatic Data Transmission to USB Stick.....	68
36 Parameter Setting using Quick Start.....	68
37 Parameter Functions.....	72
37.1 Main Menu	72
37.2 Functions of the first Menu Level	72
37.2.1 Menu - Application	72
37.2.2 Menu - Data	73
37.2.3 Menu - System.....	74
37.2.4 Menu - Communication.....	75
37.2.5 Menu - Display	75
37.2.6 Menu – Battery (12V).....	76
37.2.7 Menu - Quick Start	76
37.2.8 Menu - Alert.....	77
38 Parameters Menu Application	77
38.1 Menu Measure Place	78
38.1.1 Name of Measurement Place	78
38.1.2 Channel Profiles.....	78
38.1.3 3D-View.....	83
38.1.4 Low-Flow Suppression.....	83
38.1.5 Damping.....	84
38.1.6 Stability.....	84
38.2 Menu h-Sensors.....	85
38.3 Menu v-Sensor 1.....	85
38.3.1 Sensor types	85
38.3.2 Mounting Data.....	86
38.3.3 v-Minimum and v-Maximum.....	86
38.3.4 v-Determination low levels	86
38.4 Menu Inputs/Outputs (analog and digital)	88
38.4.1 Analog Inputs	89
38.4.2 Analog Outputs	90
38.4.3 Digital Inputs	91
38.4.4 Digital Outputs	92
38.5 Menu Diagnostics.....	93
39 Parameters Menu Data	94
39.1 Menu Trend.....	94
39.2 Menu Day totals	95

39.3	Menu Data memory.....	97
40	Parameters Menu System.....	99
40.1	Menu Information	99
40.2	Menu Region settings	100
40.2.1	(Operation) Language.....	100
40.2.2	Date format	100
40.2.3	Units	100
40.2.4	Data units	102
40.3	Menu Time/Date.....	103
40.4	Menu Error messages.....	104
40.5	Menu Service	104
40.5.1	Service level.....	105
40.5.2	Restart.....	105
40.5.3	Powerdown	105
40.5.4	Parameter reset	105
40.5.5	Feature unlock	105
40.5.6	Update NivuFlow.....	108
40.5.7	Update Bootloader	108
40.6	Menu Storage mode.....	109
41	Parameters Menu Communication.....	110
42	Parameter Menu Display.....	115
43	Parameter Menu Battery (12V)	116
44	Parameter Menu Quick Start.....	117
44.1	Menu >Quick start< / >Region settings<.....	117
44.2	Menu >Quick start< / >Measure place<.....	118
44.3	Menu >Quick start< / >h-Sensors<	118
44.4	Menu >Quick start< / >v-Sensor 1<	119
44.5	Menu >Quick start< / >Analog input x<.....	119
44.6	Menu >Quick start< / >Digital input 1<.....	120
45	Parameter Menu Alert	120
45.1	Menu >Alert< / >Flow<.....	121
45.2	Menu >Alert< / >Level<.....	121
45.3	Menu >Alert< / >Velocity<.....	122
45.4	Menu >Alert< / >Air temperature<	123
45.5	Menu >Alert< / >Battery (12V)<	123
45.6	Menu >Alert< / >Analog Input 1<	124
45.7	Menu >Alert< / >Analog Input 2<	125
45.8	Menu >Alert< / >Analog Input 3<	126
45.9	Menu >Alert< / >Digital Input<	127
Diagnostics		128
46	Diagnostics Menu Principles	128
47	Menu Diagnostics h-Sensors	129
48	Menu Diagnostics v-Sensor	129
49	Menu Diagnostics Inputs/Outputs	130
49.1	Important Information on the Simulation	130
50	Menu Diagnostics Signal Analysis	132
51	Menu Diagnostics Simulation.....	133

<u>Maintenance and Cleaning</u>	134
52 Maintenance	134
52.1 Maintenance Interval	134
52.2 Customer Service Information	135
53 Cleaning	135
53.1 Transmitter	135
53.2 Power Adapter / Battery Charger	135
53.3 Sensors	135
54 Dismantling/Disposal	136
55 Installation of spare parts and parts subject to wear and tear	136
56 Accessories	136
<u>Index</u>	138
<u>Credits and Licenses</u>	141
57 List of references of the licenses and codes used	141
<u>Approvals and Certificates</u>	142

General

1 About this manual



Important note

READ CAREFULLY BEFORE USE.

KEEP IN A SAFE PLACE FOR LATER REFERENCE.

This instruction manual is for the intended use of the flow measurement transmitter NivuFlow Mobile 550. This manual is oriented exclusively to qualified expert personnel.

Read this instruction manual carefully and completely prior to installation and connection since it contains relevant information on this product. Observe the notes and particularly follow the warning notes and safety instructions.

If you should have problems to understand information contained within this instruction manual either contact the NIVUS GmbH or one of the distributors for further support. The legally associated companies and subsidiaries of NIVUS group cannot be held responsible for damage to persons or material due to incorrectly understood information in this instruction.

1.1 Applicable documentation

For the installation and operation of the complete system extra instruction manuals or technical descriptions may be required apart from this manual.

- Technical and Installation Instruction for Radar sensors OFR

These manuals are provided with the auxiliary units or sensors and/or are available as download on the NIVUS homepage.

1.2 Signs and definitions used

Image	Meaning	Remark
	(Action) Step	Action to be performed by you. Note the numbering of action steps. Observe the order of the working steps.
	Cross-reference	Refers to further or detailed information.
>Text<	Parameter or Menu	Indicates a parameter or a menu that is selected or described.
	Reference to document	Refers to an accompanying documentation.

Table 1 Structural elements within the manual

1.3 Abbreviations used

1.3.1 Colour code for wires and single conductors

The abbreviations of colours, wire and components follow the international colour code according IEC 60757.


BK	black	BN	brown	RD	red
OG	orange	YE	yellow	GN	green
BU	blue	VT	violet	GY	grey
WH	white	PK	pink	TQ	turquoise
GNYE	green/yellow	GD	gold	SR	silver

2 Connections and Operating Elements

2.1 Power Supply

2.1.1 Transmitter

The NivuFlow Mobile (Fig. 2-1 no. 1) is supplied by rechargeable battery packs. Once plugged in the batteries are connected to the transmitter via the charging pins (Fig. 2-1 no. 4) supplying the required operating voltage.

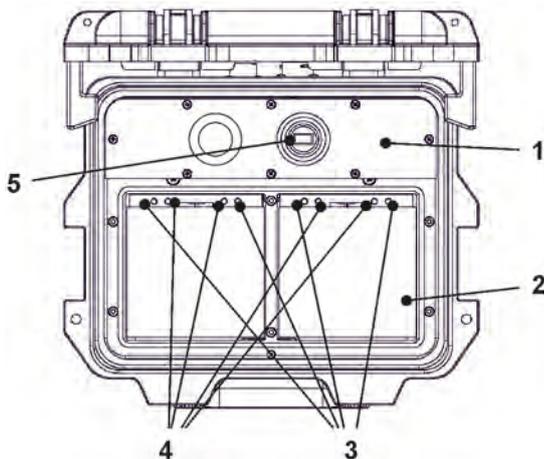

- 1 Transmitter
- 2 Battery compartment (two battery packs; illustration without batteries)
- 3 Guide pins for battery packs
- 4 Charging pins for AC power supply of transmitter (by battery packs)
- 5 USB-A interface

Fig. 2-1 Power supply by battery packs (top view)

2.1.2 Rechargeable Batteries

The rechargeable batteries can be charged either in installed condition or while removed by using a battery charger (optional accessory).

WARNING




Risk of explosion when charging battery packs in Ex areas

Charge rechargeable battery packs outside of Ex areas only.

Do not charge within Ex areas.

There are two different options to charge the batteries while being installed:

- Power adapter 110...230 V AC using the multifunction socket (Fig. 2-2 no. 1) on the reverse side of the enclosure
- External power source 12...14 V DC (e.g. battery, solar module, fuel cell etc.) using cable via multifunction socket

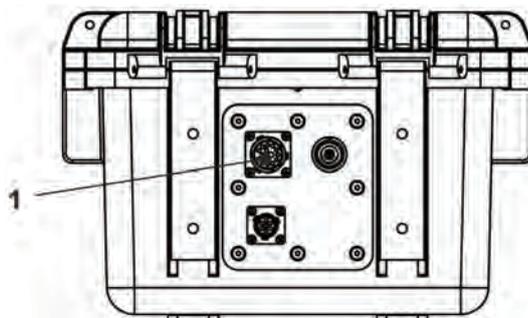

1 Multifunction socket

Fig. 2-2 Charging batteries via multifunction socket



Sensor wiring diagrams can be found in chapter “25 Connection of Sensors”.

2.2 NivuFlow Mobile Operating Elements

NivuFlow Mobile is activated with the Reed contact in the front side. Use the accompanying ring magnet *ZUB0 NFM MAGNET* (Fig. 2-3) to this.

The NivuFlow Mobile is not equipped with any other operating elements. Instrument operation and the setting of parameters are carried out completely by using smartphone, tablet, notebook and PC.




Also refer to the instruction manuals of your preferred smartphone, tablet, notebook or PC.



Fig. 2-3 Solenoid

2.3 Interfaces

The transmitter is equipped with various interfaces which can be found on the reverse side or on the top of the instrument.

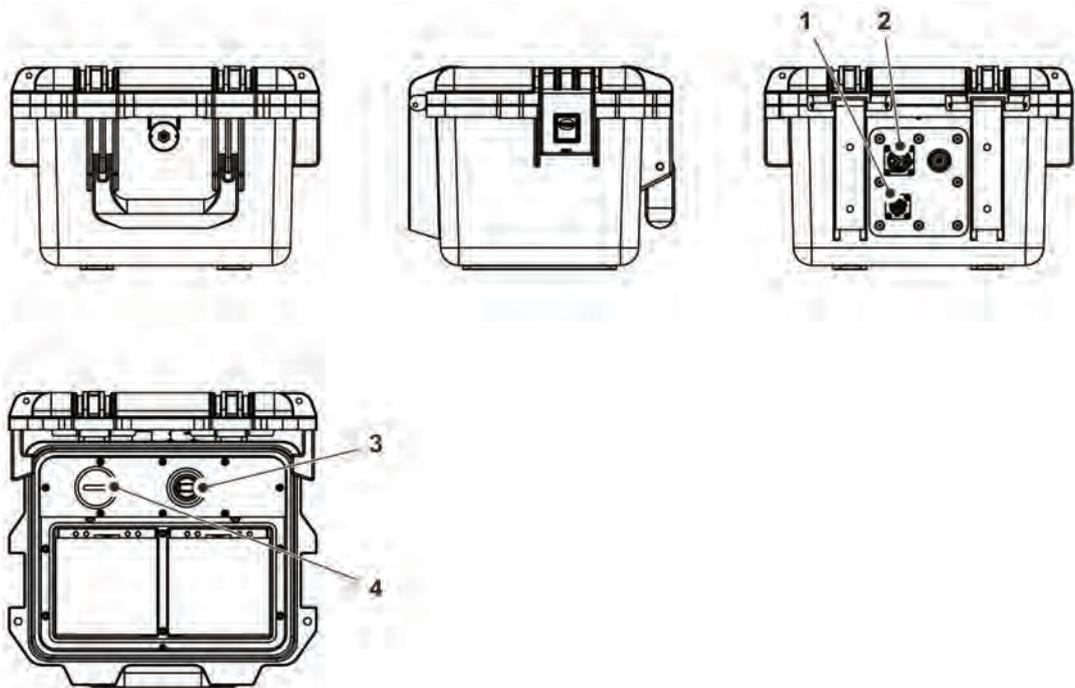

- 1 Sensor connection sockets, analog input 1
- 2 Multifunction socket I/O / connection socket digital input
- 3 USB-A interface (accessible with open cover)
- 4 GPRS SIM card slot (in connection with GPRS antenna)

Fig. 2-4 Available interfaces

Safety Instructions

3 Used symbols and Signal words

3.1 Valuation of the accident level



The general warning symbol indicates the risk of personal injuries or death. In the text section the general warning symbol is used in conjunction with the signal words described below.

DANGER

Warnings in high degree of risk



Indicates a high-risk, **imminently** hazardous situation which will result in death or serious injury if not avoided.

WARNING

Warnings in medium degree of risk



Indicates a **possible** danger with medium risk which may result in a life-threatening situation or (severe) bodily injury if it is not avoided.

CAUTION

Warnings in low-risk or property damages



Indicates a possible danger with moderate risk which may result in minor or moderate personal injury or material damage if not avoided.

WARNING

Danger by electric voltage



Indicates a hazard with a high risk of electric shock which may result in a life-threatening situation or (severe) bodily injury if it is not avoided.



Important Note

Contains information that should be highlighted.
Indicates a potentially damaging situation which can result in a damage of the product or an object in its environment.



Note

Contains information and facts.

3.2 Warning notices on the product (option)






General warning label

This symbol is for operators to refer to this instruction manual. Observing the information contained therein is required in order to maintain protection measures provided by the instrument during installation procedures and operation.



Protective conductor

This symbol refers to the protective conductor of the unit. Depending on the mode of installation the instrument shall be operated solely connected to an appropriate protective conductor according to applicable laws and regulations.

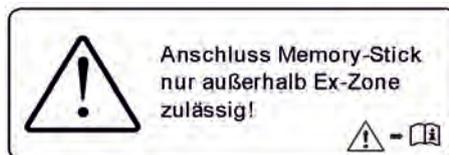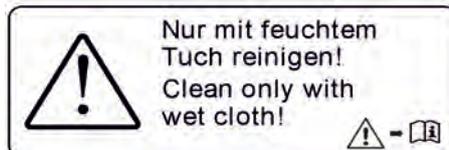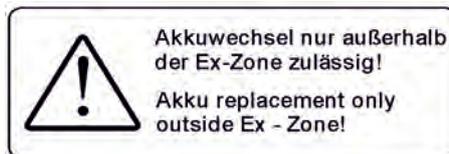

4 Safeguards and Precautions

Working with NIVUS instruments requires to observe and to follow the safety measures and precautions below generally and at any time. These notes and warnings will not be repeated for each description within the document.

WARNING



Check danger through explosive gases

Prior to beginning mounting, installation and maintenance make sure to observe any regulations on safety at work as well as to check the potential risk due to explosive gases. Use a gas warner to check.

When working in the channel system make sure to avoid electrostatic charge:

- Avoid unnecessary movements to minimise the risk of static energy accumulating.
- Discharge any possible static electricity from your body before you begin to install sensors.

Disregarding may lead to personal injury or damage your equipment.

WARNING



Germ contamination

Please note that due to the operation in the waste water field the measurement system and cables may be loaded with dangerous disease germs. Respective precautionary measures must be taken to avoid damage to one's health.

Wear protective clothing.

WARNING



Observe occupational safety regulations

Before starting installation work, observing the work safety regulations need to be checked.

Disregarding may lead in personal injury.

WARNING



Do not disable safety devices

It is strictly prohibited to disable the safety devices or to change the way they work.

Disregarding may lead in personal injury.

WARNING



Disconnect the systems from mains

Maintenance, cleaning and/or repairs (by qualified personnel only) may only be performed when de-energised.

Disregarding may lead to electric shocks.



Putting into operation by trained experts only

The entire measurement system shall be installed and put into operation by trained expert personnel only.

Integrated buffer battery

The exchange of the integrated buffer battery shall be carried out by NIVUS staff or personnel authorised by NIVUS only. Otherwise the guarantee expires.

5 Warranty

The device has been functionally tested before delivery. If it is used as intended (see chapter “7 Use in accordance with the requirements”) and the operating instructions, the applicable documents (see chapter “1.1 Applicable documentation”) and the safety notes and instructions contained therein, are observed, no functional restrictions are to be expected and perfect operation should be possible.



Please also note in this regard the next chapter “6 Liability disclaimer”.



Limitation of warranty

In the event of non-compliance with the safety instructions and instructions in this document, the companies of the NIVUS group of companies reserve the right to limit the warranty.

6 Liability disclaimer

The legally associated companies and subsidiaries of NIVUS group assume no liability

- for damages owing to **a change** of this document. The legally associated companies and subsidiaries of the NIVUS group reserve the right to change the contents of this document and this disclaimer at any time and without any notice.
- for damages to persons or objects resulting from **failure to comply** with applicable **regulations**. For connection, commissioning and operation of the sensors all available information and higher local legal regulations (in Germany e.g. VDE regulations) such as applicable Ex regulations as well as safety requirements and regulations in order to avoid accidents shall be adhered to.
- for damages to persons or objects resulting from **improper use**. For safety and warranty reasons, all internal work on the instruments beyond from that involved in normal installation and connection, must be carried out only by qualified NIVUS personnel or persons or companies authorised by NIVUS.
- for damages to persons or objects resulting from the use of instruments in technically **imperfect** condition.
- for damages to persons or objects resulting from the use of instruments **not in accordance with the requirements**.
- for damages to persons or objects resulting from failure to comply with **safety information** contained within this instruction manual.
- for missing or incorrect measurement values or resulting consequential damages due to **improper installation**.

7 Use in accordance with the requirements



Note

The instrument is intended solely for the purpose described below. Modifying or using the instruments for any other purposes without the written consent of the legally associated companies and/or subsidiaries of NIVUS group will not be considered as use in accordance with the requirements.

The legally associated companies and subsidiaries of NIVUS group cannot be held responsible for any damage resulting from improper use.

The user alone bears any risk.

The NivuFlow Mobile 550 transmitter incl. the according sensors is for temporary flow measurement of liquid media / water in part filled, defined channels and flumes.

NivuFlow Mobile 550 is designed and manufactured in accordance with the current state of the art and with the recognised safety rules and regulations applicable at the time this document is issued. Danger to persons or material damage cannot be completely ruled out, however.

The maximum permissible limit values as specified in chapter “18 Specifications” shall be necessarily observed. Any case varying from these conditions which is not approved by NIVUS GmbH in written form is left at the owner’s risk.

8 Ex Protection

The portable transmitter NivuFlow Mobile 550 and the accompanying sensors are designed to be used in areas with explosive atmospheres (zone 1).

The following conditions must be observed:

- Programming the unit under Ex conditions is permissible:
 - with the programming person **within** the Ex area as soon as the indicator and operating unit used has an Ex approval;
 - with the programming person **outside** of the Ex area as soon as the indicator and operating unit used has no Ex approval.
- Maintenance and repairs shall be executed only **outside** of Ex area.
- Rechargeable batteries shall be removed/inserted and charged only **outside** of Ex areas.
- In general, only rechargeable batteries approved by NIVUS shall be used **within** Ex areas.
- Use the USB interface only **outside** of Ex areas.
- Replace the SIM card only **outside** of Ex areas.
- The instrument shall be (after successful installation at the measurement place) secured against unauthorised opening by using a padlock (holes on the side of the enclosure).

Approval

Transmitter		II 2G Ex eb ib [ib] mb IIB T4 Gb (TÜV 17 ATEX 196722 X)
Sensors		II 2G Ex ib IIB T4 Gb (TÜV 16 ATEX 185271 X issue 00)

When creating the **certification of intrinsic safety** the **sensor cable length** shall be considered as follows:

Cable specifications for the OFR radar sensor cable:

- Cable capacitance (red and blue): 100 pF/m
- Cable inductance (red and blue): 0,76 µH/m

During installations design, selection and erection according to EN 60079-14 the both following **conditions** shall be met:

- $C_o \geq C_i + C_k$
- $L_o \geq L_i + L_k$

given

C_o	=	Max. permissible external capacitance of the radar sensor circuit
C_i	=	Effective internal capacitance of the radar sensor
C_k	=	Combined capacitances of sensor cable
L_o	=	Max. permissible external inductance of the radar sensor circuit
L_i	=	Effective internal inductance of the radar sensor

L_k = Combined inductances of sensor cable



Validity of Ex Approval

The Ex approval is only valid in connection with the respective indication on the transmitter or the sensor nameplate.



Declarations of Conformity and Test Reports

For installation and commissioning the EC Declarations of Conformity and Test Reports of the respective authorities shall be strictly followed.



Ex Approval for Sensors

The Ex approval for the sensors is part of the Technical and Installation Instruction for Radar sensors OFR.

9 User's Responsibilities



Important Note

In the EEA (European Economic Area) national implementation of the framework directive 89/391/EEC and corresponding individual directives, in particular the directive 2009/104/EC concerning the minimum safety and health requirements for the use of work equipment by workers at work, as amended, are to be observed and adhered to.

In Germany e.g. the Industrial Safety Ordinance must be observed.

Make sure to have a local operating permit available and observe the associated conditions. In addition to this you must observe environmental requirements and local laws on the following points:

- Personnel safety (accident prevention regulations)
- Safety of work materials and tools (safety equipment and maintenance)
- Disposal of products (laws on wastes)
- Disposal of materials (laws on wastes)
- Cleaning (cleansing agents and disposal)

Connections

Operators shall make sure prior to operating the instrument that during installation and initial start-up the local regulations (such as regulations for electrical connection) are observed.

Keep the manual

Keep this manual in a safe place and make sure it is available for the users of this product at any time.

Provide the manual

In case of selling the instrument this instruction manual shall be provided to the purchaser since it is a part of the standard delivery.

10 Personnel requirements

Installation, commissioning and maintenance shall be executed only by personnel meeting the demands as follows:

- Expert personnel with relevant training and appropriate qualification
- Personnel authorised by the plant operator



Qualified personnel

within the context of this documentation or the safety notes on the product itself are persons who are sufficiently familiar with installation, mounting, starting up and operation of the product and who have the relevant qualifications for their work; for example:

- I. Training, instruction or authorisation to activate/deactivate, isolate, ground, and mark electric circuits and devices/systems according to the safety engineering standards.*
 - II. Education and instruction according to the standards of safety engineering regarding the maintenance and use of adequate safety equipment.*
 - III. First aid training*
-

Delivery, Storage and Transport

11 Delivery

The standard delivery of the NivuFlow Mobile 550 contains:

- Measurement transmitter type NivuFlow Mobile 550 (according to shipping documents)
- Solenoid *ZUB0 NFM MAGNET* (Fig. 2-3)
- USB stick
- Screw driver for hexagon socket screws
- PU stickers (two pieces: 31x17x3.5 mm) to avoid vacuum in the enclosure in case of being returned (via airfreight) to NIVUS (e.g. for maintenance)
- T-shape antenna (only for versions with internal GPRS / UMTS / LTE modem)
- Padlock (only for Ex versions)
- Instruction manual (incl. certificate(s) of conformity) containing any relevant information on how to operate the NivuFlow Mobile

Check extra accessories depending on your order and by using the delivery note.

12 Reception inspection

Check the packaging for visible damage immediately after receipt. Any possible damage in transit shall be instantly reported to the carrier. Furthermore a written report shall be sent to NIVUS GmbH in Eppingen.

Incomplete deliveries shall be reported in writing either to your local representative or directly to the NIVUS head office in Eppingen within two weeks.



Important note

Any complaints received later cannot be accepted.

➡ Prior to the first use:

1. Open enclosure cover.
2. Remove both PU stickers (two pieces; 31x17x3.5 mm), if available, from the left and right enclosure frame (Fig. 15-1 no. 1). The stickers have been attached prior to shipping (via airfreight) to prevent the enclosure from getting closed and to avoid vacuum formation due to extreme temperature changes during shipping.

13 Storage

The permissible maximum values regarding ambient conditions such as temperature and humidity according to chapter “18 Specifications” shall be necessarily observed.

Protect the instrument from corrosive or organic solvent vapours, radioactive radiation as well as strong electromagnetic radiation.

➡ To store the instrument:

1. Remove the batteries.
2. If the hoop guards should be mounted to attach the Connector box remove the guards (lack of space) and attach the rubber buffers instead.



Rubber buffers

Necessarily attach the rubber buffers

- *to prevent the hidden fastening plates on the reverse side of the NFM in the screw channel from getting lost. The fastening plates are essential since they provide the threads to fasten the hoop guards and additionally stabilise the guards on the NFM.*
- *because the buffers are designed as impact protection for NFM connections and protect the sockets etc. from being damaged.*

14 Transport

Take precautionary measures and use lashing straps or similar to protect the NivuFlow Mobile from heavy shocks or vibrations.

Otherwise with regard to environmental influences the same conditions apply as to the storage (see chapter “13 Storage”).

15 Return

In case of a required reshipment return the unit at customer cost to NIVUS GmbH in Eppingen using the original packaging.

Insufficiently franked shipments will not be accepted!

➡ Prior to shipping (via airfreight):

1. Attach PU stickers (two pieces; 31x17x3.5 mm) right and left on the enclosure frame (Fig. 15-1 no. 1). This prevents the enclosure from getting closed and eliminates vacuum formation due to extreme temperature changes.
2. Place the NivuFlow Mobile safely in the original packaging for transport.


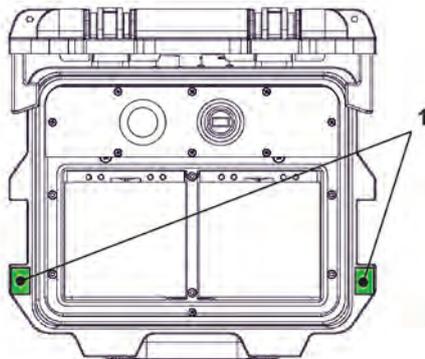


Fig. 15-1 Attachment position for PU stickers

Product Specification

16 Product Construction and Overview

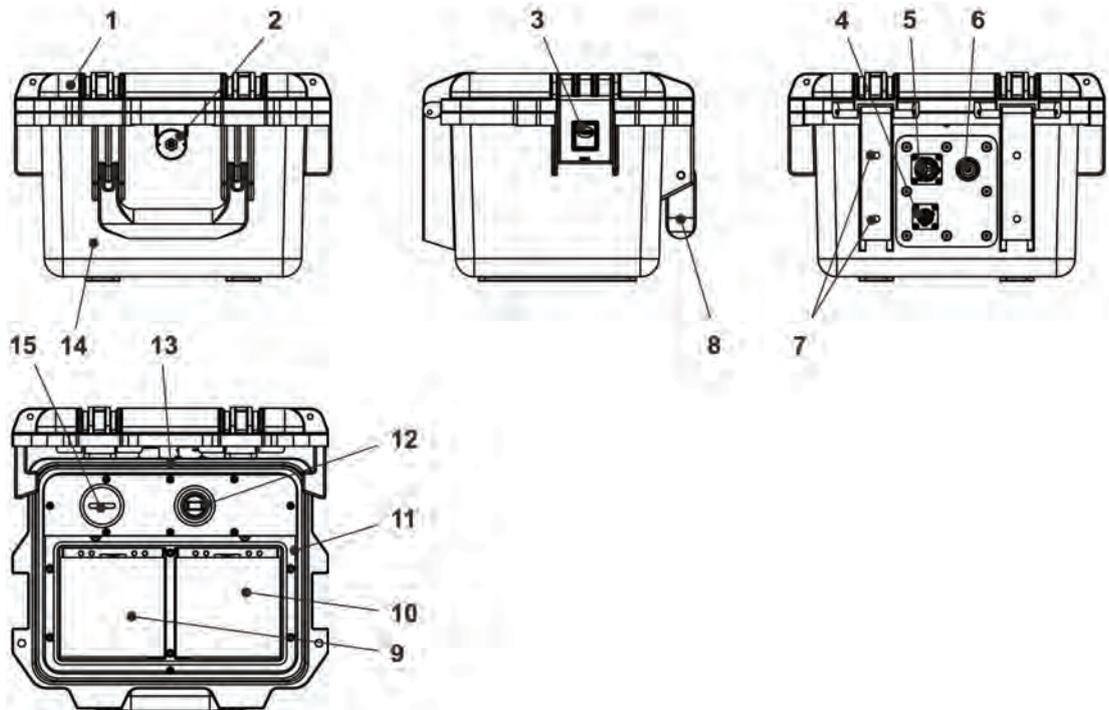

- 1 Enclosure cover
- 2 LED (status indication) and reed contact (wake-up using solenoid)
- 3 Lock (both sides)
- 4 Connection socket for the i-Series level sensor *NMIOxxxxx001HNL*
- 5 Multifunction socket I/O to connect the radar sensor OFR or the Connector box
- 6 GPRS antenna socket
- 7 Fastening holes for rubber buffers or hoop guards
- 8 Handle
- 9 Left battery pack receptacle
- 10 Right battery pack receptacle (position to charge the battery)
- 11 Cover (not shown) above batteries with six non-detachable hexagon socket screws
- 12 USB-A interface
- 13 Measurement transmitter NivuFlow Mobile 550 (IP67)
- 14 Enclosure (IP68 with cover closed)
- 15 GPRS SIM card slot (in connection with GPRS antenna)

Fig. 16-1 Device construction NivuFlow Mobile 550 incl. enclosure

16.1 Enclosure Dimensions


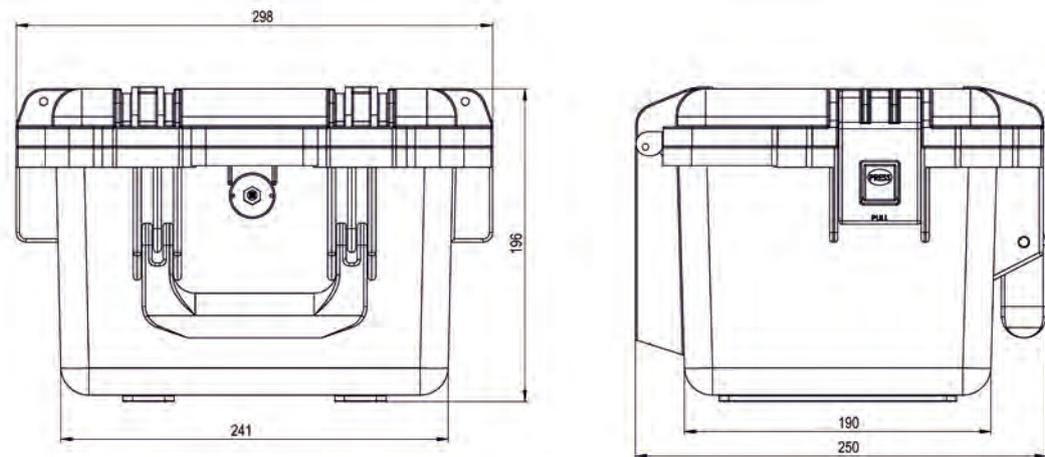


Fig. 16-2 Enclosure

16.2 Directly Connectable Sensors

The figure below provides an overview on the directly connectable sensors.

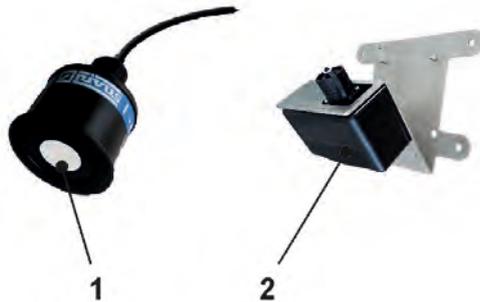

- 1 i-Series (level) sensor type *NMI0xxxxx001HNL*
- 2 Radar sensor type *OFR-xx* (*OFR-H00 / OFR-EVG / OFR-G00 / OFR-EV0*)

Fig. 16-3 Directly connectable sensors

17 Device Identification

The instructions contained within this manual are valid only for the type of device specified on the title page. The nameplates are fixed on the side of the enclosure and contain the following:

- Name and address of NIVUS GmbH
- CE label
- Information on type and series incl. article and series number
- Year of manufacture: the first four digits of the serial number represent the year and the week number of manufacture (2021.....)
- Ex protection label
- Environmental conditions in operation

In case of enquiries and ordering replacement parts it is important to specify article number as well as the serial number of the respective data logger or sensor. This ensures correct and quick processing.



Fig. 17-1 Nameplate NivuFlow Mobile 550 (Example Ex-Version)

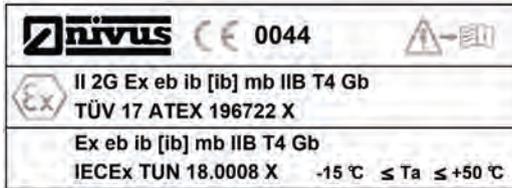


Fig. 17-2 Nameplate NivuFlow Mobile 550 Ex-Version (additionally)



Check nameplates

Check the delivered instrument for accordance with your order by identifying the nameplate.



The declaration(s) of conformity and the EU-Type Examination Certificate(s) are located at the end of the manual.

18 Specifications

Measurement principle	Doppler radar
Working frequency of radar sensor	24 GHz, ISM-Band
Power supply	- 1...2x rechargeable batteries 12 V / 15 Ah, VRLA-AGM - Battery charger 100...240 V AC / 50...60 Hz / 50 VA - Ext. power supply possible via Connector box
Enclosure	- Material: HPX high performance synthetic resin - Weight: approx. 4,7 kg (without batteries and hoop guards) - Protection: IP68 closed / IP67 open
Ex approvals/ other approvals	- ATEX: TÜV 17 ATEX 196722 X - IECEx: TUN18.0008X
Operating temperature	-15 °C...+50 °C
Storage temperature	-15 °C...+70 °C
Max. humidity	90 %, non-condensing
Display	Status LED (RGB)
Operation	Solenoid switch; via WLAN with display and operating module (smartphone, tablet, notebook etc.)
Inputs	- 2x 0/4...20 mA (active/passive) - 1x 0/4...20 mA (passive) - 1x active digital input - 1x socket for power adapter or alternative power supply (only via Connector box)
Outputs	- 1x analog output 0...10 V - 1x potential-free digital output as SPDT / bi stable (only via Connector box) - 1x USB-A for readout of measurement values via USB stick
Storage cycle / Operating mode	1 min. to 60 min., time-cyclic or event-based 5 sec. to 60 min., continuous operation
Data memory	Internal; 182.398 measurement cycles
Data transmission/ communication	- via plug-in USB stick - via WLAN - option: via GPRS / UMTS / LTE (integrated modem)
Operating life/time	1 year (when using 2 rechargeable battery packs); calculated value with a storage cycle of 60 minutes and daily data transmission; values may vary depending on measurement place and battery age

Table 2 Specifications

Sensors

Construction and description of the according sensors as well as the specifications can be found in the according instruction manuals or technical descriptions.

19 Configuration/Device Types

The portable measurement transmitter is available in different versions as shown in the overview table below.

From the article number the type of device can be specified.

NFM-	Design / Type
05500	Portable flow measurement transmitter for open channels and part filled pipes; functional extensions via software licences
	000 Standard device
	E00 With ATEX approval Zone 1
0550G	Portable flow measurement transmitter for open channels and part filled pipes; with data transmission ; functional extensions via software licences
	0E0 With internal modem; modem board Europe (EC21-E) * ¹ ; with T-shape antenna Ex-it GSM/3G (<i>NFM0 Z ANT1</i>)
	Inclusive: provision of measurement data in NIVUS WebPortal, device overview, device status display, localisation of measurement place on map, manual data download, data storage for 1 year (ring memory), guaranteed availability according to current IT standards
	0G0 With internal modem; modem board Global (EG25-G) * ² ; with T-shape antenna Ex-it GSM/3G (<i>NFM0 Z ANT1</i>); with global SIM card
	Inclusive: provision of measurement data in NIVUS WebPortal, device overview, device status display, localisation of measurement place on map, manual data download, data storage for 1 year (ring memory), guaranteed availability according to current IT standards
	0EG With internal modem; modem board Europe (EC21-E) * ¹ ; with T-shape antenna Ex-it GSM/3G (<i>NFM0 Z ANT1</i>); with global SIM card
	Inclusive: provision of measurement data in NIVUS WebPortal, device overview, device status display, localisation of measurement place on map, manual data download, data storage for 1 year (ring memory), guaranteed availability according to current IT standards
	EE0 With ATEX approval Zone 1 with internal modem; modem board Europe (EC21-E) * ¹ ; with T-shape antenna Ex-it GSM/3G (<i>NFM0 Z ANT1</i>)
	Inclusive: provision of measurement data in NIVUS WebPortal, device overview, device status display, localisation of measurement place on map, manual data download, data storage for 1 year (ring memory), guaranteed availability according to current IT standards

		<p>EG0 With ATEX approval Zone 1 with internal modem; modem board Global (EG25-G) ^{*2}; with T-shape antenna Ex-it GSM/3G (<i>NFM0 Z ANT1</i>); with global SIM card Inclusive: provision of measurement data in NIVUS WebPortal, device overview, device status display, localisation of measurement place on map, manual data download, data storage for 1 year (ring memory), guaranteed availability according to current IT standards</p> <p>EEG With ATEX approval Zone 1 with internal modem; modem board Europe (EC21-E) ^{*1}; with T-shape antenna Ex-it GSM/3G (<i>NFM0 Z ANT1</i>); with global SIM card Inclusive: provision of measurement data in NIVUS WebPortal, device overview, device status display, localisation of measurement place on map, manual data download, data storage for 1 year (ring memory), guaranteed availability according to current IT standards</p>
NFM-		

*1 Area of operations: Europe, Middle East, Africa, Korea, Thailand, India

*2 Area of operations: Global

Table 3 Product structure NFM 550



Accessories see chapter "56 Accessories".

Functional description

20 Operating Ranges

The NivuFlow Mobile 550 is a portable measurement system for contactless flow metering. It is used to measure water in part filled, defined channels and flumes with free discharge.

An overview on connectable sensors can be found in chapter “16.2 Directly Connectable Sensors”.

21 Functional Principles

21.1 Flow Velocity Determination – Doppler Principle

The measurement method used to determine the surface velocity is based on the Doppler principle.

The surface radar sensor Type OFR is installed either **towards** or **with** the flow direction above the water surface considering the block distance (see information in chapter “21.2 Level Measurement”) and is aligned parallel to the flow direction.

The radar sensor emits an electromagnetic signal. This signal hits the surface structure of the liquid, is reflected by areas orthogonal to the signal (such as waves) and then is detected by the sensor.



Notes on the radar measurement method

The radar measurement method necessarily requires a certain surface roughness / surface waviness as reflection area. Without such reflection areas the measurement may be subject to dropouts or even fail completely.

The system uses the resulting frequency shift (between signal emission and reception of the reflected signal) to compute the surface velocity of the liquid.

The computed surface velocity is used to determine the average flow velocity by using complex hydraulic algorithms.

These complex algorithms were developed for use with free discharge.

According calculation algorithms for the most relevant channel shapes are stored in the transmitter.

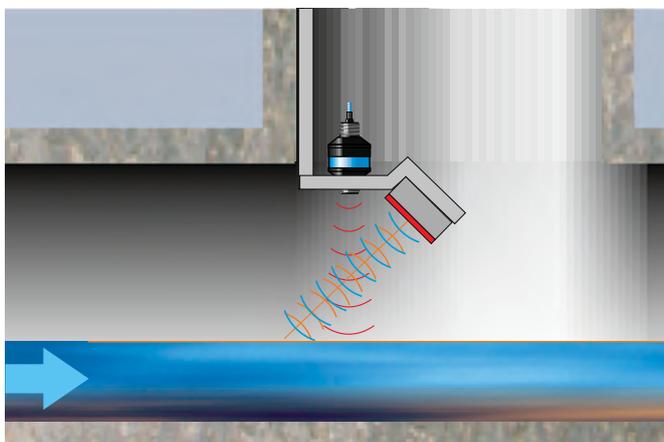


Fig. 21-1 Metering with surface radar

21.2 Level Measurement

i-Series sensors Type *NMI0xxxx001HNL* can be connected to the transmitter directly. The respective specifications are already saved in the transmitter. Due to this, the sensor is recognised automatically and more parameters do not need to be set.

When using i-Series sensors observe to meet the measurement ranges and block distances given below.

Information:

The block distance is the minimum distance to maintain (required "air space" between sensor and medium) with maximum filling levels. The i-Series sensor needs this distance to generate realistic measurement values.

The measurement range is the difference between the max. possible distance (sensor range) minus the block distance (required "air space" between sensor and medium).

	Type 03	Type 06	Type 10	Type 15
Max. distance in [m]	3.0	6.0	10.0	15.0
Min. distance in [m]; block distance	0.125	0.3	0.3	0.5
Max. measurement span in [m]	2.875	5.7	9.7	14.5

Table 4 Required distances to install i-Series sensors

Alternatively, the filling level can be fed using an **external analog 0...20 mA signal**. The according parameters are set in the transmitter in chapter "38.4 Menu Inputs/Outputs (analog and digital)".

Installation and Connection

22 In General

WARNING



Check danger through explosive gases

Prior to beginning mounting, installation and maintenance make sure to observe any regulations on safety at work as well as to check the potential risk due to explosive gases. Use a gas warner to check.

When working in the channel system make sure to avoid electrostatic charge:

- *Avoid unnecessary movements to minimise the risk of static energy accumulating.*
- *Discharge any possible static electricity from your body before you begin to install sensors.*

Disregarding may lead to personal injury or damage your equipment.

22.1 Installation Place

For safe installation at the chosen place the measures below must be taken:

- ➡ Protect the transmitter from direct sunlight. Install a protective cover if necessary.
- ➡ Observe the permitted ambient temperature (see chapter “18 Specifications”).
- ➡ Do not expose the transmitter and the connected sensors to heavy vibration or mechanical shocks.
- ➡ Ensure proper aeration. Strictly avoid a concentration of standing gases.
- ➡ Reduce the risk of vandalism or theft as far as possible by selecting measurement places skilfully. Install components e.g. under a bridge or inaccessibly on a bridge railing.
- ➡ The detection range of sensors must be free of obstructions/external disturbances (e.g. bushes, pedestrians, boats or similar) (necessarily observe sensor specifications in the according instruction manuals).
- ➡ The medium surface on the measurement place should represent the water body and hence should be largely free of disturbances and negative influences to the surface structure (such as shipping, foam formation, driftwood, rain, wind and storm, eddies, lateral inflow or similar)

Selecting the installation place strictly avoid:

- Corrosive chemicals or gases
 - Radioactive radiation
 - Electromagnetic radiation
 - Installation close to footpaths or travel ways
- ➡ If in doubt regarding the installation place contact the NIVUS customer service if required (see chapter “52.2 Customer Service Information”).

22.2 Before Installation

CAUTION



Suspend the instrument only by using appropriate safety belts

The instrument shall be suspended into shafts or manholes only by using the carrying handle and appropriate belts, ropes or similar.

It is not allowed to suspend the device by the sensor cable since this may lead to cable break, leaky plug connection or the transmitter may be torn off.

22.2.1 PU stickers on enclosure frame

- ➡ Prior to first use of the NivuFlow Mobile make sure that the PU stickers have been removed. If not, remove the stickers and clean the enclosure frame if necessary.

- ➡ See chapter "12 Reception inspection".

22.2.2 Gaskets

- ➡ Check the gaskets on the enclosure cover.
Before closing the cover make sure that the gasket is clean and undamaged, so:

1. Remove debris and/or dirt.
2. Replace defective gaskets.
3. Apply silicone grease if necessary.



Gaskets

The NIVUS GmbH cannot be held responsible for any instrument damage resulting from the use of defective or leaking gaskets.

22.2.3 Securing the Instrument

- ➡ Secure the transmitter from being washed away.
When installed in shafts or canals tending to overflow the transmitter shall be secured against being washed away unintentionally (use suspension bracket, plastic/stainless steel rope, chain or similar).

22.2.4 Connection Sockets

- ➡ To protect open, unused connection sockets on the reverse side of the instrument from dirt or shocks lock the sockets by using the attached caps prior to installation.

The protection degree of the (closed) instrument is IP68 even with open connection sockets. Damaged or lost caps can be purchased from NIVUS.

23 Electrical Installation/Power Supply

WARNING



Danger due to electric voltage

Remove the rechargeable batteries from the instrument and if connected to mains power via the multifunction socket disconnect from mains.
Working on the electric connections may induce the risk of electric shocks. Observe electric specifications as specified on the nameplate.

Disregarding may lead to personal injury.



Note

Observe the local installation directives.



Make sure to fulfil the requirements mentioned below:

1. Observe that the installation shall be carried out only by qualified expert personnel.
2. For electric installation follow the legal requirements of the according country (in Germany e.g. VDE 0100).
3. Observe further (local) statutory standards, regulations and technical rulings.
4. Before feeding the rated voltage the installation of transmitter and sensors must be completed. Verify whether the installation is correct.



A description on how to connect the sensors can be found starting page 38.

CAUTION



Do not loosen any screws

Do not loosen any screws on the transmitter except the undetachable hexagon socket screws of the battery compartment cover!

Keep the battery compartment locked during operation.

23.1 Rechargeable Battery Pack

NivuFlow Mobile can be operated with just one rechargeable battery pack, however, it is recommended to use two rechargeable battery packs to ensure maximum possible operation time.



Ready-to-use battery packs are obtainable on order at NIVUS (see chapter "56 Accessories").



Operating time in while charging/mains powered

The forecast of the operating time integrated with the system is not relevant while being charged (connected to mains power).

The value indicated by the operating time forecast is not valid before the charging power has been disconnected, i.e. as soon as the unit is really powered by the rechargeable battery/batteries.

The battery pack is stored in the according battery compartment. An additional battery pack can be plugged right next to it. It can be freely selected which compartment is to be used when only on battery pack is in use, however, there may be limitations during charging operation:

- While **charging** only the battery plugged into the right compartment is charged however, and the battery will be charged only up to 75 %.
- When **Discharging** the battery with the higher capacity (independent of the compartment used) is used until the capacity of both batteries has reached the same level. After that both batteries are discharged equally.

Moreover, the battery type used or the number of inserted batteries should be specified in the >Battery (12V)< menu to correctly indicate the remaining battery power in the >System</>Information< menu.

The battery compartment is locked with a cover and six non-detachable hexagon socket screws.



Installation of spare parts / parts subject to wear and tear

The use of spare parts/parts subject to wear and tear (such as rechargeable batteries) not approved by NIVUS will invalidate the guarantee.

Disregarding may cause negative consequences regarding warranty and liability. See chapter "5 Warranty" and "6 Liability disclaimer".

23.1.1 Removing/Inserting the Rechargeable Battery Pack

WARNING



Risk of explosion removing/inserting the battery pack in Ex areas

Always remove/insert the rechargeable battery pack outside of Ex areas. Never replace the battery within an Ex area.

With the rechargeable battery pack removed make sure to not short-circuit the poles with external objects. This may generate very high short circuit currents resulting in the development of excessive heat or even fire which might destroy the rechargeable battery pack.

Observe the specifications on the rechargeable battery pack.

The rechargeable battery can be replaced even in damp weather conditions or during rain. The battery compartment is completely separated from the measurement transmitter.

➡ Procedure:

1. Loosen the six non-detachable hexagon socket screws of the cover.
2. Remove the cover.
3. Remove the plugged battery on the grip belt.
4. After reinserting the rechargeable battery refit the cover and tighten the non-detachable hexagon socket screws of the cover finger-tight.

23.1.2 Charging the rechargeable battery pack

The rechargeable battery is normally shipped in discharged condition.

Fully charge the battery prior to **the initial instrument start**.

NIVUS recommend charging the battery outside of the instrument by using the power adapter/battery charger to ensure 100 % of charging capacity. If built in, the battery will be charged only up to approx. 75 %.

WARNING



Risk of explosion removing/inserting and charging the battery pack in Ex areas

The rechargeable battery pack shall be removed/inserted and charged only out of Ex areas. Never do so within Ex areas since otherwise explosion protection cannot be guaranteed.



Power adapter/battery charger

To charge the rechargeable battery packs use the power adapter/battery charger (Fig. 23-1 no. 1; NFM0 ZLAD) (available from NIVUS GmbH at extra costs) only. Observe the specifications attached on the power adapter/battery charger.

Using inappropriate battery chargers may destroy the battery (e.g. due to leaking of battery cells, explosion or similar).



- 1 Power adapter/battery charger with connection cable for the multifunction socket on NFM or the charging tray
- 2 LED indicating the charging status

Fig. 23-1 Power adapter/battery charger

Disconnect the power adapter/battery charger (Fig. 23-1 no. 1) from mains power before you connect/ disconnect it to/from a rechargeable battery.

The built-in LED (Fig. 23-1 no. 2) indicates the charging status.

LED Colour/Status	Description
Yellow	Charging process
Green	Trickle charging
LED not lit	Reversed polarity, short circuit or no mains power; internal fuse has tripped ^{*1}

Table 5 LED Colour

^{*1} If status remains unchanged contact NIVUS customer service (see chapter "52.2 Customer Service Information").


Charging the inserted battery pack

See chapter "23.1.4 Operation/Charging with direct connection to mains power".

Charging the removed battery pack

➤ Procedure:

1. Place the charging tray in a safe and dry place on a stable and horizontal surface. Make sure the charging tray itself is dry too.
2. Take suitable measures to ensure that unauthorised persons may not access the devices during the charging process.
3. Plug the battery pack (Fig. 23-2 no. 1) into the charging tray (Fig. 23-2 no. 2) with the upside down.
4. Plug the power adapter/battery charger (with connection cable for multifunction socket) into the charging socket (Fig. 23-2 no. 3) and connect to mains power supply. The batteries are charged via the charging contacts (Fig. 23-2 no. 4). Observe the LED colour/status on the power adapter/battery charger.
5. To avoid short circuits on the charging contacts/poles after the charging process is finished, first disconnect the power adapter/battery charger from mains power and then remove the rechargeable battery pack.

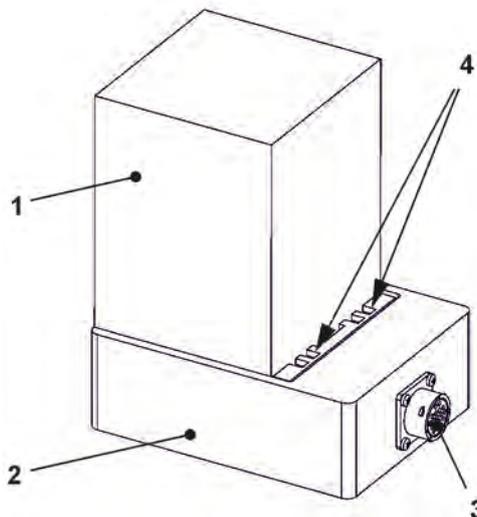

- 1 Rechargeable battery pack (plugged upside down)
- 2 Charging tray
- 3 Charging socket for connection of power adapter/charger
- 4 Charging contacts

Fig. 23-2 Rechargeable battery pack in charging tray

The maximum battery capacity will decrease over time. This impairs the battery life which, however, cannot be considered by the integrated battery life calculation.

If exposed to very low or very high ambient temperatures and long periods of use the capacity of the battery pack will decrease.



Battery life

Rechargeable batteries are wear parts and must be replaced once the charge capacity decreases considerably.

The battery life depends on the frequency of use.



Use for measurements

The battery should be charged every time before the NivuFlow Mobile is used.

Remove unused battery packs from the battery compartment after the last measurement and store them in a dry and frost-free place.

Installation of parts subject to wear and tear

The use of replacement parts/parts subject to wear and tear (e.g. rechargeable batteries) which are not approved by NIVUS invalidates the guarantee.

Battery disposal

Always observe environmentally compatible disposal of rechargeable batteries.

Worn batteries can be either returned to the manufacturer or can be taken to respective collecting points.

23.1.3 Operation/Charging via an Alternative Power Supply

WARNING



Risk of explosion removing/inserting the battery pack in Ex areas

Always remove/insert the rechargeable battery pack outside of Ex areas. Never replace the battery within an Ex area.

By using the multifunction socket the NivuFlow Mobile can be also operated with alternative power sources such as external rechargeable batteries, solar panels or external mains power adapter.

WARNING



Danger of explosion when operated with direct external power supply in Ex area

*The unit shall be operated **only out of** Ex areas when using a direct **external** power supply, **never inside of** Ex areas.*

During operation the battery pack is charged in the right-hand slot additionally. NIVUS, however, recommend the use of the battery charger since the battery will be charged to approx. 75 % of the total capacity when inserted (see chapter "23.1.2 Charging the rechargeable battery pack").

NIVUS provides a particular 2-wire connection cable (NFM0 ZVER PS) with open cable ends on one side and a plug for the multifunction socket on the other side.

The NivuFlow Mobile power input accepts 12...14.5 V and is protected against overvoltage, overcurrent and reverse polarity.



Charge/Discharge battery sockets

*While **charging** only the battery plugged into the right socket is charged however.*

*When **discharging** the battery with the higher capacity (independent of the socket) is used until the capacity of both batteries has reached the same level. After that both batteries are discharged equally.*

23.1.4 Operation/Charging with direct connection to mains power

Thanks to the combined power adapter/battery charger (see Fig. 23-1) NivuFlow Mobile can be also operated directly with 100...240 V AC mains power.

WARNING

Danger of explosion during operation with direct mains power connection in Ex area



Do not operate the instrument within Ex areas using direct mains power connection but only out of Ex areas.

During operation the battery pack is charged in the right-hand slot additionally. NIVUS, however, recommend the use of the battery charger since the battery will be charged to approx. 75 % of the total capacity when inserted (see chapter "23.1.2 Charging the rechargeable battery pack").

WARNING

Risk of explosion charging the battery pack in Ex areas



Always remove/insert the rechargeable battery pack outside of Ex areas. Never replace the battery within an Ex area.

Plug the battery to charge into the right battery socket and connect the power adapter/battery charger (Fig. 23-1) to the multifunction socket of the NivuFlow Mobile. Leave the battery in the instrument to charge it during mains power operation. In case of power failure the battery is used as buffer.



Charge/Discharge battery sockets

*While **charging** only the battery plugged into the right socket is charged however.*

*When **discharging** the battery with the higher capacity (independent of the socket) is used until the capacity of both batteries has reached the same level. After that both batteries are discharged equally.*

24 Sensor Installation

This chapter describes the sensor types and where they are usually installed. You can find detailed installation instructions for the individual sensor types in the respective installation instruction.

CAUTION

Observe regulations on safety at work



Always ensure compliance with the safety regulations during installation works.

24.1 Sensor Installation Basics

Radar flow metering is carried out using **one** sensor which is transmitter and receiver of electromagnetic radiation at the same time. The sensor therefore needs to be installed according to the requirements of the (installation) instructions. Essentially, it is necessary to maintain the angle to the channel surface, to consider the hydraulic conditions on the measurement place as well as to install the sensor in a defined level position (depending on the channel

width and other factors such as the block distance; see information in chapter “21.2 Level Measurement”) and to align it respectively.

The correct sensor position is essential for the reliability of the readings. It is not possible to exactly determine the flow rate with the sensor position not accurately determined and the parameters not correctly set. Here, always observe proper hydraulic conditions and a sufficient calming section on the place of installation. Sensor types as well as their installation need to be determined individually depending on the measurement place.



Detailed information on how to select a calming section and the installation of sensors can be found in the according installation instruction.

The measurement place parameters are set after sensor installation. Appropriate preparation measures and the measurement place dimensions can be taken from the respective plant documents.



Information on how to set measurement place parameters can be found in chapter “Parameter Setting” starting at page 66.

24.2 Definition of Channel Shape

The radar and level sensors intended enable contactless measurement in all part filled channels/shapes where a sensor can be installed so as to have “free sight” onto the water surface. The liquid **will not** be influenced and the flow profile of the medium **will not** be affected by the installed sensor and the measurement of the surface velocity/filling level.

During sensor installation first the following parameters regarding the channel must be specified in the transmitter:

- Channel profile and dimensions
- Low-flow suppression active
- Damping
- Stability

24.3 Installation of the Level sensor

The connected level sensor will be recognised automatically by the transmitter and then is indicated in the parameter menu.

When using an external 2-wire level value or a fixed value it is necessary to set the analog input parameters accordingly.

24.4 Installation of the Radar sensor

The connected sensor will be recognised automatically by the transmitter and then is indicated in the parameter menu.

25 Connection of Sensors

25.1 Cable for Sensor connection

The connection cable between transmitter and radar flow velocity sensor is not connected but available separately. This cable is equipped with two connectors and shall be extended or shortened.

The cable of the level sensor is firmly connected to the sensor and hence needs to be ordered with the sensor specifying the length appropriately. Here, it is very important to define the measurement place as early as possible to eliminate erroneous orders.

25.2 Sensor connection

A list of connectable sensors can be found in chapter “16.2 Directly Connectable Sensors”.

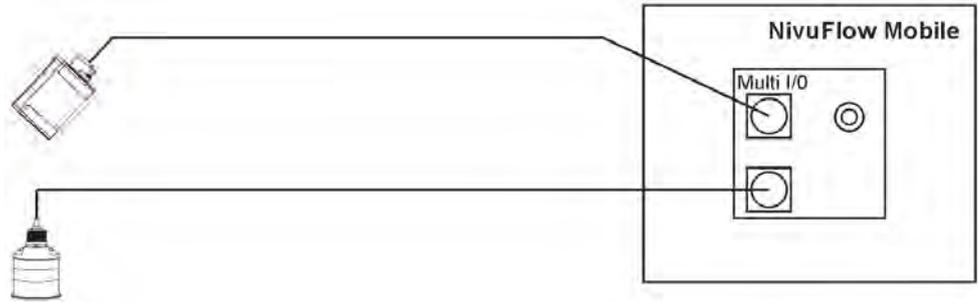


Fig. 25-1 Connection of Radar sensor and i-Series sensor

25.3 Overvoltage Protection Measures

To protect NivuFlow Mobile effectively if operated from external power supply it is necessary to protect the unit by using overvoltage protection equipment.

WARNING



Danger of explosion when operated with direct connection in Ex area

Operate the unit **only out of Ex areas** using direct mains connection (e.g. mains plug adapter) or direct external power supply (e.g. solar power). **Never do so within Ex areas.**

If used with **mains plug adapter**, NIVUS recommend the types EnerPro 220Tr / 20kA or EnerPro 220Tr / 5kA (Fig. 25-2) on the mains side.

For **direct external power supply** using 12 V DC (e.g. solar power) the type DataPro 2x1 12V/12V-11µH-Tr(N) for non-Ex (Fig. 25-3).

➡ See chapter “56 Accessories”.

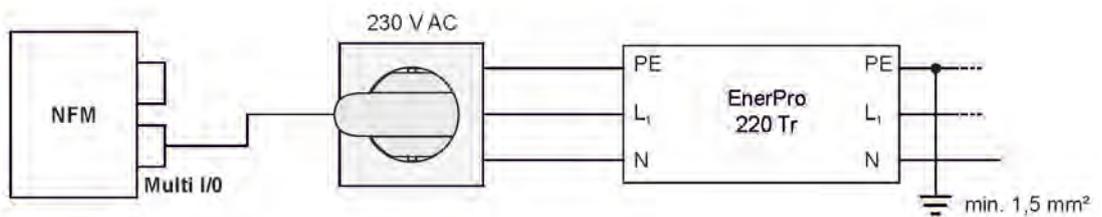


Fig. 25-2 General overvoltage protection for AC power supply

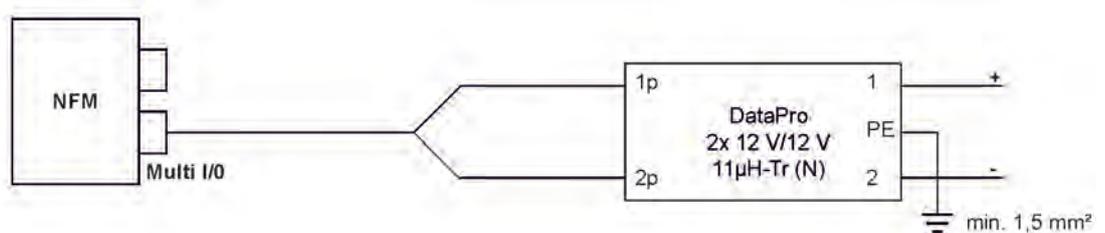


Fig. 25-3 General overvoltage protection for DC power supply

26 Single external Connection for Inputs/Outputs

If there is **one** additional sensor or actuator to be connected by using the inputs/outputs besides the sensors connected for flow velocity or level measurement, this can be done directly via the connection cables for the multifunction socket. Depending on the intended purpose there are different cable types available. All cables feature open cable ends on one side and a plug for the multifunction socket on the other side.

⇒ For article numbers see chapter “56 Accessories”.

⇒ For more than one external connection see chapter “27 Connecting the Connector Box for Inputs/Outputs”.

27 Connecting the Connector Box for Inputs/Outputs

A Connector box (Fig. 27-1 no. 6) is used as soon as the analog and digital inputs/outputs as well as an external power source are to be used.

The NivuFlow Mobile 550 (Fig. 27-1 no. 1) is intended **only** for operation with **one** radar flow velocity sensor.

⇒ For only one single external connection refer to chapter “26 Single external Connection for Inputs/Outputs”.



Connector box fastening options

The Connector Box can either be fastened directly on the NivuFlow Mobile by using the hoop guards (Fig. 27-1 no. 2) or can be put/fastened to any other place.



Fig. 27-1 NFM with Connector box

➡ How to fasten the Connector Box on the NivuFlow Mobile:

1. Remove the rubber buffers (not depicted) from the reverse side of the NivuFlow Mobile (Fig. 27-1 no. 1). Both fastening plates (now loose, Fig. 27-1 no. 3) within the screw channels (Fig. 27-1 no. 4) and the rubber buffers are already required for the next step.

2. Fasten the hoop guards (Fig. 27-1 no. 2) and the fastening plates (Fig. 27-1 no. 3) on the NivuFlow Mobile by using the rubber buffers.
3. Fasten the connector box (Fig. 27-1 no. 6) on the hoop guards by using the accompanying screws.
4. Connect the sensors to the connector box. See terminal wiring diagram (Fig. 27-2).
5. Plug the connection cable (Fig. 27-1 no. 5) from the connector box into the multifunction socket on the NivuFlow Mobile.

➡ For article numbers see chapter “56 Accessories”.

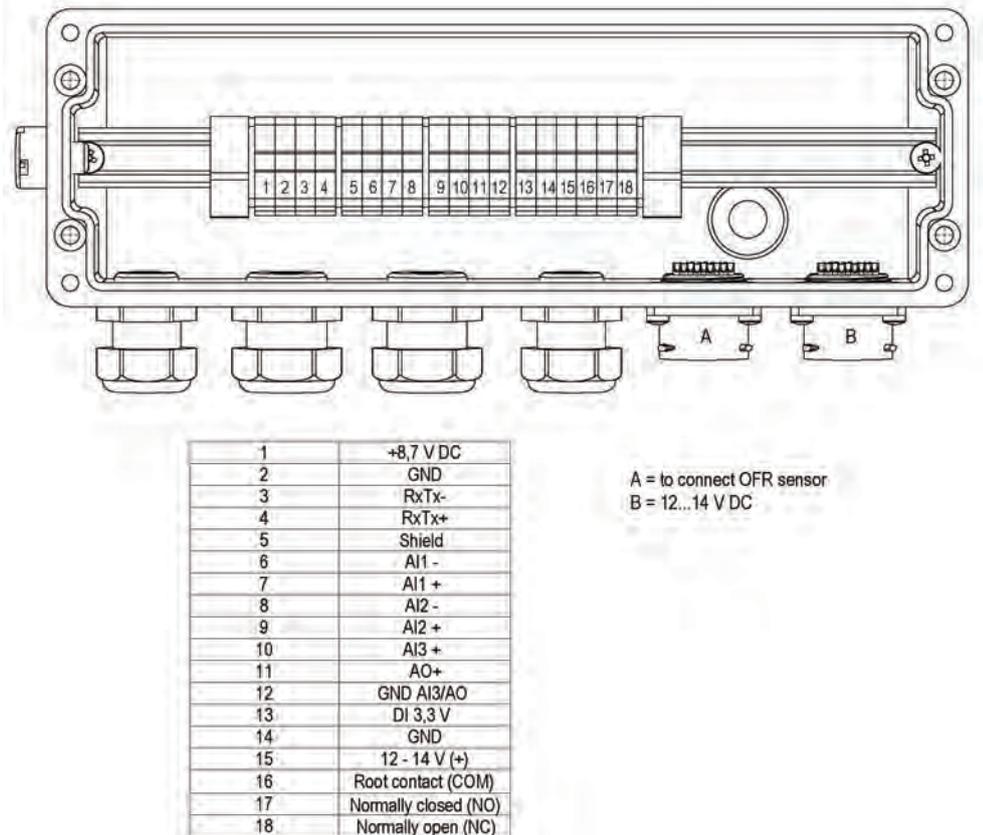


Fig. 27-2 Connector box terminal wiring

Connection B on the connector box is for external supply of the NFM transmitter (12...14 V DC) with the connector box plugged via the power adapter / battery charger (see chapter “23.1.2 Charging the rechargeable battery pack”) or the 2-wire connection cable (see chapter “23.1.3 Operation/Charging via an Alternative Power Supply”).

28 (T-Shape) Antenna for GPRS Data Remote Transmission

The accompanying T-shape antenna is required for data remote transmission via GPRS.



Connect only antennas approved to this transmitter

The aerial socket is designed intrinsically safe. Do only connect the accompanying antenna or the types NFM0 ANT_x with longer connecting cables to the NivuFlow Mobile.

➡ Installation and connection procedure:

1. Plug antenna cable into the socket on the unit (Fig. 28-1) and tighten the screw joint manually.

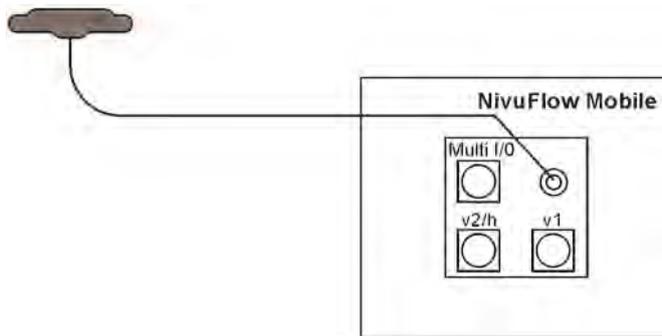


Fig. 28-1 Connection GPRS antenna

2. Install the antenna at the highest possible position of the manhole or on the dust pan.
Note:
The T-shape mobile communications antenna shall be installed in such a way that no persons are permanently (more than 6 minutes) present in a distance of less than 25 cm from the antenna.
As soon as the instrument operates correctly even shorter distances do normally not mean a danger to public health since the unit transmits only briefly on the mobile communications interface. As a precautionary measure this distance shall be complied with anyway.
3. If the unit is installed in a manhole close the manhole cover to verify that the data transmission works correctly even with the cover closed..
4. Set up a test connection using the communication parameter menu (see chapter "41 Parameters Menu Communication", >Modem state< / >Test connection<) to verify data transmission. If the connection is poor change the antenna position until the data transmission is sufficient.

Putting into Operation

29 Notes to Users

Before connecting and operating the NivuFlow Mobile follow the instructions below.

This instruction manual contains any information required for the setting of parameters and the operation of the instrument. The manual is intended for technically qualified personnel. Appropriate knowledge in the areas of measurement system, automation technology, control engineering, information technology and wastewater hydraulics are prerequisites to put the NivuFlow Mobile into operation.

Carefully read this instruction manual in order to guarantee proper function of the NivuFlow Mobile. Connect the NivuFlow Mobile according to chapter "25.2 Sensor connection".

In case of doubt regarding installation, connection or the setting of parameters contact our hotline:

- +49 (0) 7262 9191 955

General Principles

Do not put the system into operation before the installation has been completely finished and checked.

Follow the hints in the instruction manual to eliminate the risk of faulty or incorrect parameter settings. Get familiar with the transmitter operation before you begin to set the parameters.

After transmitter and sensors are connected (according to chapters "24 Sensor Installation" and "25 Connection of Sensors") the measurement place parameters can be set.

In most cases it is sufficient to set:

- shapes and dimensions of the measurement place
- sensors used and the according positions
- display units
- storage mode

The NivuFlow Mobile user surface is easy to understand. The basic settings can be easily adjusted by users themselves.

A startup wizard is available to facilitate the initial startup. The wizard will guide the user through the most important parameter settings in easy steps (see chapter "44 Parameter Menu Quick Start").

30 Indication System of Status LED on NivuFlow Mobile

The status LED (Fig. 30-1) on the front side of the NivuFlow Mobile follows a predetermined system which indicates the current status of the instrument.

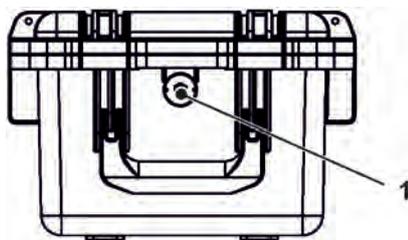


Fig. 30-1 LED on the NFM front

Once the NFM is in full working conditions without limitation the LED is lit **green**: 1x long, pause, 5x short.

The same intervals apply as soon as there is one error message pending at least. The LED then, however, is lit **red**.

Blue flashing in the pause between the first long flash and the five successive flashes indicates the number of users logged in: 1x for each user (max. number of possible users logged in is four).

➡ See also chapter “35 General Programming”.

The LED is lit in **white** while the system is booting e.g. after plugging in the rechargeable battery or after a firmware update.

➡ See also chapter “40.5.6 Update NivuFlow”.

31 Setting Up Connection

31.1 General

The NivuFlow Mobile is operated completely by using a standard smartphone/tablet or via notebook/PC. Use the preferred display and operation module according to the respective manufacturer specifications.

The following sections describe the connection setup procedures for Android, iOS and Windows.

31.2 Android Operating System

- ➡ Preparing the NivuFlow Mobile:
- ➡ Ensure power supply: a minimum of one completely charged rechargeable battery pack either plugged into the instrument or alternatively connected via the multifunction socket (see chapter “23.1.3 Operation/Charging via an Alternative Power Supply”).
The following step “Wake-Up” can be skipped as soon as the battery pack is inserted now or when voltage is fed and the connection is set up within the following five minutes.
- ➡ “Waking up” NivuFlow Mobile: hold the accompanying magnet (solenoid, Fig. 31-1 no. 2) to the reed contact (Fig. 31-1 no. 1; on front side of NFM) until the LED is lit.

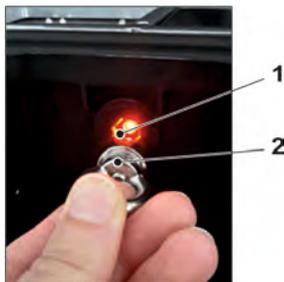


Fig. 31-1 Waking up the NivuFlow Mobile

- ➡ Steps on the display and operation module (smartphone, tablet, notebook, PC etc.):
 1. Start the display and operation module.
 2. Use the “Settings” symbol (Fig. 31-2 no. 1) to open the according menu.

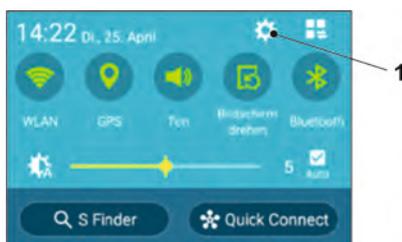


Fig. 31-2 Settings symbol

3. Select WLAN (Fig. 31-3 no. 1).

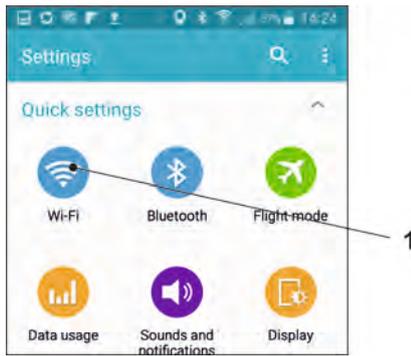


Fig. 31-3 WLAN symbol

4. From the list of available WLANs select the NFM (Fig. 31-4 no. 1) with the according SSID (default state = serial number).

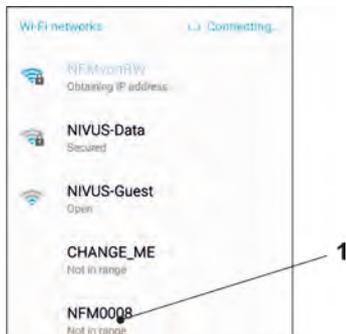


Fig. 31-4 WLAN list

5. Enter the password for server access (default state = PUK) (Fig. 31-5 no. 1) and connect (Fig. 31-5 no. 2).

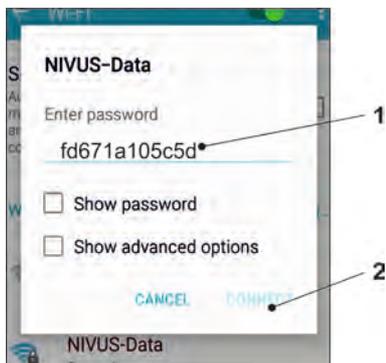


Fig. 31-5 Enter password (example here fd671a105c5d) and connect

6. Start the Internet browser.
7. Type "192.168.1.1" into the IP address field and open. The NivuFlow Mobile display (Fig. 31-6) is indicated as soon as the connection has been established successfully.

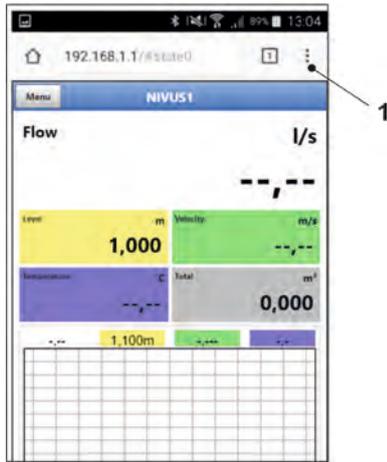


Fig. 31-6 NFM display in browser

8. To set a link on your “Home screen” (for direct access) use the “Tabs and Settings” symbol (Fig. 31-6 no. 1) and select “Add to Home screen” (Fig. 31-7 no. 1).

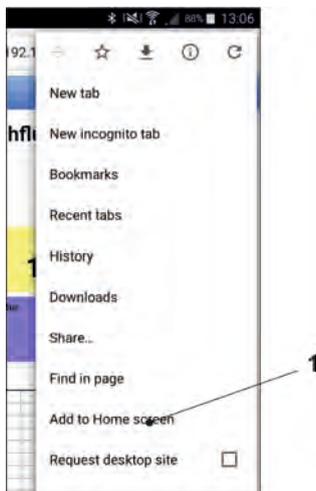


Fig. 31-7 Add to Home screen

9. Use “Add” to confirm (Fig. 31-8 no. 1).

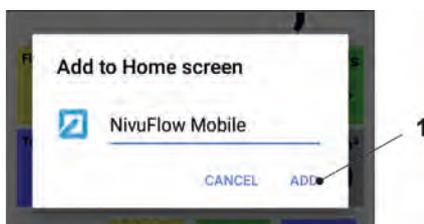


Fig. 31-8 Confirm adding

The link (Fig. 31-9 no. 1) is indicated on the tart screen and can be used for instant access without the need to specify the IP address.

This link can be used for each further NivuFlow Mobile transmitter after it has been selected from the WLAN list.



Fig. 31-9 Link in the start screen

31.3 iOS Operating System

➤ Preparing the NivuFlow Mobile:

1. Ensure power supply: a minimum of one completely charged rechargeable battery pack either plugged into the instrument or alternatively connected via the multifunction socket (see chapter “23.1.3 Operation/Charging via an Alternative Power Supply”).
The following step “Wake-Up” can be skipped as soon as the battery pack is inserted now or when voltage is fed and the connection is set up within the following five minutes.
2. “Waking up” NivuFlow Mobile: hold the accompanying magnet (solenoid, Fig. 31-10 no. 2) to the reed contact (Fig. 31-10 no. 1; on front side of NFM) until the LED is lit.

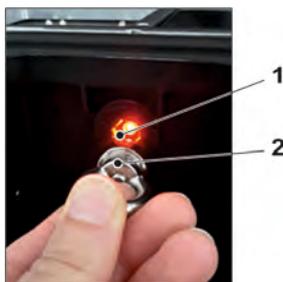


Fig. 31-10 Waking up the NivuFlow Mobile

➤ Steps on the display and operation module (smartphone, tablet, notebook, PC etc.):

1. Start the display and operation module.
2. Use the “Settings” symbol (Fig. 31-11 no. 1) to open the according menu.



Fig. 31-11 Settings symbol

3. Select WLAN (Fig. 31-12 no. 1).



Fig. 31-12 WLAN symbol

4. From the list of available WLANs select the NFM (Fig. 31-13 no. 1) with the according SSID (default state = serial no.).



Fig. 31-13 WLAN list

5. Enter the password for server access (default state = PUK) (Fig. 31-14 no. 2) and join (Fig. 31-14 no. 1).

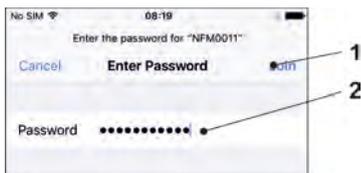


Fig. 31-14 Enter password and join

6. Start the Internet browser.
7. Type "192.168.1.1" into the IP address field and open.
The NivuFlow Mobile display (Fig. 31-15) is indicated as soon as the connection has been established successfully.

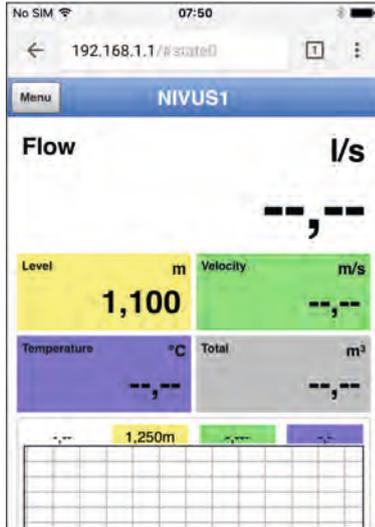


Fig. 31-15 NFM display in browser

8. Use the symbol "Provide" (Fig. 31-16 no. 1) to set up a link on your home screen (for direct access).

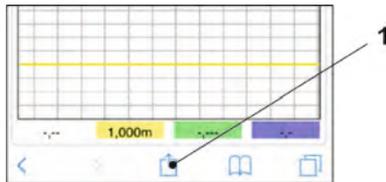


Fig. 31-16 Set up link

9. Select "To Home Screen" (Fig. 31-17 no. 1).

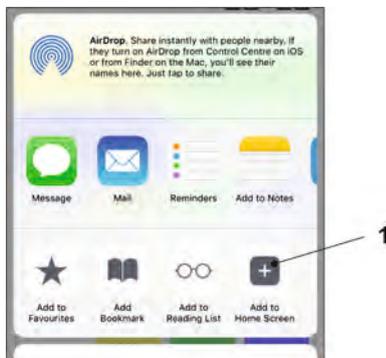


Fig. 31-17 To Home Screen

10. Confirm with "Return" (Fig. 31-18 no. 1).

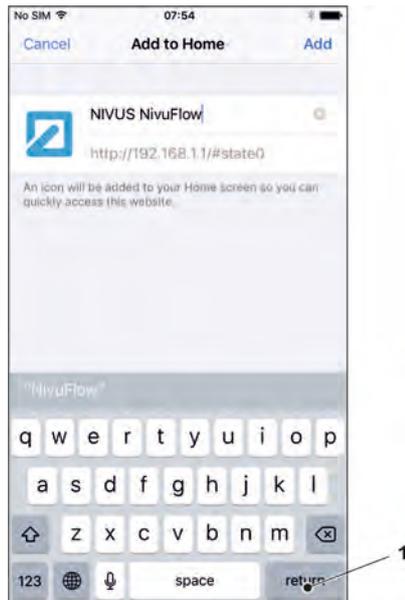


Fig. 31-18 Confirm adding

The link (Fig. 31-19 no. 1) is indicated on the tart screen and can be used for instant access without the need to specify the IP address.

This link can be used for each further NivuFlow Mobile transmitter after it has been selected from the WLAN list.

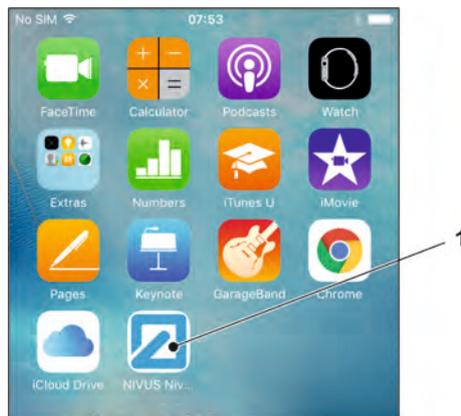


Fig. 31-19 Link in the start screen

31.4 Windows Operating System

➡ Preparing the NivuFlow Mobile:

1. Ensure power supply: a minimum of one completely charged rechargeable battery pack either plugged into the instrument or alternatively connected via the multifunction socket (see chapter “23.1.3 Operation/Charging via an Alternative Power Supply”).
The following step “Wake-Up” can be skipped as soon as the battery pack is inserted now or when voltage is fed and the connection is set up within the following five minutes.
2. “Waking up” NivuFlow Mobile: hold the accompanying magnet (solenoid, Fig. 31-20 no. 2) to the reed contact (Fig. 31-20 1; front side of NFM) until the LED is lit.

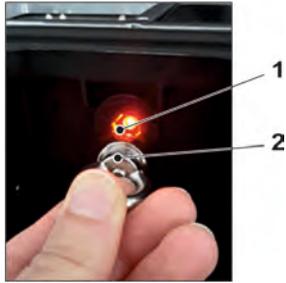


Fig. 31-20 Waking up the NivuFlow Mobile

➡ Steps on the display and operation module (smartphone, tablet, notebook, PC etc.):

1. Start the display and operation module.
2. Go to the list of available (WLAN) networks (Fig. 31-21 no. 2).
3. From the list select the NFM (Fig. 31-21 no. 1) with the according SSID (default state = serial no.).



Fig. 31-21 List of (WLAN) networks (example)

4. Enter the security key (password) (default state = PUK; example here fd671a105c5d) (Fig. 31-22 no. 1) and connect.

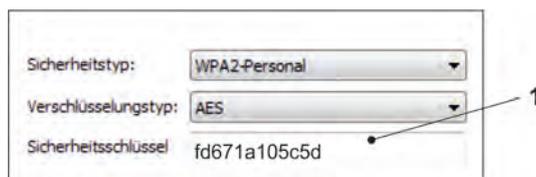


Fig. 31-22 Enter security key and connect

5. Start the Internet browser.

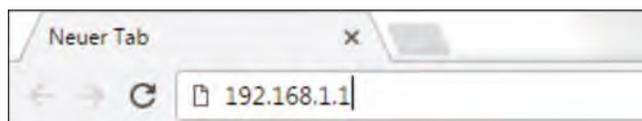


Fig. 31-23 Address field

6. Type "192.168.1.1" into the IP address field (Fig. 31-23) and open. The NivuFlow Mobile display (Fig. 31-24) is indicated as soon as the connection has been established successfully.

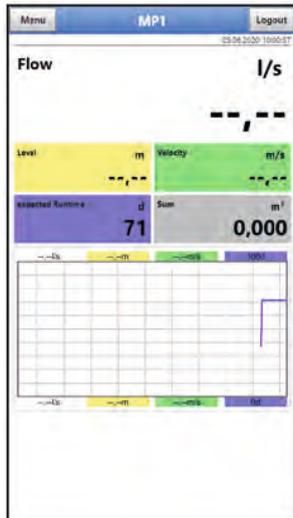


Fig. 31-24 NFM display in browser

7. To create a browser favourite (for direct access) click the “Favourites” star (Fig. 31-25 no. 1, example here Google Chrome) and confirm with “Finished” (Fig. 31-25 no. 2).

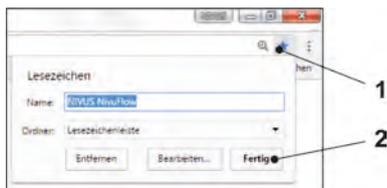


Fig. 31-25 Set up favourites

The bookmark is shown in the bookmarks list (Fig. 31-26 no. 1) and can be used for instant access without the need to specify the IP address.

This link can be used for each further NivuFlow Mobile transmitter after it has been selected from the WLAN list.


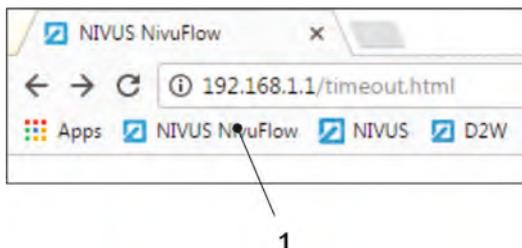


Fig. 31-26 Link in the bookmarks bar

32 Menu Operation/Overview

32.1 Display Overview

The NIVUS display at any time provides an overview on where you currently are within the menu structure and which entries you are about to modify.

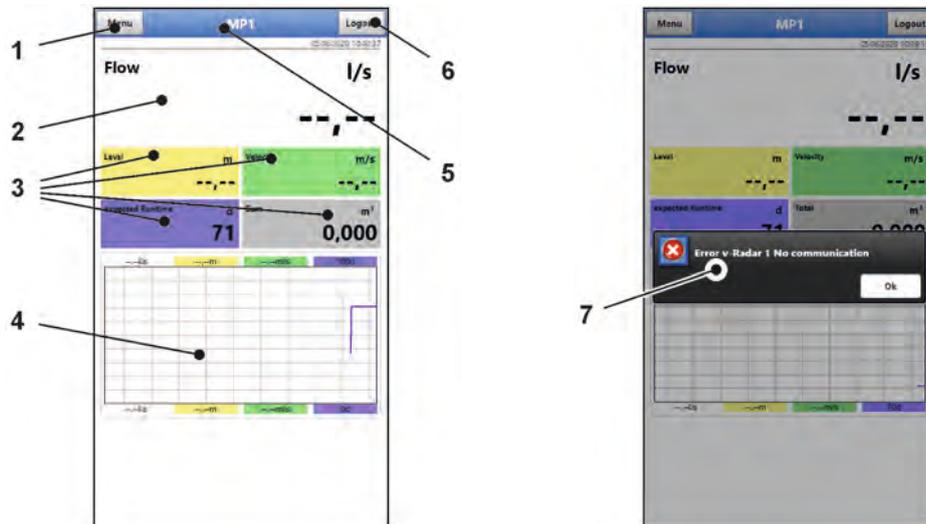

- 1 Menu / Back (depending on display view)
- 2 Display area 1 (output field 1 for flow metering)
- 3 Display area 2 (output field 2...5 for level, average velocity, predicted runtime and totaliser)
- 4 Display area 3 (trend graph on level, velocity, predicted runtime and rate)
- 5 Name of measurement place
- 6 Logout (disconnection of display and operating module from transmitter; transmitter continues operation using the latest saved settings)
- 7 Possible error message, information or indication of active service mode (shown only once as separate window in the centre of the screen right after opening; close with "Ok")

Fig. 32-1 Display

32.2 Saving Parameters

After modifying parameters and navigating back using the menu field save the modified parameters to make the changes effective. Once saved the status message “Successful” is shown.

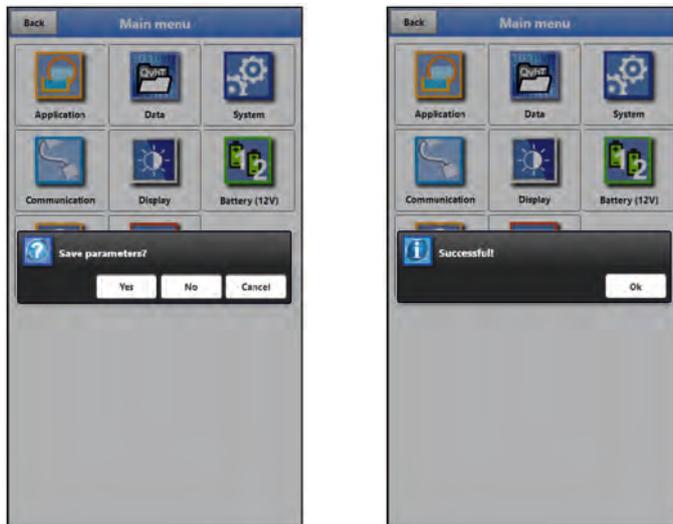


Fig. 32-2 “Save Parameters?” and “Successful”

⇒ For saving procedures see chapter “35.1 Save Parameters”.

32.3 Menus

All menus are described in chapter “Parameter Setting” as logical programming sequence starting at page 66.

The main menu contains eight basic menus which can be viewed and selected either by choosing the “Menu” field (from the main screen) or “Back” (from within the submenus).

The menus are:

Application	Guides the commissioning personnel through the entire setting of parameters for the dimensions of measurement places, selection of sensors, analog/digital inputs and outputs and diagnostic
Data	<ul style="list-style-type: none"> - Graphic representation of historic data on flow rate, level and (average) flow velocity - Indication of 24-hour day totals as tables - Saving of data - Saving and loading of parameters
System	<ul style="list-style-type: none"> - Basic information (serial no., version, article no. etc.) on the transmitter (required by NIVUS GmbH in case of requests) - Language and date format settings under >Country Settings< - System time and time zone settings under >Time/Date< - Error messages under >Error Messages< - Service levels - Configuration of storage cycle - Parameter Reset - Feature unlock - Instrument shutdown (powerdown) - Information on batteries and the current capacity
Communication	Parameters for the configuration of NivuFlow Mobile communication interfaces
Display	Output fields settings (text, decimal places etc.)
Battery (12V)	To choose type and number of the batteries/rechargeable used
Quick Start	Guided, quick parameter settings for simple measurement places
Alert	Activation of alarms in case of sensor errors and setting of high or low limit values/thresholds used to trigger alarms via e-mail using the NIVUS WebPortal.

Table 6 Menu overview

Commissioning Example

33 Contactless Measurement in a rectangular Channel

33.1 General

A contactless measurement using radar can be installed and parametrised with relatively little effort once the basic conditions are clarified and ensured.

Requirements to the measurement place:

- Free discharge available; calibration may be required if free discharge cannot be ensured; the NIVUS customer service provides support on request
- Channel parameter known; see chapter “24.2 Definition of Channel Shape”
- Surface waviness guaranteed; see chapter “20 Operating Ranges”
- Mounting conditions fulfilled; see chapter “22.1 Installation Place”

Preparations

- Verify channel parameters (measure if necessary)
- Prepare/pre-assemble sensor holder
- Select appropriate place for the transmitter
- Select appropriate position for the required antenna



Also observe the preparation measures of the measuring section described in the “Technical Description and Mounting Instructions for OFR Radar Sensors”.

After the sensors have been mounted, cables have been laid and connected, commissioning has been executed and the parameters have been set the transmitter detects the surface velocity, computes the average flow velocity and determines the flow rate at the measurement place by including the available information on the channel geometry.

33.2 Easy Parameterisation Process in a specific Example

To set the parameters it is necessary to enter all specific data of the measurement place. Before doing so get familiar with chapter “35 General Programming” starting on page 66. How to set the measurement place parameters is described in chapter “38.1 Menu Measure Place” starting on page 78.

Application conditions:

- Rectangular channel (WWTP intake channel):
 - width: 1,2 m
 - height: 1 m
- h-Sensors: type i-Sensor
 - Mounting height: 2 m
- v-Sensor: type H00
 - Mounting height: 2 m

➡ Procedure:

1. Open >Application< menu.
2. Open >Measure place< menu.
3. Specify the measurement place name and accept.
4. Select the "Rectangle" channel profile.
The rectangle profile is shown in the graphics section.

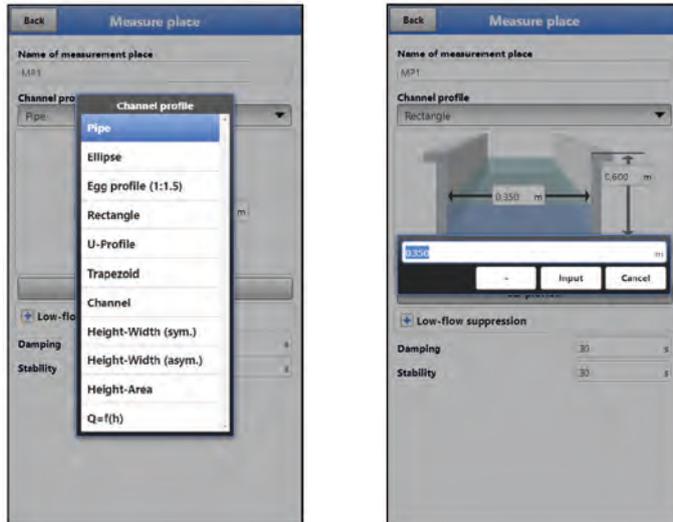


Fig. 33-1 Selecting the channel profile / specifying dimensions

5. Specify the channel dimensions (1,2 m / 1 m) in the graphics section.
More specifications are not required – the following parameters (dry weather flume, low flow suppression, damping and stability) remain to be on default setting.

➡ To adjust the **h-Sensors settings** exit the >Measure place< menu.

6. Go to >Application< menu.
7. Open >h-Sensors< menu.
8. Select sensor (i-Sensor) and enter mounting height (2 m).
More specifications are not required.



Fig. 33-2 Selecting the h-Sensors / specifying the mounting height

- ➡ To adjust the **v-Sensors settings** exit the >h-Sensors< menu.
9. Open the >v-Sensors< menu.
 10. Select the sensor type (H00) used if „Automatic Detection“ is not active.
 11. Specify the mounting height (2 m).
More specifications are not required – the following parameters (distance to centre, mounting direction, h-Maximum, v-Minimum, v-Maximum and v-Determination low levels) remain to be on default setting.

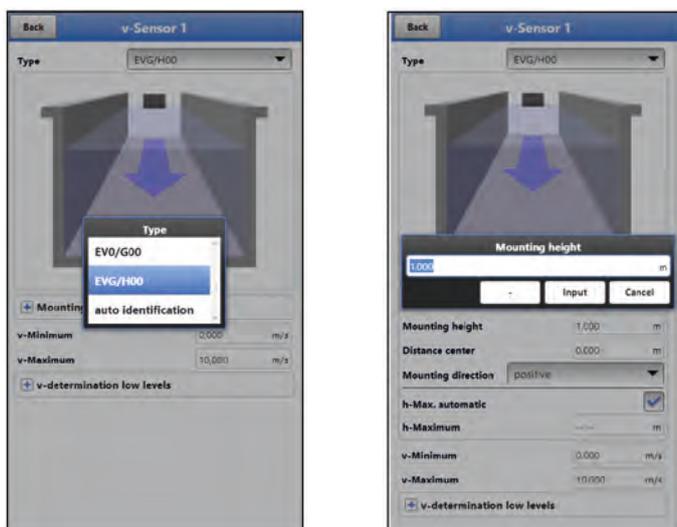


Fig. 33-3 Selecting the v-Sensors / specifying the mounting position

- ➡ After all required parameters for the measurement place specified **save the parameters**:
12. Exit the menu using "Back" until the screen prompts >Save Parameters?<.
 13. Confirm with >YES<.
The transmitter confirms the saving process with "Successful!".
 14. Click "Ok".
The transmitter switches over to the main screen and operates using the newly specified parameters.

Main Display

34 Functions of the Main display

Quick access

You can directly access the main setup parameters by using the Main Display.

Main Display


The following information can be found in the top display area:

- Menu- and Logout-Icon
- Name of measurement place
- Date and time

When in operation mode, the NivuFlow Mobile 550 indicates the following important readings in the **main display sector**:

- Flow
- Level
- Velocity
- Predicted runtime
- Sum

A diagram in the bottom area of the display provides information on flow, level, velocity, predicted runtime and sum.

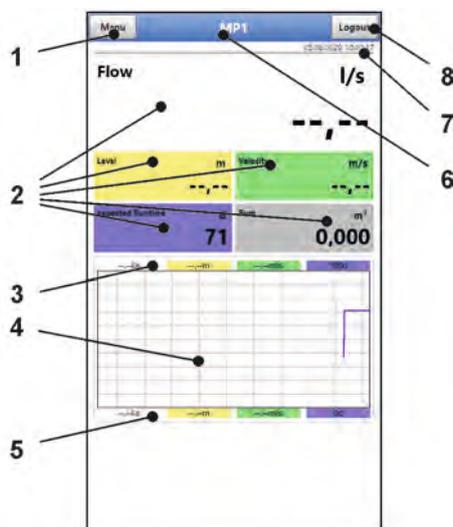

- 1 Icon to open the main menu
- 2 Output fields: values of flow, level, velocity, predicted runtime and sum
- 3 Upper scaling area for diagram
- 4 Diagram indicating flow, level, velocity, predicted runtime and sum
- 5 Lower scaling area for diagram
- 6 Name of measurement place
- 7 Date and time
- 8 Icon to log out the display and operation module

Fig. 34-1 Main display overview

Use the fields in the main screen to directly open a pop-up menu showing the most relevant settings and information with one mouse click (left key). One more mouse click in the selection will open up the according pages providing options to set parameters or to view current conditions.

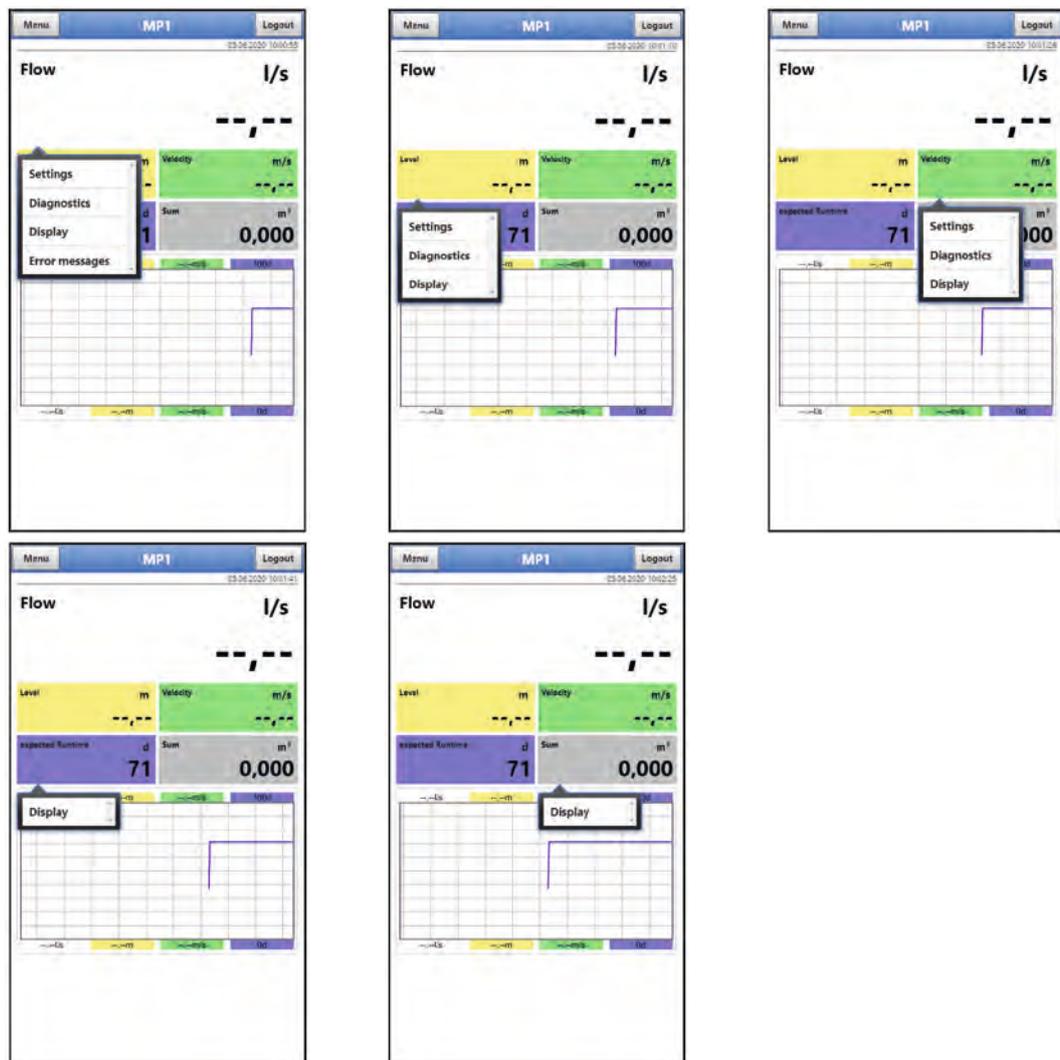


Fig. 34-2 Pop-up menu



Save Parameters

After modifying system-specific parameters the modifications need to be saved in order to come into effect.

Clicking the individual points in the pop-up menu will open the pages below:

- Output field **Flow**
 - Settings: >Application< / >Measure place<; see chapter “38.1 Menu Measure Place”
 - Diagnostics: >Application< / >Diagnostics<; see chapter “46 Diagnostics Menu Principles”
 - Display: >Display<; see chapter “42 Parameter Menu Display”
 - Error messages: >System< / >Error messages< / >Active error messages<; see chapter “40.4 Menu Error messages”

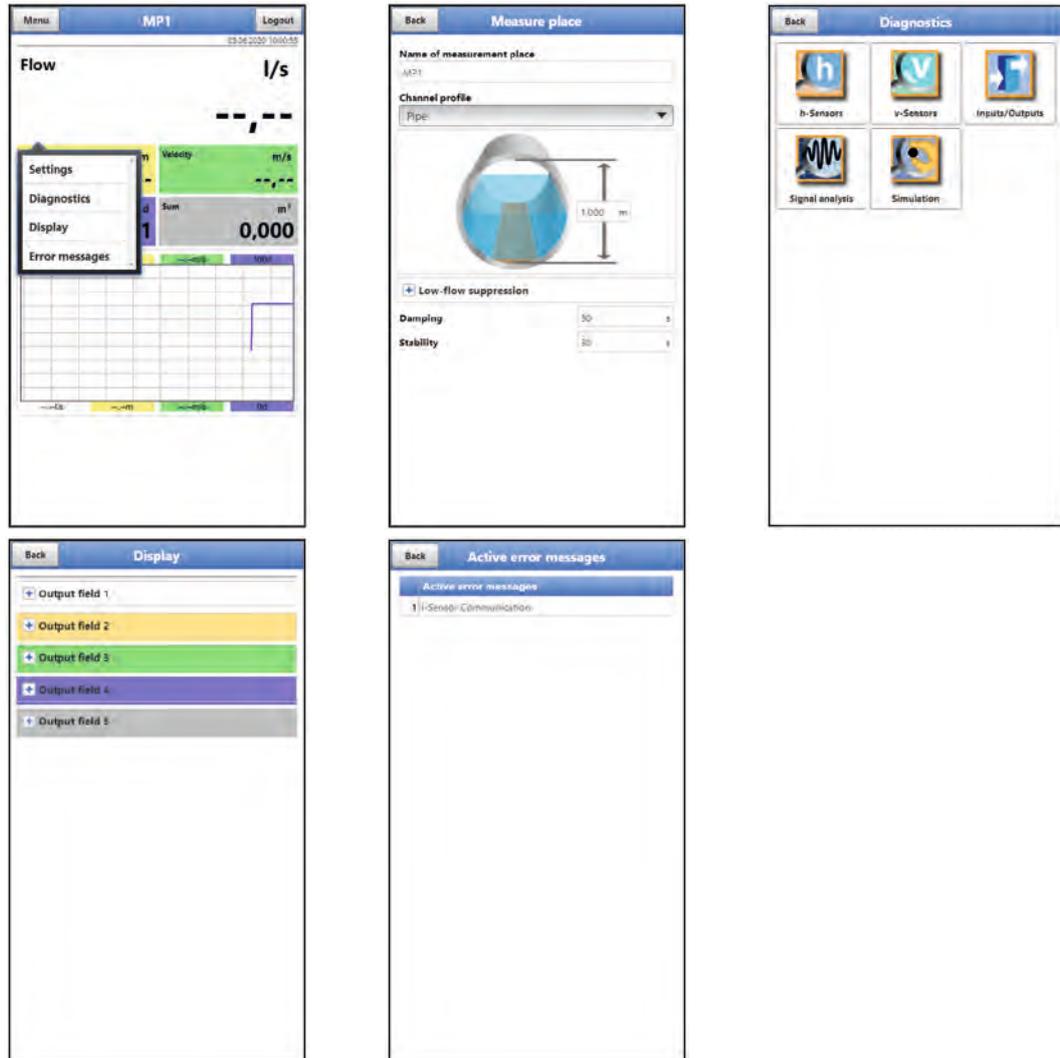


Fig. 34-3 Open output fields for flow

- Output field **Level**
 - Settings: >Application< / >h-Sensors<; see chapter “38.2 Menu h-Sensors”
 - Diagnostics: >Application< / >Diagnostics< / >h-Sensors<; see chapter “47 Menu Diagnostics h-Sensors”
 - Display: >Display<; see chapter “42 Parameter Menu Display”

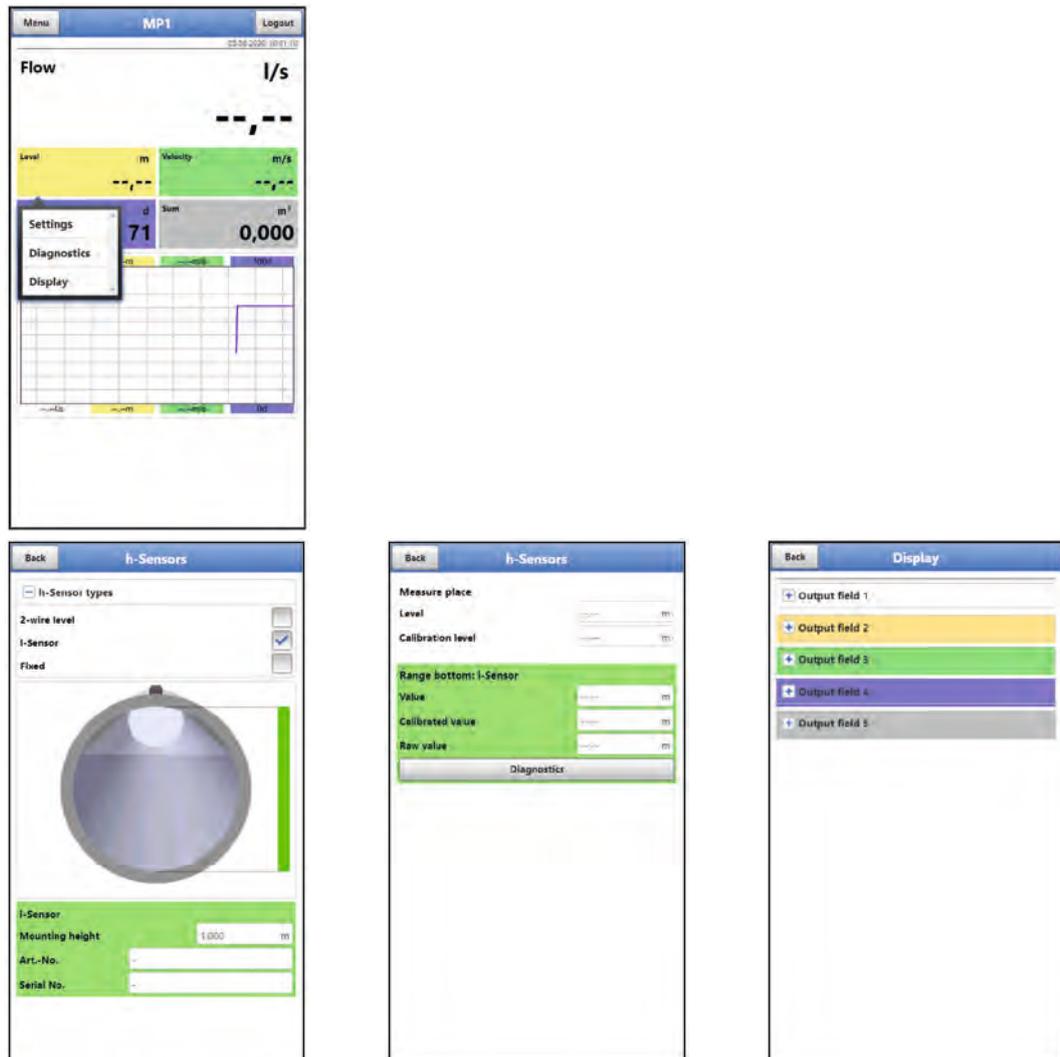


Fig. 34-4 Open output fields for level

- Output field **Velocity**
 - Settings: >Application< / >v-Sensors<; see chapter “38.3 Menu v-Sensor 1”
 - Diagnostics: >Application< / >Diagnostics< / >v-Sensors<; see chapter “48 Menu Diagnostics v-Sensor”
 - Display: >Display<; see chapter “42 Parameter Menu Display”

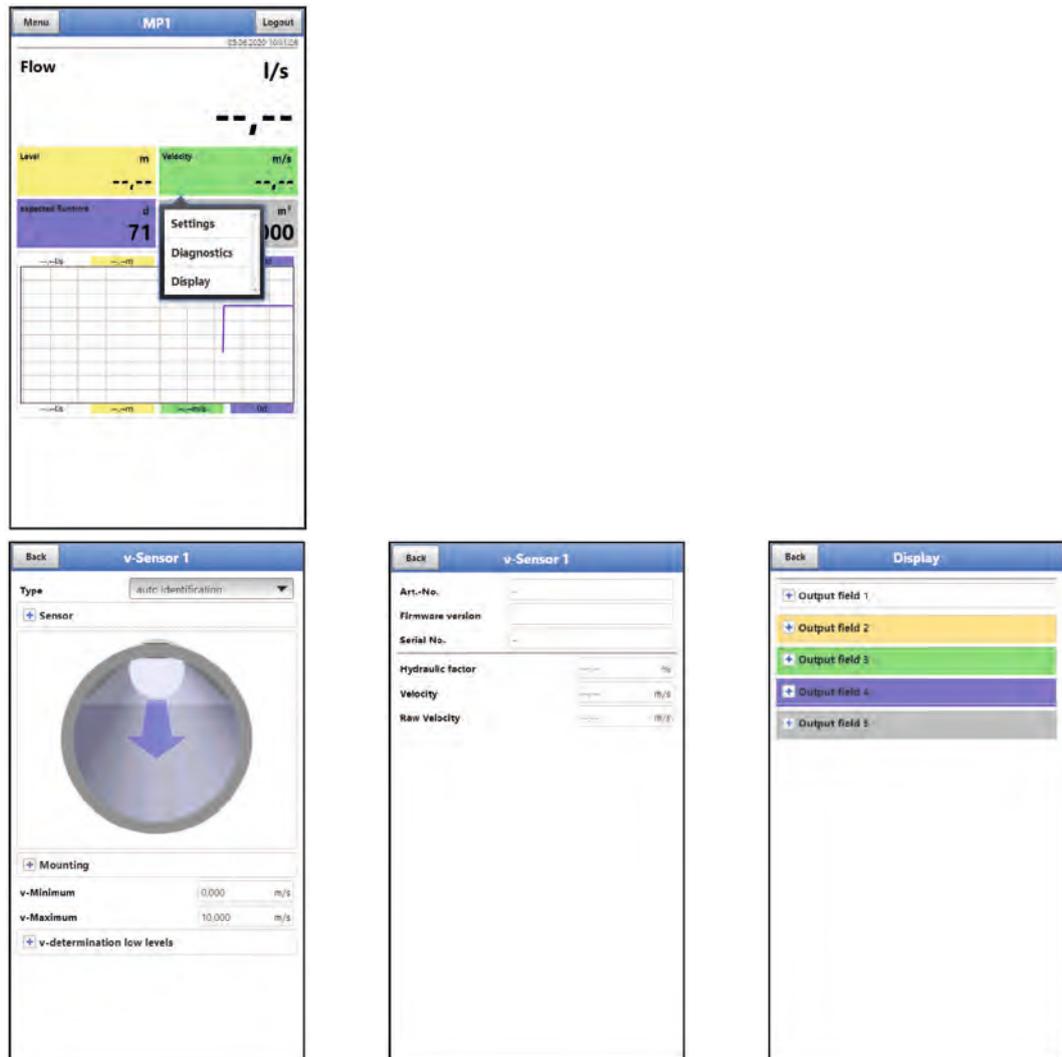


Fig. 34-5 Open output field für velocity

- Output field **Predicted runtime**
 - Display: >Display<;
see chapter “42 Parameter Menu Display”

The **>Predicted runtime<** function indicates how many days the transmitter is (yet) supposed to be ready for operation using the currently selected settings.

This value is a forecast which depends on several factors such as:

- Quality of measurement place and measurement place parameters
- Selected storage mode
- Selected device communication settings
- Quality of wireless connection (when using GPRS)
- Number of inputs/outputs used
- Number of battery packs used
- Ambient conditions influencing the rechargeable battery packs (temperature) as well as the age of the rechargeable battery packs (wear)

Info: Despite setting the parameters carefully operators have no control over all of these factors.

This function does not guarantee absolute accuracy. It is conceived to improve operator interaction and to make battery replacement more efficient if required. The indicated forecast

values may therefore vary significantly and should be verified by operators by considering the battery performance display.

➡ See chapter “43 Parameter Menu Battery (12V)”.

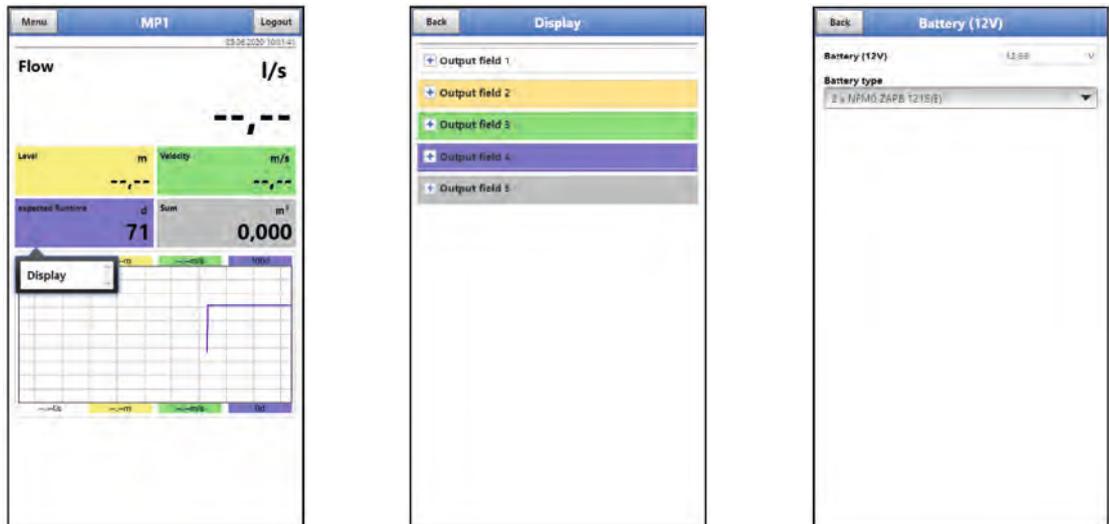


Fig. 34-6 Open fields for predicted runtime

- Output field **Sum**
 - Display: >Display<; see chapter “42 Parameter Menu Display”

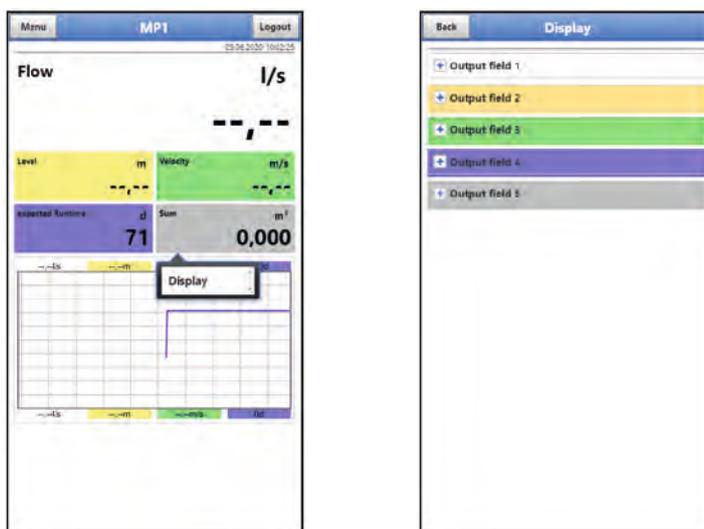


Fig. 34-7 Open output field for sum

Parameter Setting

35 General Programming

As a principle, modified parameters do not become effective before they have been saved. The instrument verifies whether parameters have been changed when you exit menus by using "Back". Finally, you will be prompted to eventually save modified parameters.

- >Yes<: modified parameters are accepted and saved.
- >No<: parameter modifications are rejected and the instrument will exit the menus.
- >Abort<: you will exit the prompt. Parameters remain to be modified, however will not become effective and will not be saved.



Tip to repeatedly measure the same measurement places

If certain measurement places are to be measured not only once, but again and again it is recommended to save the according parameter settings and readings (if required) on USB stick. This eliminates the need to readjust parameters for the next measurement at the respective measurement place by simply reloading the required data from the stick to the transmitter.

For more details see chapter "39.3 Menu Data memory" starting at page 97.

35.1 Save Parameters

Once all necessary (measurement place) parameters are specified, the data must be saved in order to become effective.

➡ Procedure:

1. Go "Back" three times: a window opens asking >Save Parameters?<. Confirm with >Yes< ^{*1}.
The message "Successful!" indicates that the parameters have been saved.

^{*1} >Yes< saves the new parameters; >No< will abort the saving process leaving the last modified parameters active again; >Abort< will abort the saving process, the last modified parameters remain active and the initialisation process can be continued.



Multiple users can have a simultaneous access

Up to four users may have access to data logger and parameters simultaneously via WLAN. Simultaneous access is indicated by the status LED.

Necessarily observe to agree parameter changes in order to avoid several users accessing the parameters at the same time. Always the latest saving process applies.

35.2 Change WLAN Password

The WLAN password is set to an individually determined ID **per default**. This ID can be found on a label on the top of the instrument (inside of the enclosure).

The default password can be changed as described below. The new password must have between 8 and 32 characters.

➡ Procedure:

1. Open the main menu with "Menu".
2. Open >Communication<.

3. Open the >WLAN< menu.
4. Select >Password<.
5. Enter the new password and confirm.

Up to four users may have access to data logger and parameters simultaneously via WLAN. Simultaneous access is indicated by the status LED.

Necessarily observe to agree parameter changes in order to avoid several users accessing the parameters at the same time. Always the latest saving process applies.



Store password in a safe place

Never give the password to unauthorised persons.

If you need to note down the password always keep it in a safe place.

35.3 Change Instrument SSID

The SSID is set to the serial number of the instrument **per default**. The serial number can be found on the nameplate on the side of the enclosure.

The default SSID can be changed as described below. A new SSID must have between 8 and 32 characters.

🔄 Procedure:

1. Open main menu via “Menu”.
2. Open >Communication< menu.
3. Open >WLAN< menu.
4. Select >SSID< field.
5. Enter new name and confirm.

35.4 Lost Password

Each NivuFlow Mobile is shipped with an individual PUK (“Personal Unblocking Key” or Super-PIN) which permits to create a new password and to reactivate the instrument.

The PUK is identical to the default WLAN password and can be found on a label attached on the data logger top (inside of enclosure).

🔄 Procedure:

1. Open cover.
2. Loosen hexagon socket screws of battery compartment cover and remove the cover.
3. Remove the rechargeable batteries.
4. Hold the magnet to the reed contact and plug a battery simultaneously. The magnet must be held to the reed contact for at least 15 seconds until the LED flashes red several times. The NivuFlow Mobile is “woken up”.
5. The WLAN list indicates the NFM with the default SSID (identical to the serial no. of the according instrument as specified on the nameplate).
6. Enter the default PUK as password.
7. Enter new password and, if required, SSID according to chapters “35.2 Change WLAN Password” and “35.3 Change Instrument SSID”.
8. To accept the new password/SSID reinitialise the instrument by removing and reinserting the rechargeable batteries.

9. Activate the NFM within the next five minutes. Otherwise the modified password will not be accepted, the instrument will continue to use the default ID and will only respond to the default password.
10. Insert second battery if required.
11. Refit the battery compartment cover using the hexagon socket screws and close the cover.

35.5 Automatic Data Transmission to USB Stick

In standard situations data stored in the NivuFlow Mobile are transmitted to the display and operation module via WLAN.

➞ See chapter “39.3 Menu Data memory”.

If, in exceptional cases, this should not be possible e.g. due to the lack of WLAN, display and operation module malfunction or empty batteries, it is possible to read out the data memory automatically by using a plugged USB stick.



Using the USB interface is allowed only outside of Ex areas.

➞ Procedure:

1. Open enclosure.
2. Plug USB stick.
3. “Wake up” the NivuFlow Mobile with the magnet (solenoid).
The transmitter automatically transmits the entire content of the measurement data memory to the plugged USB stick as soon as no WLAN connection is available within 5 minutes. The status LED on the transmitter flashes green during transmission.
4. Data transmission is finished once the status LED has stopped flashing. The USB stick can then be removed.

36 Parameter Setting using Quick Start

This menu allows easy setting of parameters for elementary measurement places with the aid of default settings for various parameters.

➞ The >Quick Start< menu is described in greater detail in chapters “37.2.7 Menu - Quick Start” and “44 Parameter Menu Quick Start”.

➞ Procedure:

1. Open main menu.
2. Select >Quick Start< menu.
The query >Create new Measurement Place?< appears.



Fig. 36-1 Quick Start with query

3. Choosing >No< opens the >Region Settings< page of the >Quick Start< menu. Choosing >Yes< will ask >Are you sure? Old parameters and archive data will be lost!<. Confirming with >Yes< here causes the transmitter to erase the old parameters and archived data and to scan the measurement setup for available sensors.
>No< erases nothing.



Fig. 36-2 Confirmation prompt “Erasing Parameters and Data”

4. On page >Region Settings< set the language, the date format, the required units, the system time and storage mode (operating mode and storage cycle).



Fig. 36-3 >Country Settings< menu

5. Use the arrow keys to go to the next page >Measure Place<.
6. Set the measurement place parameters: specify name and channel profile including dimensions (if required, a dry weather flume too).

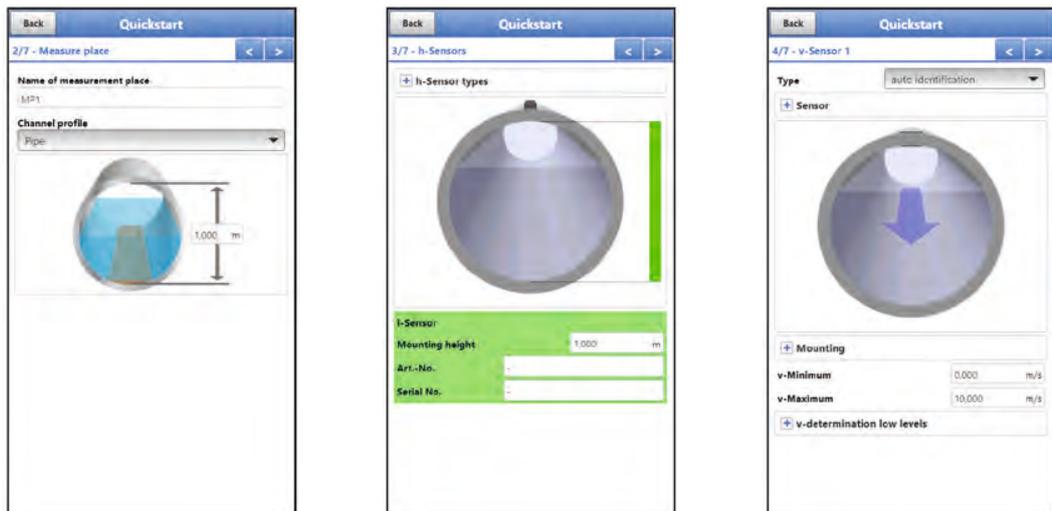


Fig. 36-4 >Measure place< / >Region settings< / >v-Sensor 1<

7. Use the arrow keys to go to the next page >h-Sensors<. The sensors as well as the according data scanned and detected while creating the new measurement place are entered directly. If not, the connected sensor (or the fixed value) must be selected and the respective complementing parameters need to be specified.
8. Use the arrow keys to go to the next page >v-Sensor<. The sensors as well as the according data scanned and detected while creating the new measurement place are entered directly. If not, the connected sensor must be selected and the respective complementing parameters need to be specified.

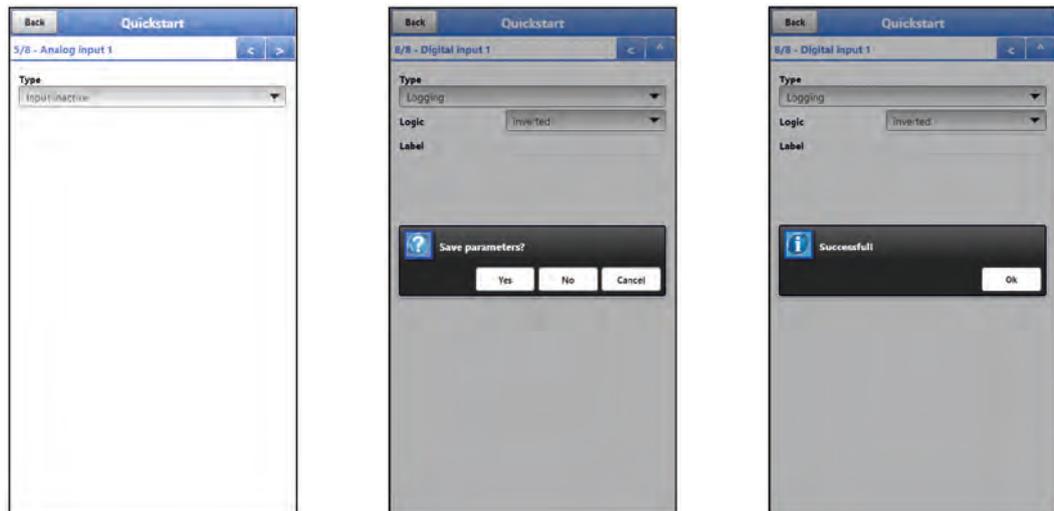


Fig. 36-5 >Analog Input 1< / >Save parameters?< / >Successful<

9. Use the arrow keys to go to the next pages >Analog Input x< and >Digital Input 1<, select the according option and specify the respective complementing parameters.
 The page >Analog Input 1< is available only if a fixed value is defined for the level measurement (resulting in eight instead of seven pages in quick start).
 Options for >Analog Input 1<: "Input inactive", "External Reading" or "i-Sensor (HART)".
 Options for >Analog input 2/3<: "Input inactive" or "External Reading".
 Options for >Digital input 1<: "Input inactive", "Runtime", "Impulse counter" or "Logging".
10. Use "Back" to return to the main menu: you will be prompted to save parameters.
 >Yes< saves the parameters, prompts "Successful" and takes the transmitter back to the main menu.
 >No< will save nothing and closes the parameter settings via quick start (jumps back to main menu).
 With >Abort< the current page remains to be opened and the parameter settings can be continued on this page or the previous ones.

37 Parameter Functions

37.1 Main Menu

The NivuFlow Mobile 550 parameters can be set using a total of eight menus which are described in greater detail starting with chapter “38 Parameters Menu Application”.

The main menu indicates eight icons containing the functions described in the following chapters:



Fig. 37-1 Overview Main Menu

37.2 Functions of the first Menu Level

37.2.1 Menu - Application



Fig. 37-2 Menu Application

This menu is the most comprehensive and most relevant concerning the NivuFlow Mobile parameter settings. The application menu contains five submenus.

Here, channel shape and dimensions of the measurement place are set. The used level and flow velocity sensors are specified and the settings for their mounting positions are adjusted.

Moreover the required analog and digital inputs and outputs can be defined here:

- Functions
- Measurement ranges
- Measurement spans
- Limit values

This menu includes diagnostic options for:

- Sensors
- Inputs and outputs
- Total system
- Signal analysis
- Simulation

Use this menu to enter or change:

- Low flow suppression
- Damping and signal evaluation and signal output
- Stability of signal evaluation and signal output

37.2.2 Menu - Data



Fig. 37-3 Menu Data

The data menu contains all internal stored measurement values.

Following functions are available:

- Graphic representation of measurement values
- List of the 100 latest 24h day totals
- Communication and transmitting option of internal data
- Transfer of adjusted parameters to and from USB stick
- Options to set and to erase the internal data memory

37.2.3 Menu - System



Fig. 37-4 Menu System

This menu contains information on the transmitter:

- Firmware version
- Article number
- Serial number
- Information on battery voltage and credits/licenses

The following settings can be adjusted additionally:

- Language
- Units
- Date and time correction
- Read active error messages
- Erase error memory
- Configure storage cycle
- Instrument shutdown (Powerdown)
- Parameter reset
- Unlock licensed functions
- Update firmware

37.2.4 Menu - Communication



Fig. 37-5 Menu Communication

This menu includes settings required for communication with other systems:

- WLAN
- GPRS

37.2.5 Menu - Display

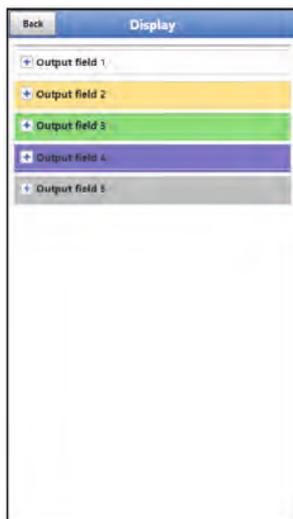


Fig. 37-6 Menu - Display

This menu defines the five display fields of the main screen.

37.2.6 Menu – Battery (12V)



Fig. 37-7 Menu Battery (12V)

This menu is used to choose type and number of the batteries used.



Correct Capacity Indication

The capacity indication in the >System< / >Information< menu works reliably only as long as completely charged batteries are used and the type and number of the batteries used are specified here.

37.2.7 Menu - Quick Start



Fig. 37-8 Menu - Quick Start

This menu allows easy setting of parameters for elementary measurement places with the aid of default settings for various parameters.

Depending on the number of connected v-sensors/paths and the use of the analog and digital inputs there are up to eight pages in the >Quick Start< menu:

- Page 1 >Region Settings<
- Page 2 >Measure Place<
- Page 3 >h-Sensors<

- Page 4 >v-Sensor 1<
- Page 5 >Analog Input 1< (available only if “Fixed Value” for h-sensors is selected)
- Page 5 resp. 6 >Analog Input 2<
- Page 6 resp. 7 >Analog Input 3<
- Page 7 resp. 8 >Digital Input 1<

37.2.8 Menu - Alert

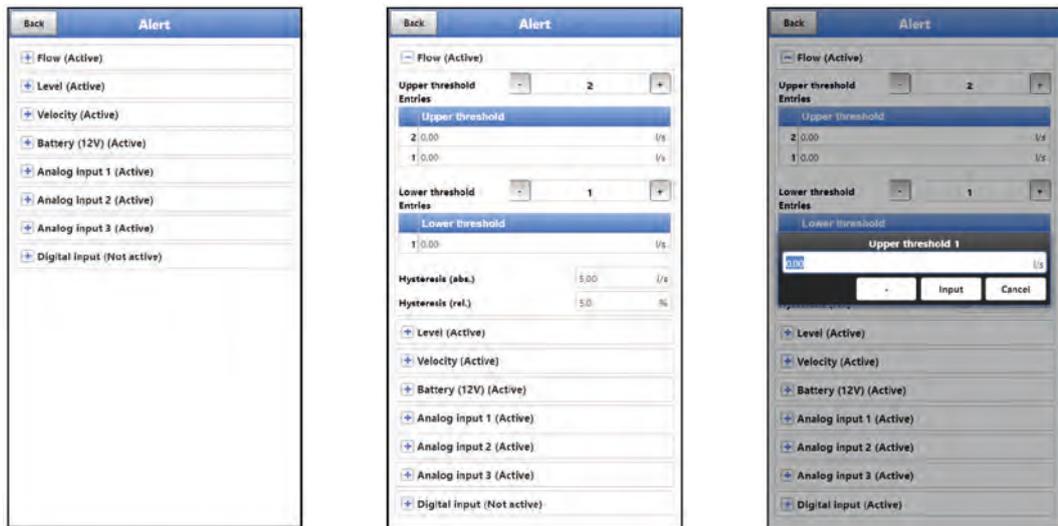


Fig. 37-9 Menu - Alert

Depending on the transmitter parameter settings the Alert menu may comprise up to nine subsections: >Flow<, >Level<, >Velocity<, >Air temperature<, >Battery (12V)<, >Analog Input 1<, >Analog Input 2<, >Analog Input 3< and >Digital Input<.

Here the top or bottom limit values/thresholds and error messages can be set, which are to be used to trigger an e-mail alarm to a pre-set e-mail address.

38 Parameters Menu Application

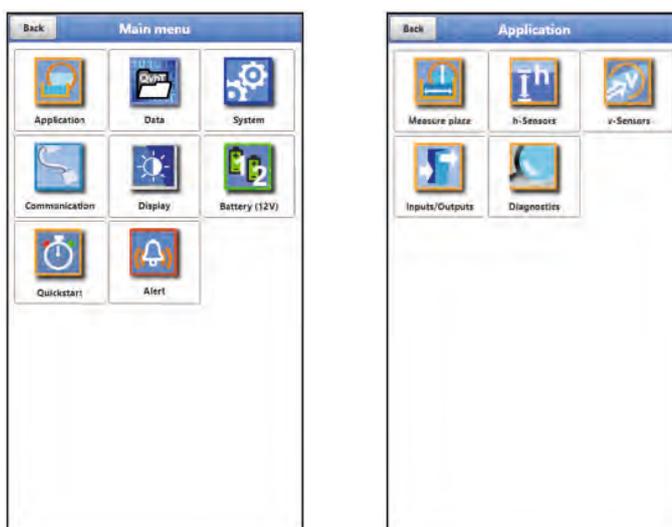


Fig. 38-1 Application Menu

The following sections describe the general parameter setting procedures.

38.1 Menu Measure Place

The >Measure Place< submenu is one of the most relevant basic menus when it comes to setting parameters.

The parameter set of a measurement place contains basic settings for:

- Name of measurement place
- Type and dimensions of channel profile
- Low-flow suppression
- Measurement damping and stability

38.1.1 Name of Measurement Place

This is where you can set the name of the measurement place.

Default setting: "MP1"

The default name is deleted automatically as soon as the first character of the new measurement place name is entered.

- Type the desired name of the measurement place into the text field and confirm with "Enter". The name will be accepted and is shown in the main screen.

38.1.2 Channel Profiles

The transmitter allows selecting from a wide variety of standardised channel profiles mainly used in practice.

Since particularly older channel systems often have special shapes, the transmitter moreover provides the option to enter dimensions or heights/areas of symmetric and asymmetric channels in tables.

The profile chosen is shown as graph in the 3D preview box if selected. To indicate the graph the dimensions entered are set in relation to one another.

This visual control is important to instantly see whether the profile has been **basically** created correctly. Particularly for free profiles this kind of direct verification is helpful.



Fig. 38-2 Selectable channel profiles

- Select from the available channel profiles:
 - Pipe
 - Ellipse
 - Egg profile (1:1,5)
 - Rectangle

- U-Profile
- Trapezoid
- Channel
- Height-Width (symmetrical)
- Height-Width (asymmetrical)
- Height-Area
- $Q=f(h)$



Enter dimensions.

After choosing the profile the dimension values are entered.

The used measurement unit is set to meter [m] per default, however can be changed in the >System< / >Region Settings< / >Units< / >Level< menu (Fig. 38-3).



Fig. 38-3 Setting of units

Pipe

This selection is suitable for round pipes, however can be used for half shells featuring a filling level of 50 % max. as well.

Deformed pipes featuring asymmetric height/width ratio can be set using the ellipsoid geometry selection.

For U-profiles there is an extra selection available.

Ellipse

Ellipsoid profiles can be found mainly in pipes subject to mechanical loads (lateral pressure or crown pressure). There are also special channel shapes known as ellipsoid profiles.



Ellipsoid profiles versus Egg profile

Symmetric ellipsoid profiles should not be confused with ovoid profiles (egg-shaped). Ovoid profiles feature different radii in bottom and crown which makes them symmetrical only in a vertical sense.



Enter both dimensions of the ellipsoid profile.

Egg profile (Ovoid; 1:1.5)

This channel shape is a “standard egg shape” according to German DWA A 110 featuring a width/height ratio of 1:1.5. Squeezed or shrunk ovoid profiles need to be set using a free profile.

When setting the egg profile parameters only the maximum channel width needs to be entered. The transmitter calculates the height automatically by using the fixed 1:1.5 ratio.

Rectangle

This selection can be used to set the parameters of channels featuring vertical walls and a horizontal bottom. The parameters can be easily set by merely entering width and height of the channel.

The menu moreover includes the option to set the parameters for channels with a centre dry weather flume.

- Rectangle with dry weather flume

➡ Procedure:

1. Select the dry weather flume.
2. Check the >Active< box.
Two more input fields will open.
3. Specify height and diameter of the dry weather flume.
Use the 3D-view to verify whether dimensions are specified correctly.

U-Profile

The U-profile is composed from a bottom semicircle and vertical walls. The semicircle radius here is $\frac{1}{2}$ the channel width and is entered automatically by the system.

Profiles with radii larger than $\frac{1}{2}x$ channel width should be created as free profiles.

Trapezoid

This selection allows setting the parameters for symmetric channels featuring a horizontal bottom and sloped walls. Parameters of symmetric channels with a horizontal bottom, sloped walls and featuring vertical walls at the top can be set in this menu too.

Right as with rectangular profiles, a dry weather flume can be added as extra option.

- Trapezoid with dry weather flume

➡ Proceed as described in the rectangle with dry weather flume section on page 80.

Channel



Sound Expert Knowledge required

Setting the parameters for a water bed requires sound knowledge and comprehensive experience on the operation of the NivuFlow Mobile as well as about hydrologic ambient conditions.

We recommend letting the NIVUS commissioning service or a company authorised by NIVUS do the programming works.

In this profile you define the reference point/zero point yourself. Mostly, the maximum level or the water surface on one bank or channel side is determined as zero point. By performing local measurements on site you can save the profile of a certain section of the water body in the transmitter here.

➡ Enter the freely defined measuring section into the table one after the other.

Symmetric profile using height-width (Height-Width (sym.))

This menu can be used to set any kind of symmetric profiles.

Selecting the button >Table< indicates a table of values where a maximum of 32 breakpoint pairs (channel height/channel width) can be entered. The system calculates these values automatically and saves them as symmetric profile in the internal memory.

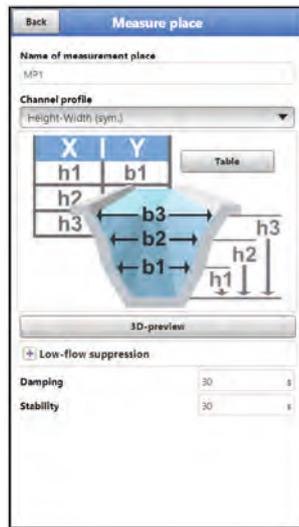


Fig. 38-4 Setting of profile using height-width (sym.)



Drawing required

A true to scale drawing is required to set the channel parameters.

➡ Procedure:

1. Draw a vertical auxiliary line onto the drawing in the channel centre.
2. Then draw horizontal auxiliary lines on the distinct points where the profile changes.
3. Measure the length of the auxiliary lines and subsequently convert the length true to scale.
4. Start at level "0" to define the starting point of the channel. Enter height and width of all other breakpoints "freely". The distance between individual height breakpoints may vary. Not all of the 32 breakpoints need to be necessarily entered in order to define the profile since the transmitter linearises between individual breakpoints. In case of large irregular changes of the channel dimensions select a lower distance between breakpoints in this section. A proportional graph of the values is indicated after the channel parameters have been set.
5. Use the 3D view to verify whether the dimensions are specified correctly. Thanks to this visual aid, bad programming issues can be visualised and corrected directly if required.

Free asymmetric height-width profile (Height-Width (asym.))

In practice asymmetric profiles with unusual shapes can be found occasionally. This is where the programming options for asymmetric profiles are used.



Note on the viewing direction with free profiles

The viewing direction >Width left< or >Width right< is opposite to the flow direction in the channel.



Drawing required

A true to scale drawing is required to set the channel parameters.

➤ Procedure:

1. Draw a vertical auxiliary line onto the drawing from the lowest point of the channel to the top.
2. Starting at this line, draw horizontal auxiliary lines from the distinct points of profile changes to the left and to the right.
3. Measure the distances of each of these auxiliary lines starting at the centre auxiliary line to the right and to the left.
4. Convert the results true to scale and enter the breakpoints into the 3 value columns as follows: height / width to the left / width to the right.
Necessarily observe here the relevant note above on the **viewing direction** with free profiles on page 82.
 Start at level "0" to define the starting point of the channel.
5. Enter all other breakpoints "freely".
 A maximum of 32 breakpoints can be entered. The distance between individual height breakpoints may vary. Not all of the 32 breakpoints need to be necessarily entered in order to define the profile since the transmitter linearises between individual breakpoints.
 In case of large irregular changes of the channel dimensions select a lower distance between breakpoints in this section.
 A proportional graph of the values is indicated here too after the channel parameters have been set.
6. Use the 3D view to verify whether the dimensions are specified correctly.
 Thanks to this visual aid, bad programming issues can be visualised and corrected directly if required.

Free symmetric height-area profile (Height-Area)

Some hydraulic tables may contain height-area value pairs instead of height-width to specify symmetric channels. In such cases enter the value pairs into the selected height-area table.

Necessarily observe here the relevant note above on the viewing direction with free profiles on page 82.

The following procedure is the same as with programming height-width profiles. The programmed profile however cannot be indicated as graph here.

Q/h-Function ($Q=f(h)$)

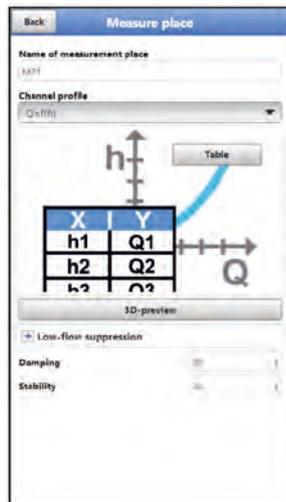


Fig. 38-5 Setting of profile using Q/h-Function

This function significantly varies from the functions described above.

The selection is neither considering the channel profile nor the flow velocity and the communication with flow velocity sensors which may be connected is disabled. The missing flow velocity values will not be considered to create possible error diagnostics.

The system exclusively operates a Q/h-function. This means that a defined flow rate depending on the currently measured level is indicated. This value is entered into a value table depending on the height.

This table can hold a maximum of 32 height-related breakpoints. The transmitter linearises between individual breakpoints.

38.1.3 3D-View

The 3D-view shows the measurement place featuring all adjusted parameters and the according sensors.

38.1.4 Low-Flow Suppression

This parameter is used to suppress lowest movements or apparent flow rates. The main area of use is the measurement of discharge volumes in permanently filled constructions.

- ☛ Check the >Active< box and set the desired value in >Q suppressed<, >v suppressed< or >h suppressed<.

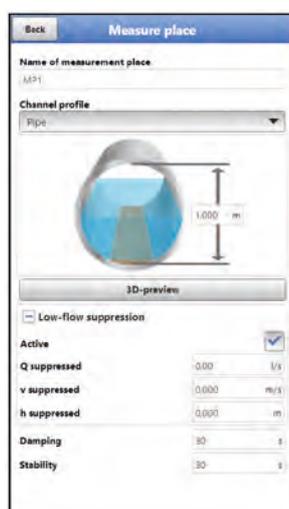


Fig. 38-6 Low-flow suppression

This parameter is to suppress lowest movement or apparent flow rates. The main area of use is the measurement of overflow volumes in buildings with permanent dam-up.

Lower flow velocities than the value specified here will be “suppressed” and hence no flow rate is indicated. The transmitter does not save any values.

- **>Q suppressed<**

Enter the flow rate as positive value.

Negative values are not possible. The specified value is considered as absolute value and is effective in both positive and negative directions.

The measurement system will automatically reset the readings to “0” if the values should be lower than the value specified here.

- **>v suppressed<**

This parameter permits to suppress apparent flow rates in applications featuring large profiles and high levels. Very low velocity fluctuations may cause heavy apparent flow rate fluctuations over a long period which cannot be suppressed using the >Q suppressed< function.

The measurement system will automatically reset the readings to “0” should the flow velocities be lower than the value specified here.

This will set also the calculated volume to “0”.

Only positive values can be entered here. The specified value is considered as absolute value and is effective for both positive as well as for negative velocities.

- **>h suppressed<**

Enter low limit values for levels here. If the real levels are lower than the value entered here, the system will set the measurement values automatically to “0”. No areas are calculated in such cases and flow rate calculations cannot be carried out.

38.1.5 Damping

This menu enables to adjust the display and analog output damping in seconds.

Damping relates to all level and flow velocity values which are available as input. It is not possible to select individual values and to damp single values in different ways.

Taking the specified period, all readings are saved and a floating average is created for each individual average value. This average is used for further calculation of the flow rate.

Input the value in steps of one second.

Default setting: 30 s

38.1.6 Stability

The stability parameter defines the period the transmitter bridges values without having valid measurement events (e.g. in case of invalid level or flow velocity readings) available.

During this period the transmitter operates using the latest valid reading. If the specified period is exceeded without detecting a correct value the transmitter goes back to reading “0” considering the damping set. The transmitter does not store the values.

Input the value in steps of one second.

Default setting: 30 s

38.2 Menu h-Sensors

After setting the measurement place parameters, the level sensor shall be defined and the according mounting position need to be determined in the >h-sensors< submenu. The specifications are required for the evaluation of the detected signals.

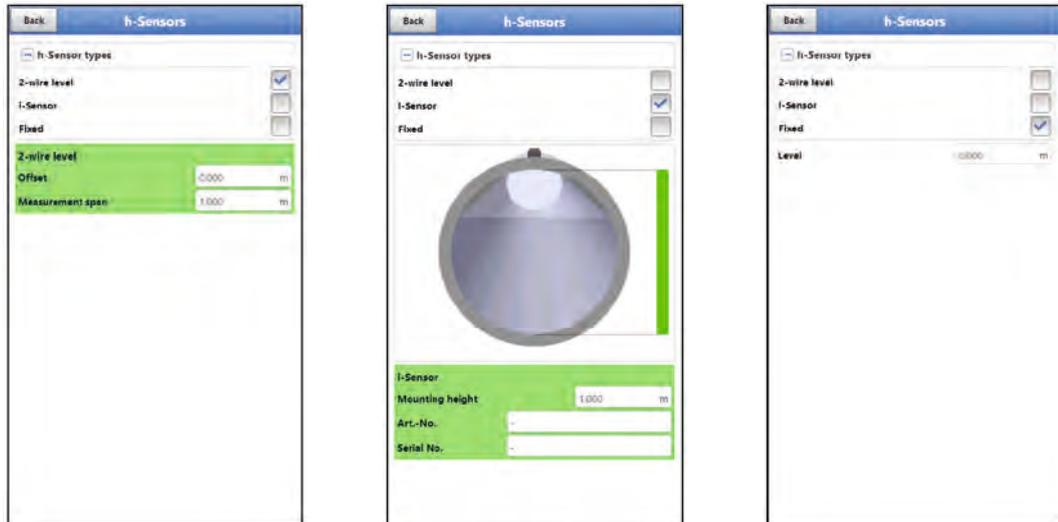


Fig. 38-7 Selection level sensor settings

You can find a choice of level sensors behind the button >h-Sensor types<.

- 2-wire level:
Set Offset (= value at 0/4 mA) and Measurement span (= value at 20 mA) manually.
- i-Series sensor:
Enter mounting height manually;
article and serial no, are detected automatically
- Fixed value:
Enter level manually.



Sensor connected?

After finishing the parameter settings the missing or faulty programmed sensor is detected and the instrument issues an error message.

38.3 Menu v-Sensor 1

The specifications here relate to the channel defined in the >Measure place< menu.

38.3.1 Sensor types

In >Sensor types< select from "Auto identification", "EV0/G00" and "EVG/H00".

The automatic detection is set per default. Under >Sensor< the transmitter lists the available information (Article number, Firmware revision and serial number) on the detected sensor.

With the other both versions the according information is available in the transmitter as well, however, will not be indicated.

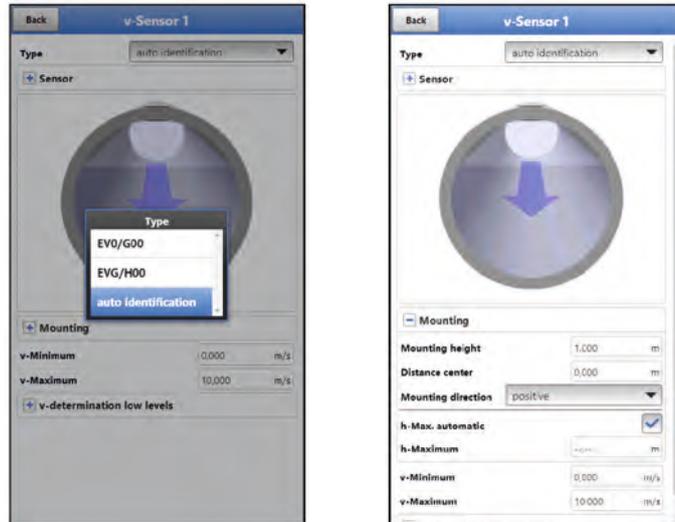


Fig. 38-8 Sensor selection and mounting data

38.3.2 Mounting Data

The following mounting data must be specified:

- >Mounting height<:
Distance to the medium surface
- >Distance centre<:
Distance to the channel centre with a negative value describing installation left of the centre and a positive value describing installation right of the centre looking **towards** the flow direction
- >Mounting direction<:
Installation/measurement direction **in** flow direction (negative) or **towards** the flow direction (positive)
- >h-Max. automatic<:
Check the box; transmitter calculates using the fixed value of the sensor (varies depending on the sensor; available in the system)
- >h-Maximum<:
Manual specification of an individual value

38.3.3 v-Minimum and v-Maximum

The >v-Minimum< and >v-Maximum< settings define the limit values for the velocity measurement. The transmitter ignores occasional higher and lower velocities which hence will not be shown. Permanently measured deviations are indicated as "0". Only the next realistic readings will be indicated correctly.

Values within a range of -15 to +15 m/s can be set.

Default setting:

- v-Minimum: 0 m/s
- v-Maximum: 10 m/s

38.3.4 v-Determination low levels

Due to constructional and physical reasons the flow velocity sensors cannot measure the flow velocity anymore below a certain minimum level. This minimal height is:

- type EVO/G00: 5 mm
- type EVG/H00: 5 mm

Poor application conditions or an elevated sensor installation may push this level even higher. This level is referred to as **h-crit**.

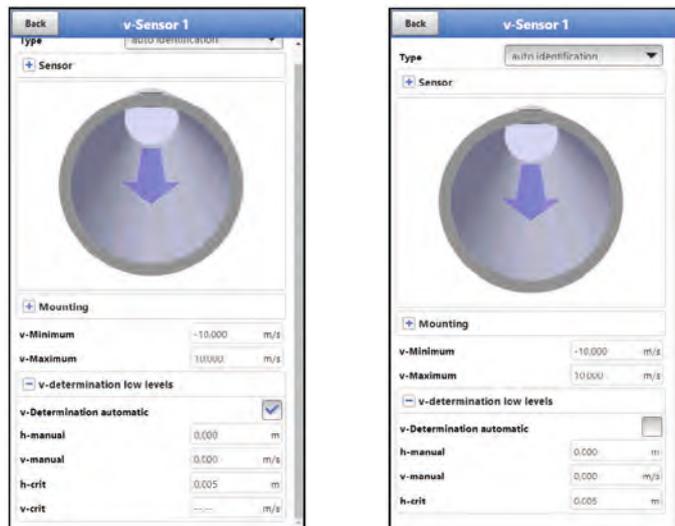


Fig. 38-9 v-Determination low levels

The >v-determination low levels< menu facilitates the detection of temporary low flow volumes (such as discharges at night, infiltration water or similar).

A requirement for this function is:

- The application must be backwater-free.

Working principle:

As soon as the level falls significantly, from a certain point on it is not possible anymore to measure the flow velocity. The transmitter creates an internal table of v/h-readings at the point of the minimum level (h-crit) on which a flow velocity still can be measured. The system here uses the latest measurable flow velocity reading. The exponent of the channel shape set is considered automatically to calculate this curve.

As soon as no flow velocity can be recorded anymore, a level however is measured, the system automatically computes an “appropriate” flow velocity within this value table.

>v- Determination Automatic<

Default setting: Function activated (box checked).

- As soon as the level reaches h-crit (critical level), the latest measured flow velocity reading is saved automatically as a calculation basis for lower levels. This calculated flow velocity value then is used to compute the flow rate if the level continues to fall. Should the level first rise above h-crit and then fall below h-crit again, the newly determined velocity value is used as a calculation basis for the flow rate calculation to come.
- If >v-Determination Automatic< is disabled and the level should fall below h-crit, the system uses the flow velocity value set under >v-manual< to calculate the flow rate.
- Disable >v-Determination Automatic< box as soon as you expect very low flow levels and backwater within your channel.
- Deactivation makes sense too as soon as in the event of flow rate zero a small amount of the medium is supposed to stand still. Set the value in >v-manual< to >0<. The system then does not compute any flow rates at very low flow levels.

>h-manual<

This input box is used to manually enter the level. This level is related to the flow velocity value >v-manual<.

>h-manual< must not be lower than >h-crit< since otherwise readings might get lost.

Default setting: >h-manual< is set to "0".

>v-manual<

Use this input box to manually enter a flow velocity value.

This value is related to >h-manual<. The required flow velocity value for the according level can be computed e.g. by using hydrologic software.

>h-crit<

This input box is used for v/h-calculation. To do so, enter the level as from which the system is desired to utilise v/h-calculation.

>v-crit<

This menu is conceived for measurement in levels lower than >h-crit<. Falling below the minimum velocity, the system will switch over to a calculated value (according to Manning-Strickler).

>v-crit< is active only if >v-Determination automatic< is active. Otherwise it will be indicated but can-not be selected.

38.4 Menu Inputs/Outputs (analog and digital)

This menu is to define the function of the analog as well as digital inputs and outputs. Other parameters such as measurement and output spans, offsets, limit values, error reactions etc. can be set here as well.

➡ Open the >Inputs/Outputs< Menu from >Main Menu</>Application<.

The inputs/outputs menu is subdivided into four parts:

- Analog inputs
- Analog outputs
- Digital inputs
- Digital outputs



Fig. 38-10 Inputs/Outputs Menu

38.4.1 Analog Inputs

The transmitter is equipped with three analog inputs. The inputs are indicated in the top right display corner from where they can be selected individually. The selected analog input is highlighted and the clear name is indicated in the headline.

Default setting: Input inactive

Alternatively, the transmitter can be used as an extra data logger for measurement values from external systems or for supply of analog sensors. This, however, does not influence the instrument's capabilities as flow meter.

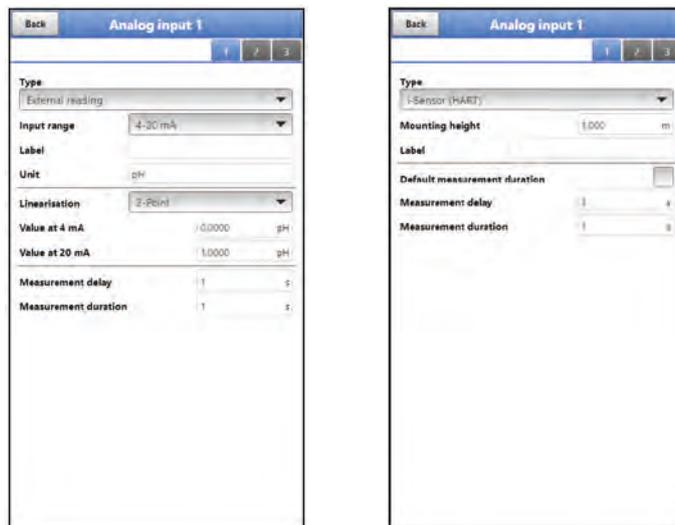


Fig. 38-11 Analog input as external reading / i-Sensor (HART)

The values below must be chosen/entered in **>External Reading<**.

- Selection/Input options:
 Input Range: >0-20 mA< or >4-20 mA<
 Label: manual input
 Unit: manual input
 Linearisation: >2-Point< or >Table<
 For >2-Point< linearisation: manual input of values for 4 or 20 mA
 For >Table< linearisation: manual input of the number of >Entries<, then select >Table<, complete and confirm
 Measurement delay: manual input of the values
 Measurement duration: manual input of the values

The values below must be chosen/entered in **>i-Sensor (HART)<** (Analog input 1 only).

- Selection/Input options:
 Mounting height: manual input
 Label: manual input
 Default measurement duration: check box; if the box is not checked enter values manually for measurement delay and measurement duration

38.4.2 Analog Outputs

The transmitter is equipped with one analog output 0-10 V.

Default setting: Output inactive

The following different functions can be assigned to the analog output.

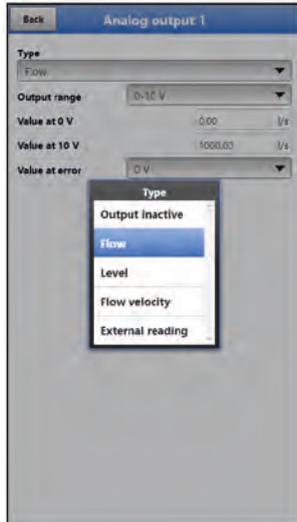


Fig. 38-12 Analog output activation

- **Flow**
The application flow rate (calculated from average flow velocity and wetted cross section) is available on the selected analog output.
 - Selection/Input options:
Output Range: >0-5 V< or >0-10 V<
Value at 0 V: manual input
Value at 10 V: manual input
Value at error: >0 V< or >Hold value< or >10 V<
- **Level**
The level of the current level area is available at the selected analog output.
 - Selection/Input options:
Output Range: >0-5 V< or >0-10 V<
Value at 0 V: manual input
Value at 10 V: manual input
Value at error: >0 V< or >Hold value< or >10 V<
- **Flow velocity**
The calculated average flow velocity used to compute the current flow rate is available on the selected analog output.
 - Selection/Input options:
Output Range: >0-5 V< or >0-10 V<
Value at 0 V: manual input
Value at 10 V: manual input
Value at error: >0 V< or >Hold value< or >10 V<
- **Air temperature**
The air temperature is available on the selected analog output.
 - Selection/Input Options:
Output range: >0-5 V< or >0-10 V<
Value at 0 V: manual input
Value at 10 V: manual input
Value at error: >0 V< or >Hold value< or >10 V<

- **External Reading**
Possibly linearised measurement values available at the analog input are available here.
 - Selection/Input options:
Analog input: >Input 1< or >Input 2< or >Input 3<
Output Range: >0-5 V< or >0-10 V<
Value at 10 V: manual input
Value at error: >0 V< or >Hold value< or >10 V<

38.4.3 Digital Inputs

The transmitter is equipped with one digital input.

Default setting: Input inactive

The following different functions can be assigned to the digital input.



Fig. 38-13 Digital input activation

- **Runtime**
The system detects and saves the duration of the ongoing signal at the digital input. Such records are used to gather information e.g. on pump runtimes or other equipment runtimes.
 - Selection/Input options:
Logic: >not inverted< or >inverted<
Label: manual input
- **Impulse Counter**
The system counts and saves the number of ongoing signals at the digital input. The counter simply counts the status changes detected at the digital input (1->0 or 0->1).
 - Selection/Input options:
Edge:
>rising< (status change from “0” to “1”) or
>falling< (status change from “1” to “0”)
Label: manual input
- **Logging**
Logging of readings and the according status changes for diagnostic purposes. Evaluation is carried out by detecting the status changes of the digital input (1->0 or 0->1).
 - Selection/Input options:
Logic: >not inverted< or >inverted<
Label: manual input

38.4.4 Digital Outputs

The transmitter is equipped with one digital output.

Default setting: Digital output inactive

The following different functions can be assigned to the digital output.

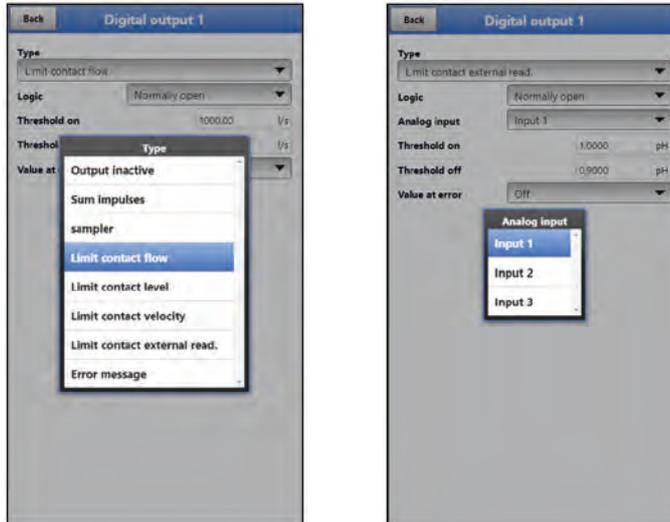


Fig. 38-14 Digital output activation / Limit contact ext. reading

- **Sum Impulses**
Output of flow-proportional sum impulses.
 - Selection/Input options:
Logic: >Normally open< or >Normally closed<
Negative sum impulses: check box
Volume: manual input
Duration: manual input
- **Sampler**
In connection with a sampler provided by the customer it is possible to define the according cyclic control.
 - Selection/Input options:
Logic: >Normally open< or >Normally closed<
Level: manual input
Volume: manual input
Duration: manual input
- **Limit contact flow**
Exceeding the >Threshold on< value will output a digital signal, falling below >Threshold off< will reset the digital signal = hysteresis function to avoid output flutter.
 - Selection/Input options:
Logic: >Normally open< or >Normally closed<
Threshold on: manual input
Threshold off: manual input
Value at error: >Off< or >On< or >Hold value<
- **Limit contact level**
Exceeding the >Threshold on< value will output a digital signal, falling below >Threshold off< will reset the digital signal = hysteresis function to avoid output flutter.
 - Selection/Input options:
Logic: >Normally open< or >Normally closed<
Threshold on: manual input
Threshold off: manual input
Value at error: >Off< or >On< or >Hold value<

- **Limit contact velocity**

Exceeding the >Threshold on< value will output a digital signal, falling below >Threshold off< will reset the digital signal = hysteresis function to avoid output flutter. The calculated average flow velocity (calculated even from multiple paths) is used.

 - Selection/Input options:
Logic: >Normally open< or >Normally closed<
Threshold on: manual input
Threshold off: manual input
Value at error: >off< or >On< or >Hold value<
- **Limit contact air temperature**

Exceeding the >Threshold on< value will output a digital signal, falling below >Threshold off< will reset the digital signal = hysteresis function to avoid output flutter.

 - Selection/Input Options:
Logic: >Normally open< or >Normally closed<
Threshold on: manual input
Threshold off: manual input
Value at error: >Off< or >On< or >Hold Value<
- **Limit contact external reading**

Exceeding the >Threshold on< value will output a digital signal, falling below >Threshold off< will reset the digital signal = hysteresis function to avoid output flutter.

 - Selection/Input options:
Logic: >Normally open< or >Normally closed<
Analog input: >Input 1< or >Input 2< or >Input 3<
Threshold on: manual input
Threshold off: manual input
Value at error >Off< or >On< or >Hold value<
- **Error message**

By activating individual selection fields (check box) it is possible to assign individual error types to the digital output. Moreover the output logic can be switched between normally open and normally closed.

 - Selection/Input options:
Logic: >Normally open< or >Normally closed<
Error mask:
v-measurement: check box
h-measurement: check box
T-measurement: check box
External measurement: check box
System: check box

38.5 Menu Diagnostics

The Diagnostics menu is described separately in greater detail in chapter "Diagnostics" starting at page 128 of the instruction manual.

39 Parameters Menu Data

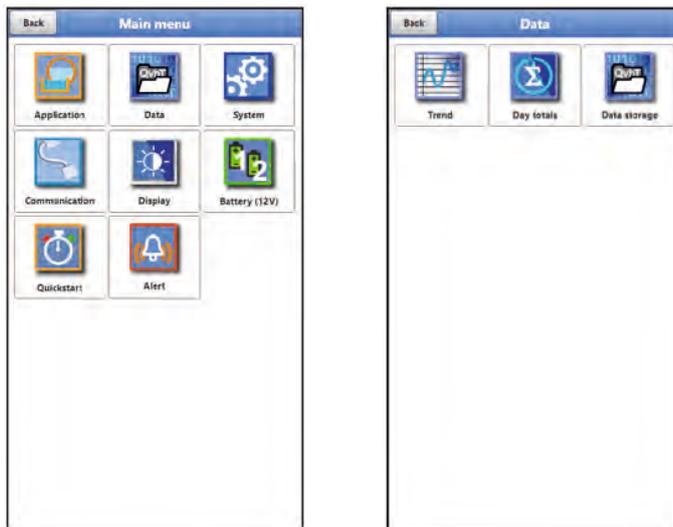


Fig. 39-1 Data menu

39.1 Menu Trend

The Trend graph is a representational recorder function. Choosing the trend graph provides access to current and previously saved (historic) measurement data.

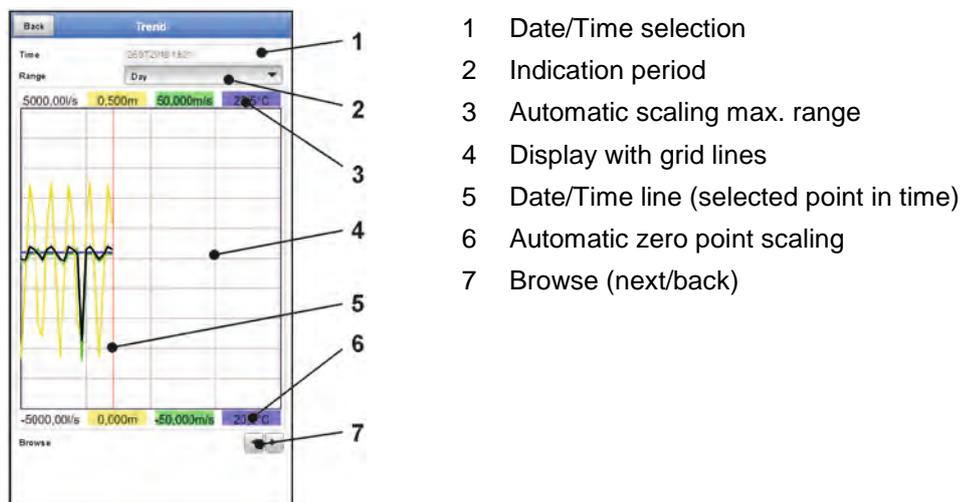


Fig. 39-2 Trend graph details

Current measurement data

➡ Procedure to view current measurement data:

1. Select the desired range (indication period; Fig. 39-2 no. 2).
The selected range will be indicated. The measurement data will not be automatically updated during indication.
2. Use the arrows (Fig. 39-2 no. 7) to browse next or back if required leaving the basic display settings unaltered.
3. Use "Back" to go back to the main screen

>Time/Date<

Opening the Trend menu shows the current date and time. If you wish to view historic readings/a particular point in time select the desired period from the Date/time selection screen

(Fig. 39-2 no. 1). Here the selection mask below opens up (Fig. 39-3). The readings are indicated (depending on the period set) in the subsequent screen once a start date is selected.

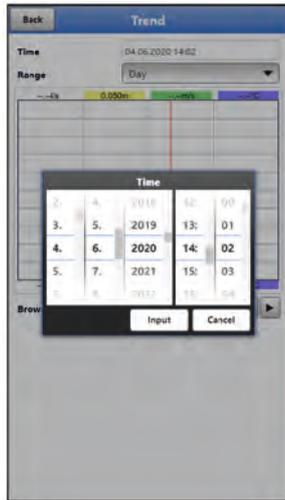


Fig. 39-3 Selecting Time/Date

>Range< (Indication period)

The range selection determines the period to indicate on the screen.

Selection	Representation on the display		
	Left margin	Right margin	Grid lines
Hour	0 minutes	59 minutes	15 minutes each
4 hours	0/4/8/12/16/20 o'clock, depending on the time set	4 hours later	1 hour each
Day	0 o'clock	24 o'clock	4 hours each
Week	Monday, 0 o'clock	Sunday, 24 o'clock	Je 1 Tag
4 weeks	Monday, 0 o'clock	4 weeks later, Sunday, 24 o'clock	1 week each; start reference time: 29.12.1969, 0 o'clock

Table 7 Remarks to the periods displayed

39.2 Menu Day totals

The table below shows the flow rate totals taken in the last 24 hours.



	Date	Total	Unit
1	03.06.2020 00:00	0.000	m³
2	02.06.2020 00:00	0.000	m³
3	01.06.2020 00:00	0.000	m³
4	31.05.2020 00:00	0.000	m³
5	30.05.2020 00:00	0.000	m³
6	29.05.2020 00:00	0.000	m³
7	28.05.2020 00:00	0.000	m³
8	27.05.2020 00:00	0.000	m³
9	26.05.2020 00:00	0.000	m³
10	25.05.2020 00:00	0.000	m³
11	24.05.2020 00:00	0.000	m³
12	23.05.2020 00:00	0.000	m³
13	22.05.2020 00:00	0.000	m³
14	21.05.2020 00:00	0.000	m³
15	20.05.2020 00:00	0.000	m³
16	19.05.2020 00:00	0.000	m³
17	18.05.2020 00:00	0.000	m³
18	17.05.2020 00:00	0.000	m³
19	16.05.2020 00:00	0.000	m³
20	15.05.2020 00:00	0.000	m³
21	14.05.2020 00:00	0.000	m³

Fig. 39-4 Selection day totals

Up to 100 totals (= 100 days) are saved. Starting with the 101st value the oldest value will be overwritten (ring memory).


A **prerequisite** to indicate older values is that the instrument has been running for a longer period.

Example: 98 values – the unit has completed 98 totalising processes, so it must be running for at least 98 days.

In general, only day totals can be viewed which have been created while the instrument was actually in operation.

As soon as the NivuFlow Mobile is shut down between two totalising events (<24 hours) the transmitter creates a total using **measured** values. Such totals are **not equal to the actual day total** but reflect the total measured by the transmitter while being in operation.

As soon as the transmitter is shut down before the next totalising event and remains to be off until the next totalising (>24 hours) no totals will be created for this period (Fig. 39-5 no. 2). No data will be stored and no name will be created for this period. This “gap” can be identified from the completely missing entry (date/values) within the listed sequence. **No empty lines** will be created.

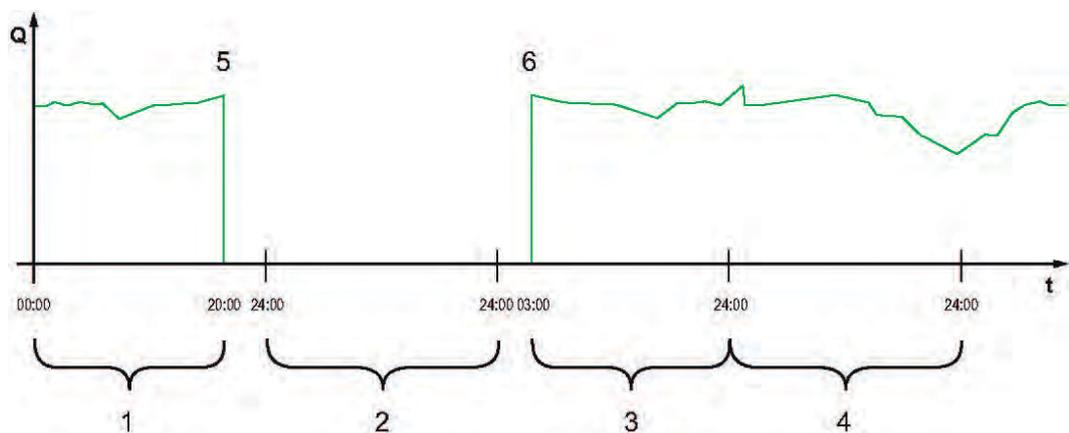

- 1 Total day 1: Total covering 20 hours
- 2 Day 2: Power failure – no totalising
- 3 Total day 3: Total covering 21 hours
- 4 Total day 4: Total covering 24 hours
- 5 Power failure
- 6 Power available again

Fig. 39-5 Totalising scheme

- Per **default** the **totalising period** is between 00:00 o'clock and 24:00 o'clock. This means that day totals are always created between 00:00 o'clock and 24:00 o'clock.
- The **default totalising time** is at 00:00 o'clock.

The totalising time can be modified using >Update (Time)< (Fig. 39-6). Once modified, the totalising will start at the time set and stops 24 hours later.

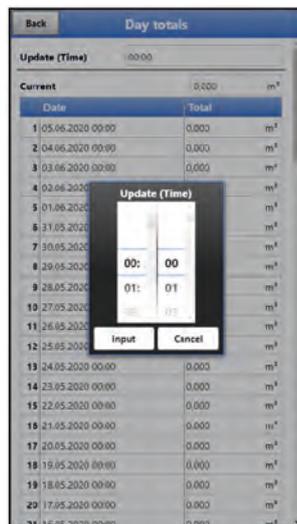


Fig. 39-6 Updating the totalising time

The value shown in >Current< is the subtotal since the last totalising.

39.3 Menu Data memory

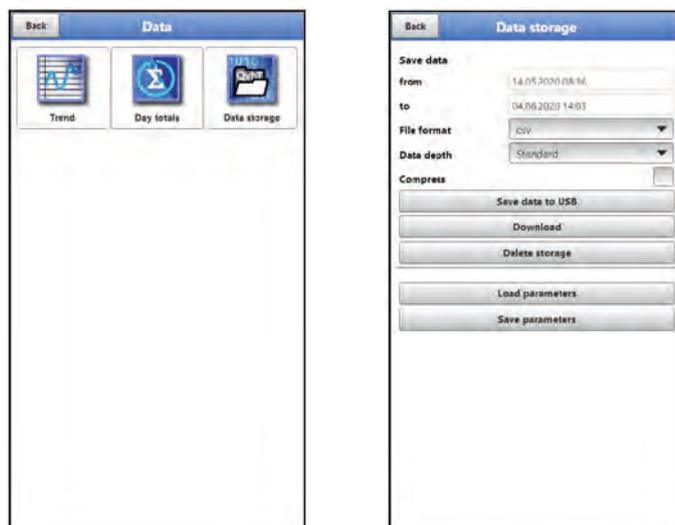


Fig. 39-7 Data memory menu

The NivuFlow has an internal data memory (max. 182,398 measurement cycles, more cycles will start overwriting). It is possible to transfer either portions of your data or all saved readings to an USB stick.



Using the USB interface is allowed only outside of Ex areas.

USB stick requirements

- Supports USB 2.0
- FAT 32 (or FAT 12 or FAT 16) formatted
- Max. permissible capacity 32 GB

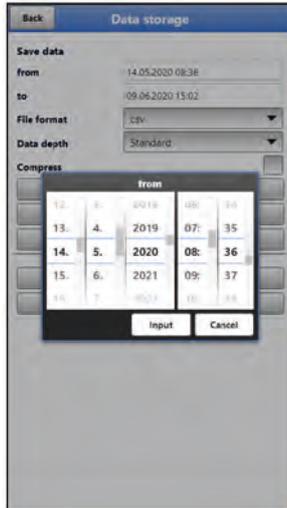


Fig. 39-8 Specify start/end time

- **>from< / >to<**
This section allows you to determine the desired transmission period. Define the period in some kind of calendar (Fig. 39-8).
Per default the transmitter is set as to transmit the data containing the period between the latest previous transmission and the current time.
- **>File format<**
>csv< or >txt<
- **>Data depth<**
Data depth is subdivided into four sections:
 - **>Standard<**
This is the appropriate format for the most applications and hence is the default setting.
The saved data sets contain the following information:
 - Date and time
 - Totaliser
 - Calculated flow rate
 - Average flow velocity
 - Current values as well as the accordingly calculated values of enabled analog and digital inputs
 - Battery voltage
 - NFM power consumption
 - **>Extended<**
This option is appropriate for the verification of critical, important applications and is required mainly for servicing personnel.
The saved data sets contain the following information:
 - All data sets from the previous data depth >Standard<
 - Average flow velocities of the v-sensors (if used)
 - **>Expert<**
This option should be used only by trained service personnel or the NIVUS GmbH developers. Such data sets may become very large very quickly.
If required contact NIVUS.
 - **>Day totals<**
This option saves only the day totals, no individual values.

- **>Compress<**
This function is useful to transmit large data sets. In this case the selected files are zipped as “.zip” files.
- **>Save data to USB<**
This function permits to save measurement data covering a previously determined period to USB stick.
- **>Download<**
Use this function to save measurement data covering a previously determined period to the operating unit (smartphone, tablet, notebook etc.).
- **>Delete storage<**
This function can be used to completely erase the internal data memory. Selecting this option will prompt you to confirm. After confirmation with >Yes< the data will be erased, >No< will abort the process.
- **>Load parameters<**
Use this function to load a parameter file previously saved to USB stick or the operating module back to the transmitter again.
- **>Save parameters<**
The measurement place parameter sets can be saved to USB stick here. Only two files with the formats below will be created and saved:
 - **XXXX_DOC_AABBCCDDEE.pdf**
This file is for documentation purposes and contains basic settings as well as parameter changes.
 - **XXXX_PAR_AABBCCDDEE.xml**
This file contains the entire transmitter parameter settings and is used as backup of the current parameter settings.

Remarks on file names:

XXXX = Name of the measurement place set

- AA = Year
- BB = Month
- CC = Day
- DD = Hour
- EE = Minute

40 Parameters Menu System

40.1 Menu Information

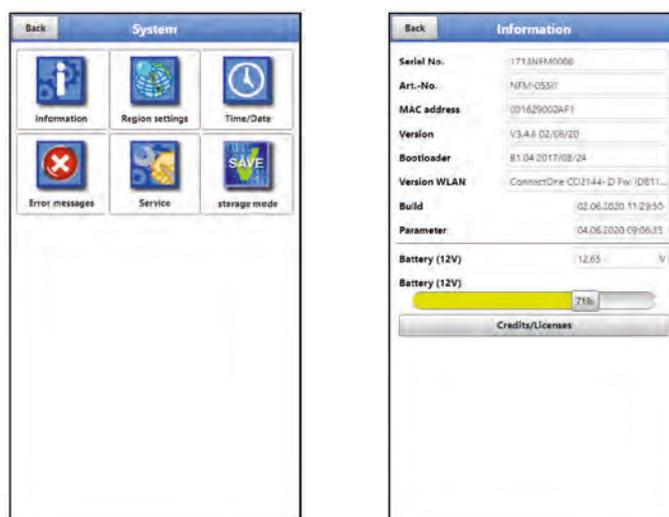


Fig. 40-1 System – Information - Menu

>Information< is a read-only menu and provides the instrument information below:

- Serial no. and article no.
- MAC address
- Firmware version of the transmitter
- Data on Bootloader and WLAN version
- Date of the latest software update (firmware) and the last storage of the parameter sets
- Current battery charging status (when using two batteries the battery with the higher capacity is used until the capacity of both batteries has reached the same level; after that both batteries are discharged equally)
- Information on credits and licenses

40.2 Menu Region settings

The following settings can be configured here:

- (Operation) Language
 - Date format
 - Units for measurement values
- Here it is possible to distinct between stored and displayed measurement values.



Fig. 40-2 Region Settings – Language – Date Format

40.2.1 (Operation) Language

All listed languages (Fig. 40-2) either contain wordings in the according language or alternatively in English.

40.2.2 Date format

The date formats below can be set:

- DD.MM.YYYY (Day/Month/Year)
- MM/DD/YYYY (Month/Day/Year)

40.2.3 Units

This menu can be used to adjust various country-specific and unit-specific settings for the indication of measurement values.

>Decimal Separators<

- Comma or Point

The decimal separators specified here are used only for representation on the operation module display.

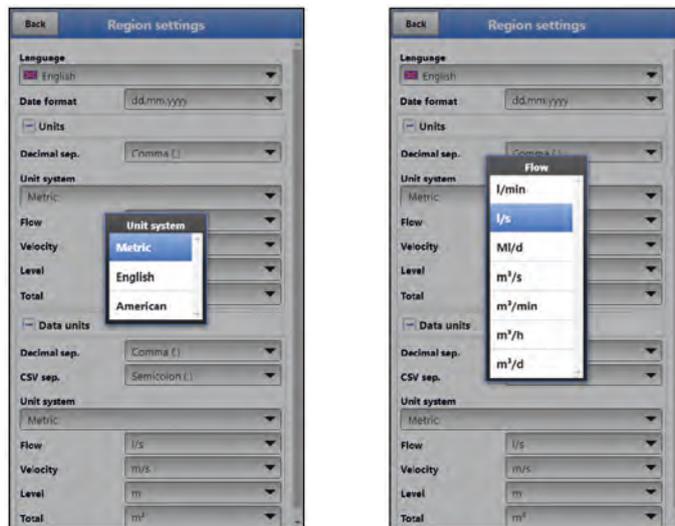


Fig. 40-3 Unit system

>Unit System<

Select from:

- Metric
- English
- American

The **adjustable units** depend on the previously chosen unit system:

- Metric system: l, m³, cm/s etc.
- English system: ft, in, gal/s etc.
- American system: fps, mgd etc.

Units for Display Representation

- Flow
- Velocity
- Level
- Total
- Temperature (for units system “English” only)

40.2.4 Data units

The >Data Units< settings are in line with the >Units< settings.

In >Data Units< the measurement values are **converted and saved** according to the selected units.

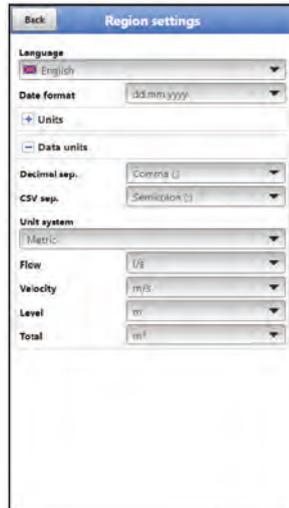


Fig. 40-4 Data units

>Decimal separators<

- Comma
- Point

Specifying the decimal separators is relevant for correct data import. Particularly in case of using foreign software applications (such as foreign Excel) to evaluate readings observe to specify the correct decimal separators.

>CSV separators<

- Comma (,)
- Semicolon (;)

This selection determines how to separate individual data within the .csv-file on readout.

Units for storage

- Metric system: l/s, m³/s, m³/d, cm/s etc.
- English system: ft³/s, in, gal/min, Mgal/d, in/s, yd/s etc.
- American system: gps, gpm, cfs, cfm, cfh, cfd, mgd etc.

Units for the storage of measurement values

- Flow
- Velocity
- Level
- Total
- Temperature (for units system "English" only)

40.3 Menu Time/Date

This submenu allows you to modify the current date and the transmitter system time. The system time is based on the coordinated universal time UTC (French: “Temps universel coordonné”) with “Plus-Hours” or “Minus-Hours” symbols defining the time zones compared to UTC.

NIVUS highly recommend to leave the transmitter system time unchanged and to define your time zone as well as summer and winter times by using the >Time Zone (UTC)< function.

Use >Sync Time/Date< to synchronise date and system time automatically with the display and operation module.

Modifications in the >Time/Date< menu may be necessary to switch from summer time to winter time, due to internal buffer battery failure or after power failure.

The internal clock may deviate when the transmitter has been operated for a long time. Such deviations can be corrected here.



Effects of changing the system time

Changing the system time has an effect on the storage of data. If the data storage option is enabled, duplicate data or data gaps may occur after the system time has been modified.



Fig. 40-5 Change system time: manually and automatically

The current system time can be set in the menu above (Fig. 40-5).

Set the time difference (UTC or GMT) to the prime meridian with “+” and “-”:

- = decrease by 1 hour each
- = decrease by ½ hour each
- + = increase by ½ hour each
- ++ = increase by 1 hour each

40.4 Menu Error messages

Use this menu to recall the currently active queued error messages and to erase the error message memory.

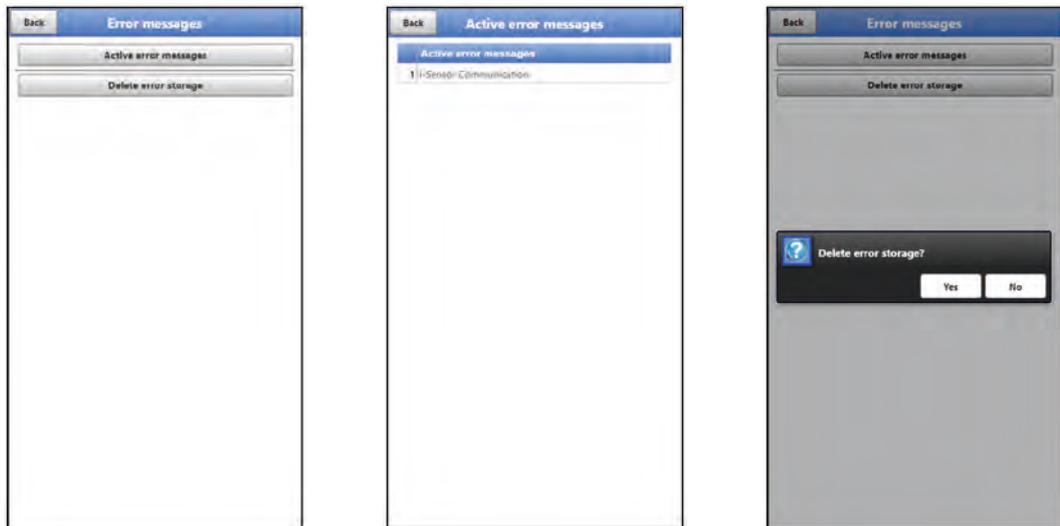


Fig. 40-6 Error messages

40.5 Menu Service

This submenu contains the following functions:

- Service levels (password-protected); the service levels are reserved exclusively for NIVUS service personnel
- Restart (of system)
- Powerdown (transmitter goes to energy saving mode)
- Parameter reset (back to default settings)
- Feature unlock
- Update NivuFlow
- Update Bootloader



Fig. 40-7 Service

40.5.1 Service level

The service levels are split into different, accordingly password-protected access levels. The possible settings as well as the information available here require comprehensive expert knowledge and are not needed for standard applications. This is why the service level is reserved for NIVUS service personnel exclusively.

40.5.2 Restart

A transmitter restart interrupts the current measuring process.

The system will boot using the parameters previously set (saved). After the boot process the system behaves as if being switched on (analog to a PC).

This menu point saves you from shutting down and restarting the system. All saved parameters, counters and data will be preserved.

40.5.3 Powerdown

The >Powerdown< function switches the transmitter to energy saving mode. The instrument will not resume measuring before it has been “woken up”.

40.5.4 Parameter reset

A parameter reset will reset all parameters to default settings. Counter readings, modified passwords and saved measurement data are preserved.

The parameters will not be actually reset before you exit the service menu (back to main menu) and confirm the storage process. At this point you can still abort the reset.

40.5.5 Feature unlock

Use Feature unlock to unlock special functions (optional) if ordered from NIVUS.

Functional description

Remote data transmission with NivuFlow Mobile devices can be carried out using different channels. The options below are basically available:

- via MQTT to the NIVUS WebPortal or to a customer system
- via FTP to the NIVUS data portal D2W or to a customer FTP server
- via E-Mail to a preset address



Fig. 40-8 Communications menu

The basic version of all NivuFlow Mobile units is supplied featuring “MQTT Data Transmission”. This feature is activated automatically and is available instantly after initial start-up once the according parameters have been set.

Data transmission via FTP and E-Mail is available as combined extra licence and can be purchased either when placing the order or later at any time.

The link to the NIVUS WebPortal (for licence activation) is sent after the dispatch of the ordered device or subsequently to ordering the licence later via E-Mail to the customer or to the responsible local representative ^{*1)}. Activation must be carried out manually by the user ^{*1)} (see chapter "Licence activation"). Once the parameters on the NivuFlow Mobile have been set accordingly the data transmission option can be selected and the transmission can be initiated.



To set the parameters refer to chapter "41 Parameters Menu Communication" (for the example described).

One licence is valid for **one device** and is assigned permanently to this device by using the **serial number**.

**1) Depending on the recipient's country the responsible local representative will activate the licence already prior to the dispatch of the device; all ordered features are then available for customers instantly.*

Licence activation



Procedure to **order the device with licence** "FTP/E-Mail Data Transmission" (example):

1. Order NivuFlow Mobile device(s) including the according data transmission licence(s).
This triggers internal processes at NIVUS regarding the production of the NFM device as well as licencing.
2. After receiving the NFM device(s) log in with the NIVUS WebPortal and open the "Licences" tab.
The login data have been transmitted by NIVUS to an E-Mail address as previously agreed.



Licence assignment to device cannot be changed after licencing

*One licence is valid for one device only and is assigned permanently to this device by using the serial number. The assignment **cannot be undone or changed**.*

Prior to assignment check carefully which unit is to be assigned with which licence to ensure correct licencing and to make sure that the desired features can be used with the correct device.

3. The available NFM device(s) is/are listed in the NIVUS WebPortal. The right display field indicates the ordered licences which need to be assigned to the devices by using the serial number.
To do so click the desired licence and select "Activate".
This action removes the selected licence from the right display field while the according device shows the assigned licence number including the activation code. This activation code is required subsequently (once) to set the parameters of the individual devices.
4. For more licences proceed accordingly.
5. Log out from NIVUS WebPortal and exit the application.

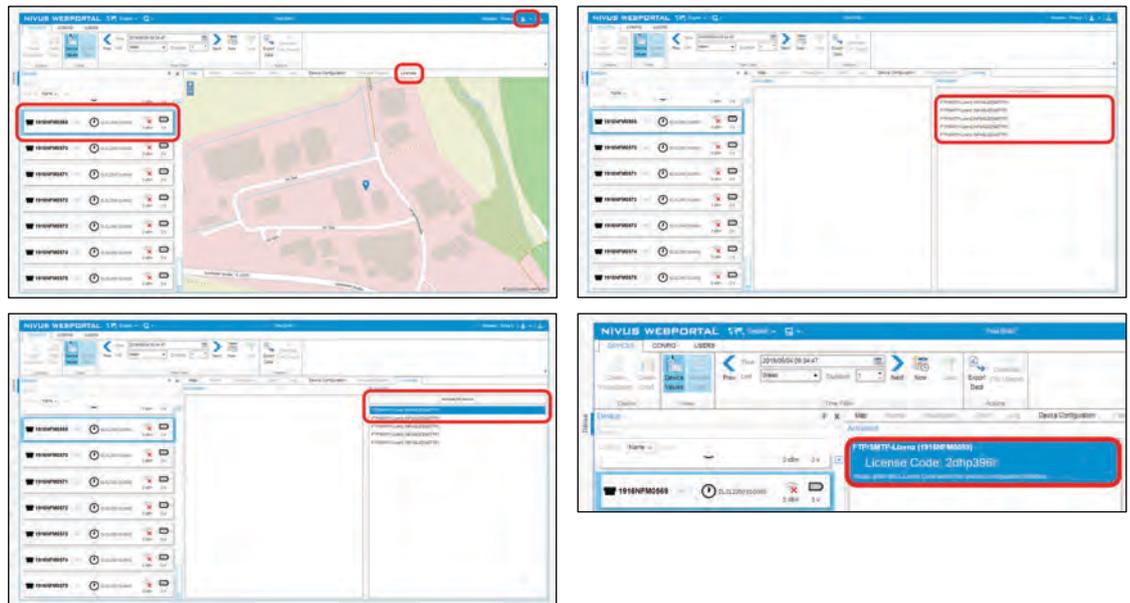


Fig. 40-9 Licence activation in NFM display tool

6. Open the display and operating module (Smartphone, Tablet, Notebook, PC etc.) of the desired NFM and select >Feature unlock< (Fig. 40-10) in the service menu (see also the device's instruction manual).
7. Click button >Feature unlock<.
8. Enter the according activation code and confirm with "Input".
The assigned licence will be shown in the display.



Fig. 40-10 Licence activation in NFM display tool

9. The NFM confirms the activation and prompts a restart of the device.
In communication GPRS menu the option to transmit data via FTP / E-Mail is now available.
10. Select/input parameters in >Communication< menu and save.

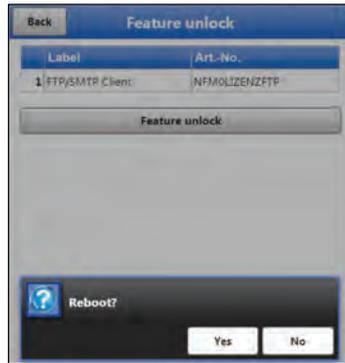


Fig. 40-11 Restart of the system after feature unlock

- ➡ Procedure for **ordering** the “FTP/E-Mail Data Transmission” **licence later**:
1. Place your order for the desired data transmission licence(s).
This triggers internal processes at NIVUS regarding licence activation.
 2. After receiving the login data log in with the NIVUS WebPortal and open the “Licences” tab.
The login data have been transmitted by NIVUS to an E-Mail address as previously agreed.
 3. Proceed with step 3 as described in “Procedure to **order the device with licence** “FTP/E-Mail Data Transmission” (example):”.
Also observe the important note on “Licence assignment” on page 106.

40.5.6 Update NivuFlow

Upload of a NivuFlow Mobile firmware saved on USB.



Important note

Update only in consultation with NIVUS GmbH or the local responsible (country) representative.

40.5.7 Update Bootloader

Upload of a bootloader software saved on USB.



Important note

Update only in consultation with NIVUS GmbH or the local responsible (country) representative.

40.6 Menu Storage mode

The >Storage mode< menu determines the >Operating mode< and the >Storage cycle<.

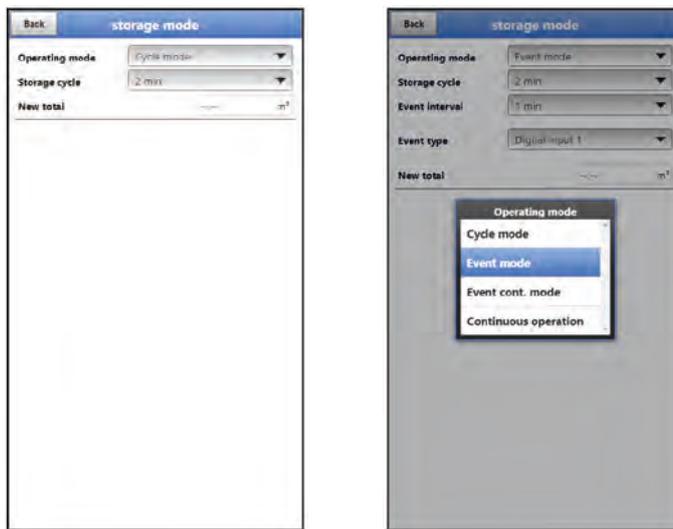


Fig. 40-12 Storage mode – Operating mode

Operating mode, Storage cycle, Event type and Event interval

The operating mode determines when and how often the transmitter shall measure and when and how often the measurements shall be saved. Storage cycle and event interval can be adjusted depending on the operating mode.

To choose the >Operating mode< select from:

- **>Cycle mode<**
The transmitter wakes up at the intervals set in storage cycle, executes a brief measurement and saves the data. After that the transmitter goes back to “sleep mode” until the next measurement.
- **>Event mode<**
On one hand, the transmitter behaves like being in cyclic operation, however it is possible to additionally set an event interval. The transmitter then wakes up at previously defined events, measures and saves data at the adjusted event intervals.
- **>Continuous event mode<**
In this mode the transmitter basically operates like being event operation, however measures continuously during the event. The instrument saves the data at the adjusted event intervals.
- **>Continuous operation<**
The transmitter measures continuously, however will save the data only at the intervals set with the storage cycle.

>Storage cycle<

Select from (depending on the operating mode set): (5 s, 10 s, 20 s, 30 s,) 1 min, 2 min, 5 min, 10 min, 30 min and 1 h

>Event type< (only with Event mode and Continuous event mode)

The operating modes “Event mode” and “Continuous event mode” allow to (depending on the parameters) additionally select the event types “Flow”, “Level”, “Velocity”, “Analog input 1”, “Analog input 2”, “Analog input 3” and “Digital input 1”.

Use “Flow” and “Velocity” to determine the switchover threshold.

The indicated selection of event types varies depending on the parameter settings.

>Event interval<

Available settings: 1 min, 2 min and 5 min

>New total<

Here either the flow rate can be reset to "0" or a new (basic) value for the flow rate can be set. This may become necessary after transmitter replacement or as soon as the parameters for a new measurement place need to be adjusted.

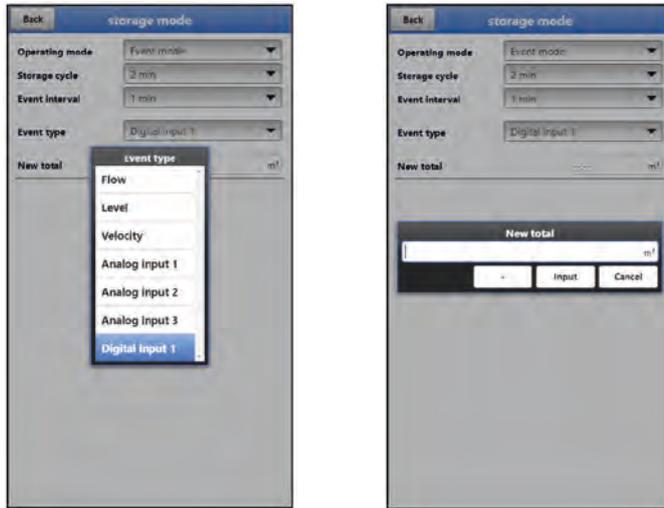


Fig. 40-13 Event types / New total

41 Parameters Menu Communication

This menu is used to set up communication with the display and operation module (smartphone, tablet, notebook etc.) or other devices.

The transmitter communicates via WLAN and GPRS.

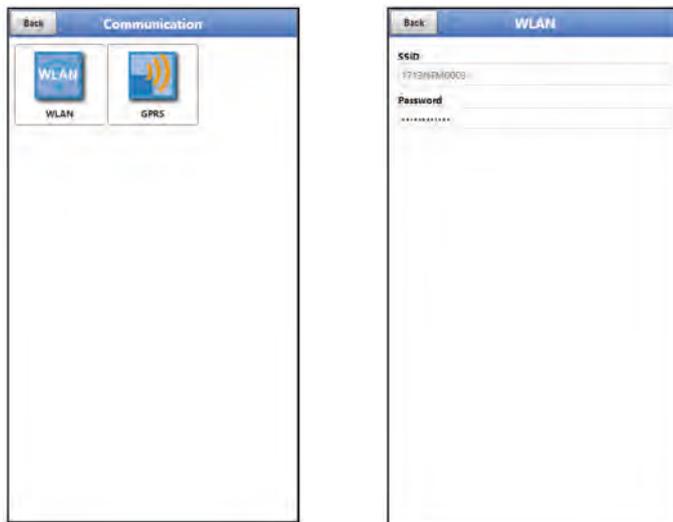


Fig. 41-1 Menu – Communication

Under **>WLAN<** there is information on SSID and the WLAN password available which can be modified.

➡ To change the WLAN password see chapter "35.2 Change WLAN Password".

Prepare the device for data transmission

Use the button **>Start data transmission<** to cause the NivuFlow Mobile to transmit data to the NIVUS WebPortal where the data can be selected/shown. To indicate the according measurement place correctly on the overview map in the NIVUS WebPortal featuring the respective GPS coordinates it is necessary to correctly set these specifications once. There is no automatic update during measurement operation.

Precondition

The device shall be positioned so as to have an unobstructed view to the sky, i.e. best before being located within a shaft or a room.

Procedure:

1. Start the modem under >Modem state<.
2. Wait until the device has found and entered the correct GPS coordinates (latitude/longitude) in the menu (see Fig. 41-3 pict. 2). This may take up to several minutes.
The measurement place will be not correctly indicated in the NIVUS WebPortal overview map without the GPS coordinates. In any event, data will be assigned to the right measurement place, however.
3. Use the >Start data transmission button to transmit data once and to make sure that the connection has been set up successfully and GPS coordinates are transmitted.
Then the NivuFlow Mobile can be positioned in its planned installation place.

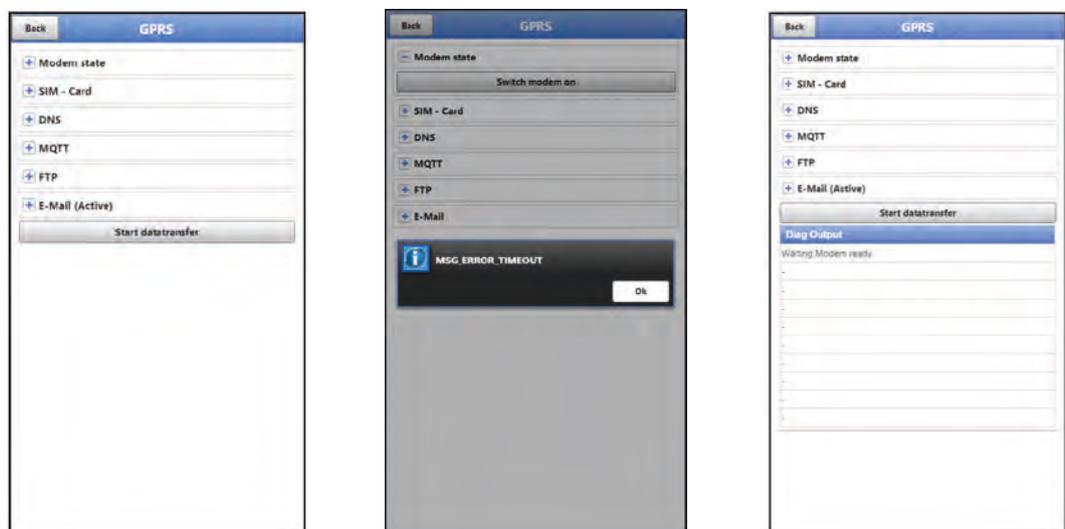


Fig. 41-2 GPRS menu / Modem error message / Diag Output

Set up and adjust the data remote transmission in the >GPRS< menu.

After **inserting the SIM card** the following submenus can be used. Without the SIM card the message "ERROR" or "MSG_ERROR_TIMEOUT" is shown and an according message is indicated in >Diag Output< too.

- >Modem state<
 - >Switch modem on<: Modem and SIM are initialised and current network status is displayed (signal strength, net, frequency band, operator, longitude, latitude, height over sea level, number of satellites and the latest GPS data).
 - >Test connection<: A test connection can be set up after a successful start. During this procedure >Diag Output< indicates a current status info.

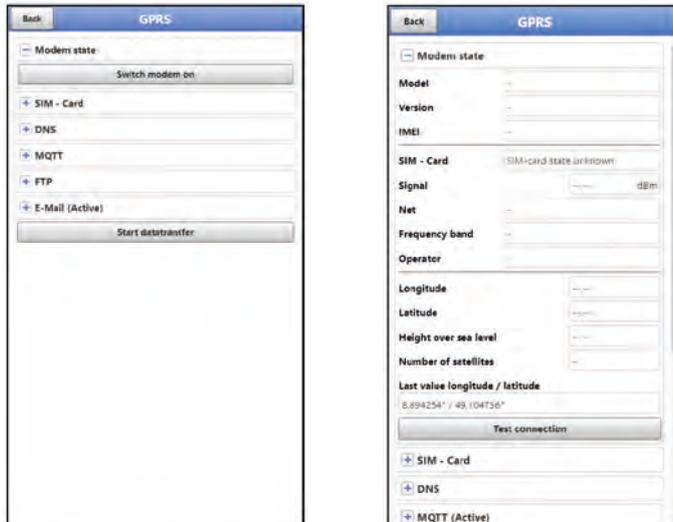


Fig. 41-3 Modem state / SIM-Card state

- **>SIM-Card<**

- **>Get state<**: The PIN verification status is queried and indicated.
 - Enter the according PIN as soon as the PIN check is active.
 - The field may be left empty if the PIN check is not active.
- **>Activate pin check<**:
 - To activate enter the PIN and select **>Change Pin<**.
 - To change the PIN with the PIN check active enter the new PIN and then select **>Change Pin<**.
 - If the PIN is entered incorrectly three times, the value must be entered using the SIM-card PUK and a new PIN needs to be specified.
- **>Provider<**: selection of providers; available are NIVUS Autodetect, T-Mobile Deutschland, Vodafone Deutschland, O2, NIVUS, NIVUS Vodafone and User defined;
 - If user defined is selected enter the provider access data: APN (Access Point Name) and, if required, user name, password and IP address.

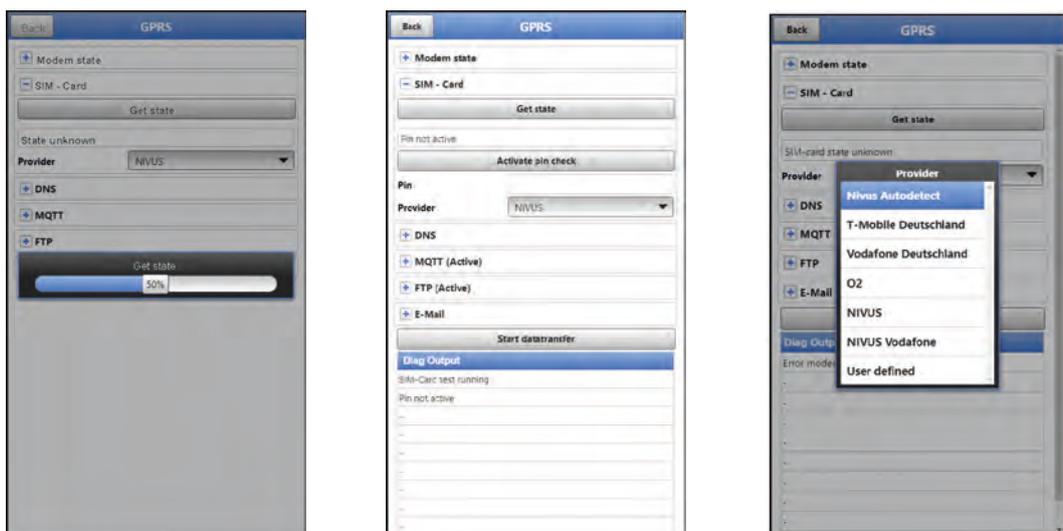


Fig. 41-4 SIM-Card

- **>DNS<**: Names will be normally assigned automatically (default setting); if the provider requires a certain DNS please enter accordingly.



Fig. 41-5 DNS / MQTT

Default setting for data transmission: Transmission to WebPortal (MQTT).

Access data can be requested from NIVUS via E-mail.

If you wish to use a transmission option other than the pre-set option (>FTP< or >E-mail<), the MQTT transmission must be activated first and then the alternative must be activated.

- **>MQTT<**

Transmission to NIVUS WebPortal; alternatively the MQTT protocol can be used to set up a direct connection to customer systems, in such cases contact the NIVUS customer centre.

- Check the according box if the transmission shall be executed via MQTT. The settings for transmission to the NIVUS WebPortal are preconfigured.
- SSL encryption can be selected optionally.
- **>Data<**: Choose the data depth to transmit (Standard, Extended and Expert) (see chapter “39.3 Menu Data memory”).
- **>Time<**: Specify the time of daily transmission.
- **>Cycle time<**: Set the transmission cycle in hours (1, 2, 3, 4, 6, 8, 12 or 24h).
- **>Test settings<**: Use this menu to verify the settings, the results can be viewed in >Diag Output<.
- **>Start data transmission<**: Data (error information, archived data and current values) is transmitted, the result is issued on >Diag Output<.



Follow the procedure described in “Prepare the device for data transmission” on page 110.

- **>FTP<**

Transmission to customer FTP server or to D2W data portal.

- For transmission to FTP server check the according box.
- **>Server<**: Enter server name or IP.
- **>Port<**: FTP-Port eintragen (Standard 21).
- SSL encryption can be selected optionally.
- **>Authentication<** (option): Activate if the FTP access is user and password protected and specify user as well as password.
- **>Destination folder<**: Specify the destination directory where files are to be saved.

- **>Device to Web<**: Activate in case of transmission to D2W; a format compatible to Device to Web will be used.
- **>File format<** (if Device to Web is not active): Available formats are csv and txt.
- **>Data<**: Specify the data depth to transmit (Standard, Extended and Expert) (see chapter “39.3 Menu Data memory”).
- **>Time<**: Specify the time of regular transmissions; the time specified serves as start time for the cyclic transmissions.
- **>Cycle time<**: Set the transmission cycle in hours (1, 2, 3, 4, 6, 8, 12 or 24h)
- **>Test settings<**: Use this menu to verify the settings, the results can be viewed in >Diag Output<.
- **>Start data transmission<**: Data (error information, archived data and current values) is transmitted, the result is issued on >Diag Output<.

➡ Follow the procedure described in “Prepare the device for data transmission” on page 110.



Fig. 41-6 FTP / E-mail

- **>E-Mail<**
Transmission (Alert-e-mails too) to an e-mail address.
The access data >SMTP server<, >User name< and >Password< are available from your e-mail provider.
 - Check the according box for transmission to an e-mail address.
 - **>E-Mail address<**:
 - >From<: E-mail sender address (must be accepted by SMTP server)
 - >To<: E-mail destination address
 - **>SMTP-Server<**: Specify e-mail server name (e.g. mail.gmx.net). Provider must support SMTP (Simple Mail Transfer Protocol).
 - **>Port<**: Enter the port of the SMTP outgoing mail server.
 - SSL/TLS encryption can be selected optionally.
 - **>Username<**: E-mailbox user name.
 - **>Password<**: Enter the password of the e-mailbox.
 - **>Device to Web<**: Activate in case of transmission to D2W; a format compatible to Device to Web will be used.
 - **>File format<**: Available formats are csv and txt.

- **>Data<**: Specify the data depth to transmit (Standard, Extended and Expert) (see chapter “39.3 Menu Data memory”).
- **>Time<**: Specify the time of regular transmissions; the time specified serves as start time for the cyclic transmissions.
- **>Cycle time<**: Set the transmission cycle in hours (1, 2, 3, 4, 6, 8, 12 or 24h).
- **>Test settings<**: Use this menu to verify the settings, the results can be viewed in >Diag Output<.
- **>Start data transmission<**: Data (error information, archived data and current values) is transmitted, the result is issued in >Diag Output<.

➡ Follow the procedure described in “Prepare the device for data transmission” on page 110.

42 Parameter Menu Display

Use the display menu to determine main screen attributes.
Variable settings:

- Names of the five main screen output fields
- Decimal places of individual values



Fig. 42-1 Main screen and output fields

Output Fields

The five main screen output fields (Flow, Level, Velocity, Expected runtime and Total) can be specified freely in terms of name and the number of decimal places.



Assignment of values and output fields

The **assignment** of values and fields **cannot** be changed.

Example: the “Flow” field will **always** indicate output values even if the name should be changed to “Temperature”.

➡ Procedure to **change the name**:

1. Drop down the desired output field.
2. Uncheck >Standard Name<.

3. Specify the new name. The name can be selected freely, however more than 16 characters will not be accepted.
The new name **does not** change the field value in the main screen.
4. Go "Back" several times to save the parameters.



To save parameters see chapter "35.1 Save Parameters".



Procedure to **change the number of decimal places**:

1. Drop down the desired output field.
2. Uncheck >Default Digits<.
3. Specify the new number of digits.
Here you can enter any desired number, however more than a maximum of five digits will not be accepted.
4. Go "Back" several times to save the parameters.



Setting the number of digits

When setting the number of digits observe the measurement accuracy of the sensors and the measurement units set.

Example: the maximum resolution of the temperature sensor is 0.1 K.

43 Parameter Menu Battery (12V)

Use this menu to define the (rechargeable) battery type used as well as the according number of batteries.



Correct Indication of battery capacity

The capacity indication in the >System< / >Information< menu is reliable only as long as fully charged batteries are used and the battery type used as well as the according number of batteries are specified here.

Select from:

- **1x NFM0 ZAPB 1215 (E)**
One NIVUS rechargeable battery installed. The battery specifications are known and available from the software.
Setting the number of the NIVUS batteries used enables the correct indication of the battery performance in the >System< / >Information< menu.
- **2x NFM0 ZAPB 1215 (E)**
Two NIVUS rechargeable batteries installed.
- **BATTERIE_MODE_USER**
The capacity [Ah] must be specified to correctly indicate the (rechargeable) battery performance in the >System< / >Information< menu.



Fig. 43-1 Menu battery (12V)

44 Parameter Menu Quick Start

The >Quick Start< parameter menu is subdivided into up to eight pages (depending on the selection for level measurement). Some of the pages are input pages defining the measurement place, v-sensors and other specifications, other pages are read-only pages providing information on sensor mounting data, signal strength and more.

➡ The parameter setting procedure is described in chapter “36 Parameter Setting using Quick Start”.

44.1 Menu >Quick start< / >Region settings<



Fig. 44-1 Region settings

The following settings can be configured in >Region settings<:

- (Operation) Language
- Date format
- Units and Data units
- Change/synchronise system time and time zone
- Storage mode

- Operating mode
- Storage cycle
- (Event interval)
- (Event type)

The settings are explained in greater detail in chapters “40.2 Menu Region settings”, “40.3 Menu Time/Date” and “40.6 Menu Storage mode”.

44.2 Menu >Quick start< / >Measure place<

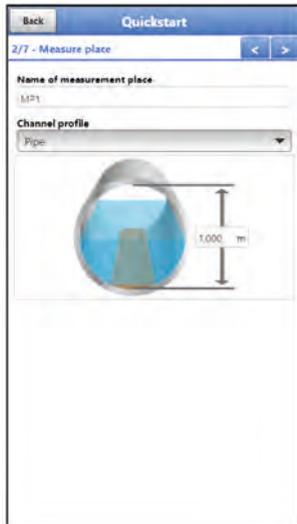


Fig. 44-2 Measure place

Use the >Measure Place< menu to adjust the parameters below:

- Name of measurement place
- Channel profile and dimensions

The individual settings are explained in greater detail in chapter “38.1 Menu Measure Place”.

44.3 Menu >Quick start< / >h-Sensors<



Fig. 44-3 h-Sensors

In >h-Sensors< select the level sensors and set the according parameters.

Setting >Fixed value< for level measurement increases the total number of quick start pages from 7 to 8 since analog input 1 is added.

The individual settings are explained in greater detail in chapter “38.1 Menu Measure Place”.

44.4 Menu >Quick start< / >v-Sensor 1<



Fig. 44-4 v-Sensor 1

In >v-Sensor 1< the parameters below can be selected and adjusted:

- Sensor type
- Dimensions and data for sensor mounting
- Setting of v-Minimum / v-Maximum
- Limit values for v-determination low levels

The individual settings are explained in greater detail in chapter “38.3 Menu v-Sensor 1”.

44.5 Menu >Quick start< / >Analog input x<

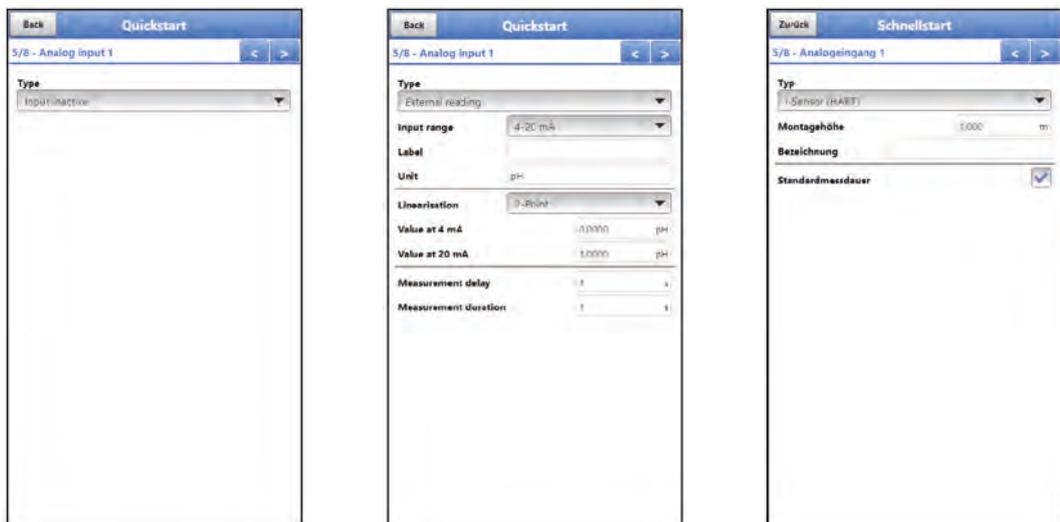


Fig. 44-5 Analog input

In >Analog Input 1< (available only if a fixed value is specified for level measurement), >Analog Input 2< and >Analog Input 3< the according parameters can be set for:

- External reading
- i-Sensor (HART) (for Analog input 1 only)

The individual settings are explained in greater detail in chapter “38.4.1 Analog Inputs”.

44.6 Menu >Quick start< / >Digital input 1<

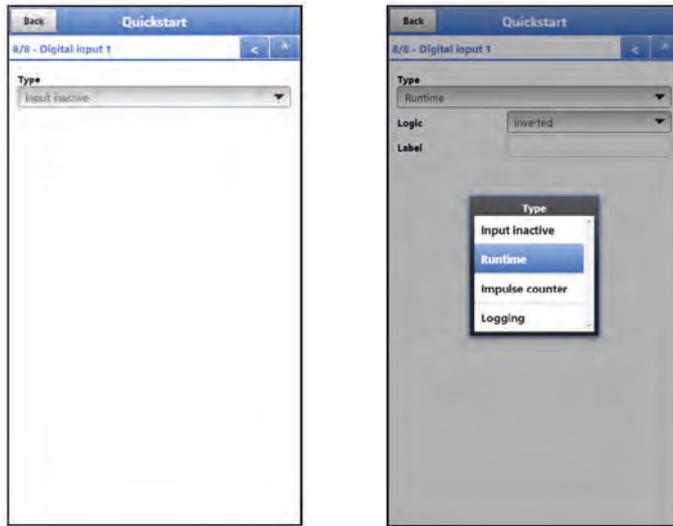


Fig. 44-6 Digital input 1

Under >Digital input 1< the parameters below are set:

- Runtime
- Impulse counter
- Logging

The individual settings are explained in greater detail in chapter “38.4.3 Digital Inputs”.

45 Parameter Menu Alert

The alert menu includes up to eight subsections: >Flow<, >Level<, >Velocity<, >Air temperature<, >Battery (12V)<, >Analog input 1<, >Analog input 2<, >Analog input 3< and >Digital input<.

The subsections are indicated only if the analog and digital inputs have been assigned to a certain type in >Application< and hence were activated previously (see chapters “38.4.1 Analog Inputs” and “38.4.3 Digital Inputs”).



Details on alarm management, alarm messages, alarm overview, status information etc. going beyond this instruction manual, can be found also in the NIVUS WebPortal handbook.

45.1 Menu >Alert< / >Flow<

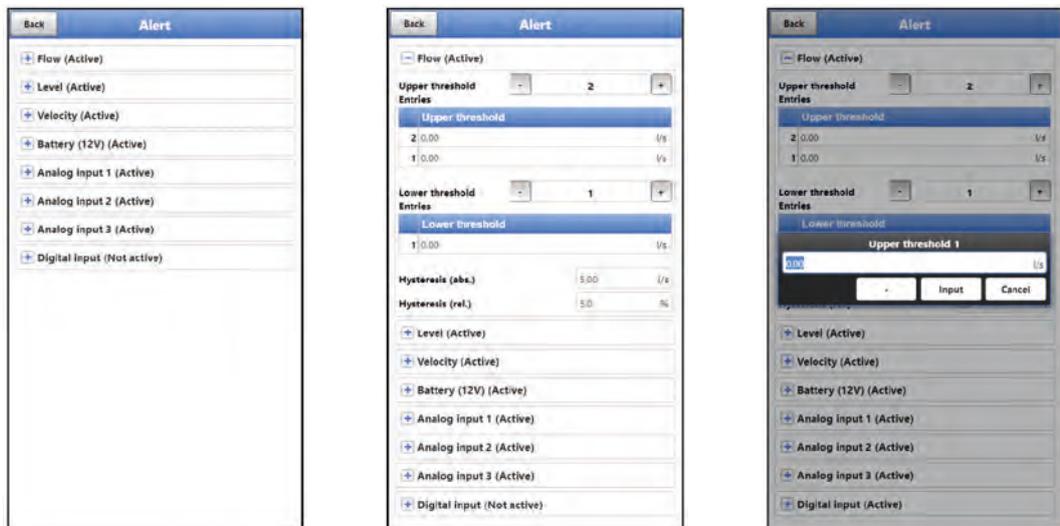


Fig. 45-1 Flow

The >Flow< subsection permits to specify up to five different limit values by using the “+” and “-” keys in >Upper threshold Entries< and in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): values and units depend on the language settings previously adjusted

Hysteresis (rel.): 5.0 %

45.2 Menu >Alert< / >Level<

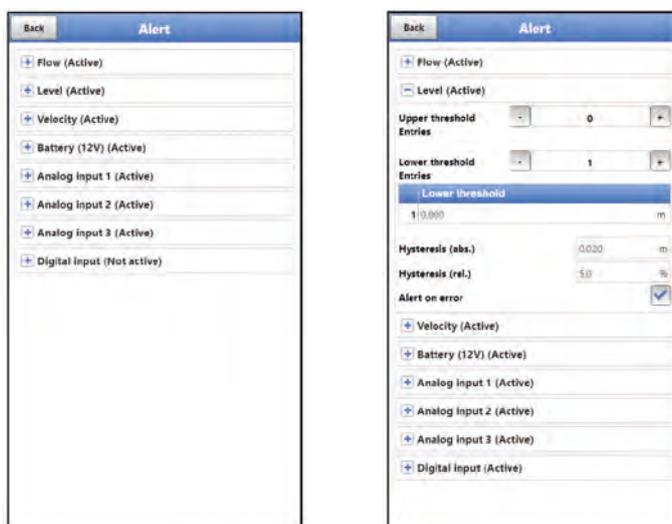


Fig. 45-2 Level

The >Level< subsection permits to specify up to five different limit values by using the “+” and “-” keys in >Upper threshold Entries< and in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): values and units depend on the language settings previously adjusted
Hysteresis (rel.): 5.0 %

Moreover, the >Alert on error< option can be checked causing an active ongoing alert to send an alarm e-mail (only in connection with NIVUS WebPortal). Possible errors are cable breaks, interruptions, short circuits etc.

45.3 Menu >Alert< / >Velocity<

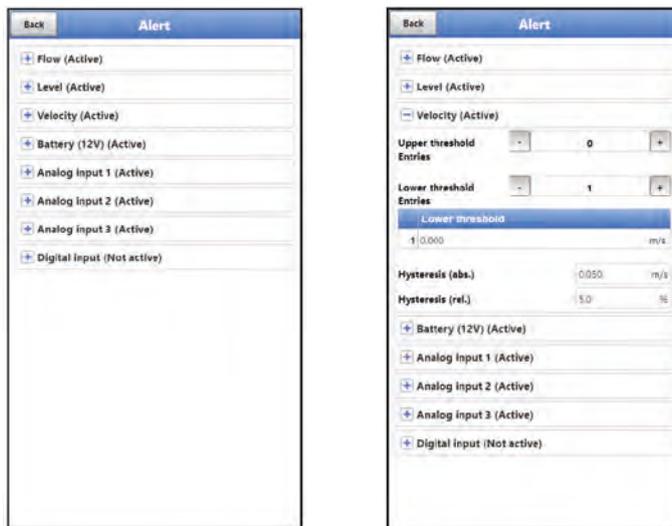


Fig. 45-3 Velocity

The >Velocity< subsection permits to specify up to five different limit values by using the “+” and “-” keys in >Upper threshold Entries< and in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): values and units depend on the language settings previously adjusted
Hysteresis (rel.): 5.0 %

45.4 Menu >Alert< / >Air temperature<

The >Air temperature< subsection permits to specify up to five different limit values by using the “+” and “-” keys in >Upper threshold Entries< and in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): 5,0 %

Hysteresis (rel.): 5,0 %

45.5 Menu >Alert< / >Battery (12V)<

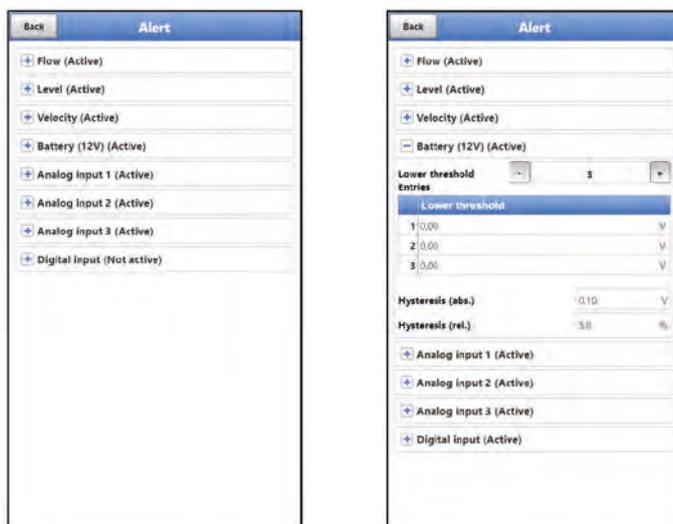


Fig. 45-4 Battery (12V)

The >Battery (12V)< subsection permits to specify up to five different limit values by using the „+“ and „-“ keys in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): 0.10 V

Hysteresis (rel.): 5.0 %

45.6 Menu >Alert< / >Analog Input 1<

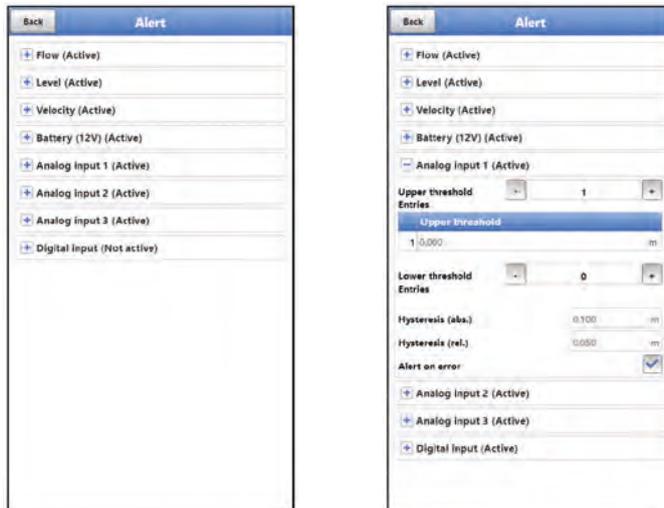


Fig. 45-5 Analog Input 1

The >Analog Input 1< subsection permits to specify up to five different limit values by using the “+” and “-” keys in >Upper threshold Entries< and in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): any value can be set, manual input while setting the analog input parameters

Hysteresis (rel.): any value can be set, manual input while setting the analog input parameters

Moreover, the >Alert on error< option can be checked causing an active ongoing alert to send an alarm e-mail (only in connection with NIVUS WebPortal). Possible errors are cable breaks, interruptions, short circuits etc.

45.7 Menu >Alert< / >Analog Input 2<

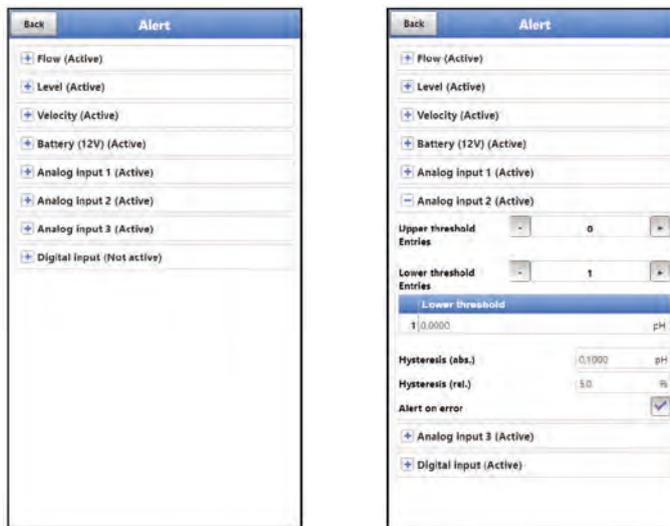


Fig. 45-6 Analog Input 2

The >Analog Input 2< subsection permits to specify up to five different limit values by using the “+” and “-” keys in >Upper threshold Entries< and in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): any value can be set, manual input while setting the analog input parameters

Hysteresis (rel.): 5.0 %

Moreover, the >Alert on error< option can be checked causing an active ongoing alert to send an alarm e-mail (only in connection with NIVUS WebPortal). Possible errors are cable breaks, interruptions, short circuits etc.

45.8 Menu >Alert< / >Analog Input 3<

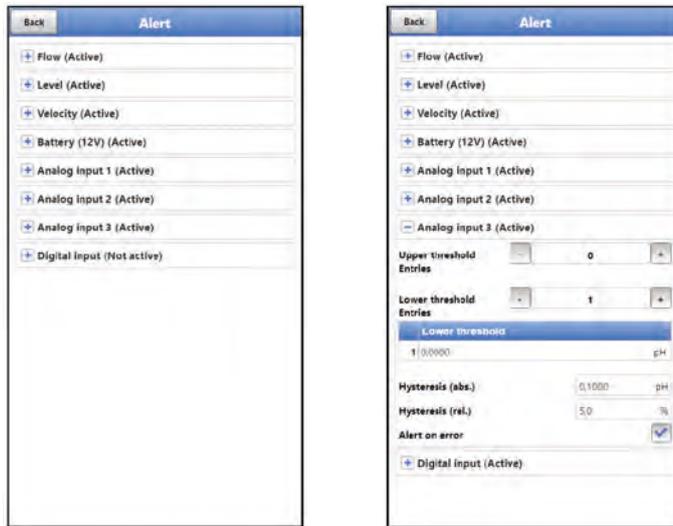


Fig. 45-7 Analog Input 3

The >Analog Input 3< subsection permits to specify up to five different limit values by using the “+” and “-” keys in >Upper threshold Entries< and in >Lower threshold Entries< each of which is used to trigger an alarm e-mail (only in connection with NIVUS WebPortal).

Define the threshold values by clicking the fields and by entering numerical values. The measurement transmitter will sort the specified threshold values in decreasing order. This is made independent from the input sequence.

In >Hysteresis (abs.)< and >Hysteresis (rel.)< values can be specified by clicking and typing. The measurement transmitter evaluates both values and sends an e-mail (only in connection with NIVUS WebPortal) on reaching the highest top limit (highest possible value) and the lowest bottom value (lowest possible value). This mail includes the information that the alert is cancelled.

Default settings:

Hysteresis (abs.): any value can be set, manual input while setting the analog input parameters

Hysteresis (rel.): 5.0 %

Moreover, the >Alert on error< option can be checked causing an active ongoing alert to send an alarm e-mail (only in connection with NIVUS WebPortal). Possible errors are cable breaks, interruptions, short circuits etc.

45.9 Menu >Alert< / >Digital Input<

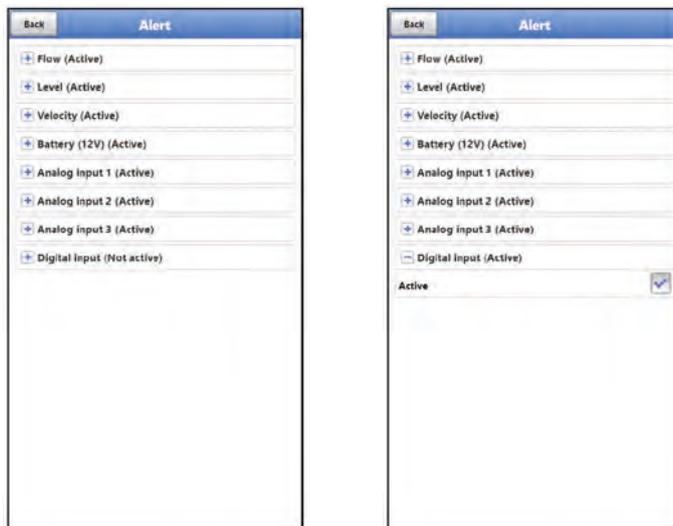


Fig. 45-8 Digital Input

Click the >Digital Input< checkbox in order to activate alarm e-mails (only in connection with NIVUS WebPortal) in case of digital “Highs” on the digital input.

Default setting: unchecked

Diagnostics

46 Diagnostics Menu Principles



Fig. 46-1 Diagnostics

The >Diagnostics< menu can be found in the >Application< menu and is split into five sub-menus.

This menu and all its submenus are read-only and simulation menus.

This section permits to view or to simulate settings on the areas below:

- h-Sensors
- v-Sensors
- Inputs/Outputs
- Signal analysis
- Simulation



Observe the safety information on simulation

Necessarily observe the safety information on simulation on page 130.

47 Menu Diagnostics h-Sensors

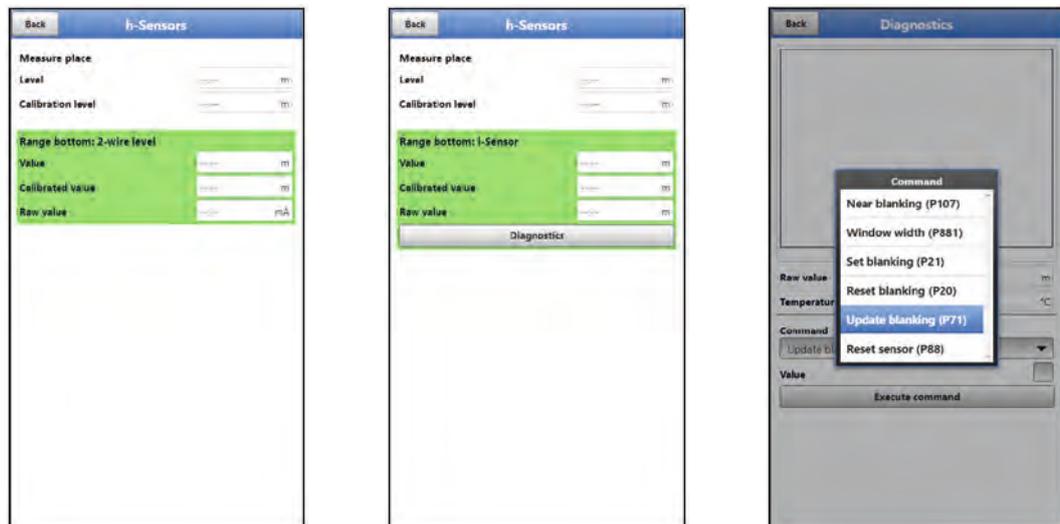


Fig. 47-1 Diagnostics h-Sensors

This menu has a relation to the menu >Applications</>h-Sensors</>.

➡ See chapter “38.2 Menu h-Sensors”.

The Diagnostics screen shows the current level. The adjustment height can be set and must be confirmed with OK. The adjustment height is equal to the offset and is normally specified when the h-sensor parameters are set.

Depending on which sensors are selected the value, the calibrated value or the raw value are indicated.

- Value: issued value
- Calibrated value: corrected used value
- Raw value: real measured value

Moreover it is possible (depending on the connected/selected sensor type) to execute various commands with the >Diagnostics< button such as “Near blanking”, “Window width”, “Set blanking”, “Reset blanking”, “Update blanking” and “Reset sensor” in this menu.

48 Menu Diagnostics v-Sensor

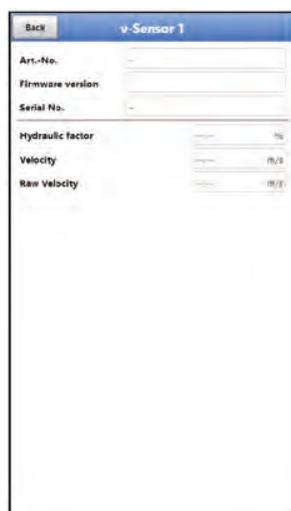


Fig. 48-1 Diagnostics v-Sensor

This menu is required only for analytical purposes.

In case of errors or problems with the flow measurement and the evaluation various factors can be used in order to determine the cause.

The following points are shown:

- v-Sensor information: article number, firmware version and serial number
- **>Hydraulic factor<**
The hydraulic factor describes the correction factor determined by the system for the particular measurement situation. This correction factor is subject to various conditions and is represented here for information only. It cannot be modified in diagnostics menu. NIVUS provide technical support on request here.
- **>Velocity<**
Indication of flow velocity output
- **>Raw Velocity<**
Indication of measured real flow velocity

49 Menu Diagnostics Inputs/Outputs

49.1 Important Information on the Simulation

DANGER



Personal injury and damage caused by improper simulation handling

The simulation will directly affect following plant sections. Disregarding may lead to personal injury or damage your facility.

The simulation shall be executed by trained electricians only who shall have sound knowledge on the entire control procedures of the according facility.

Prepare the simulation process carefully!

- Switch the following systems to manual operation.
- Disable actuating drives and similar or limit the according functions.

It is absolutely necessary to have a safety person available!

DANGER



Effects on plant sections

The simulation of NivuFlow Mobile outputs will directly affect any following plant sections without any safety locking measures.

Observe the hints contained within the above warning!



Important Note

NIVUS herewith in advance refuse any responsibility for any possible damage to persons or objects at any extent due to the extremely high risk of danger and unforeseeable consequences in the event of incorrect or faulty simulation!

This menu is divided in analog inputs, analog outputs, digital inputs and digital outputs.

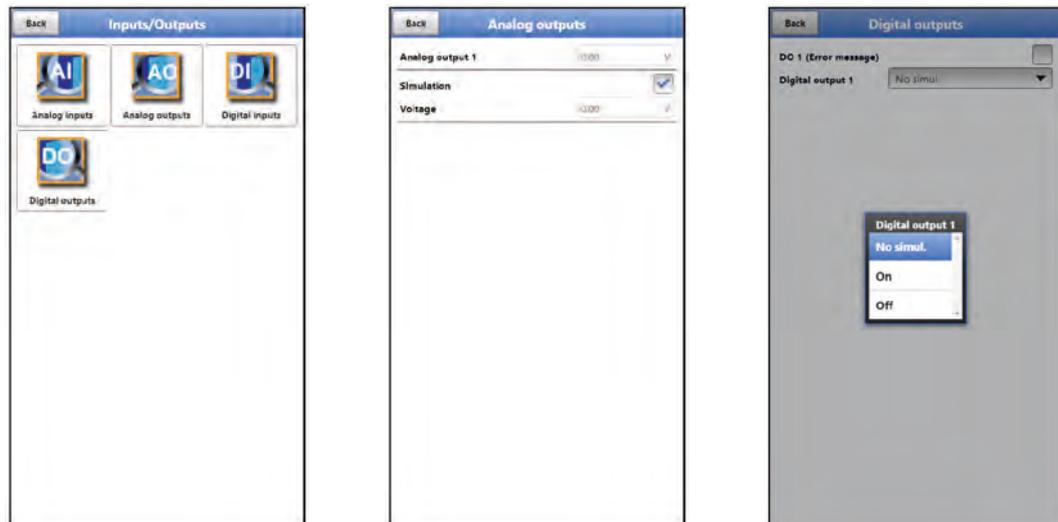


Fig. 49-1 Diagnostics Input/Output

- **>Analog Inputs<**
Indicates the applied current values on the according analog inputs.
- **>Analog Outputs<**
Indicates the applied voltage value.
By checking the **Simulation** box it is possible to simulate a voltage (Fig. 49-1 pict. 2).

Necessarily observe the previous safety information on the simulation and the possible risks (effects on following plant sections) on page 130!

- **>Digital Inputs<**
Signals oncoming at the digital inputs are indicated by a checked/unchecked box.
- **>Digital Outputs<**
Active digital outputs are checked.



Actual state of relay

The actual state of the real relay cannot be indicated, but only the signal transmitted to the relay.

This menu cannot be used to obtain information on external faulty wiring.

A **Simulation** of the digital output can be executed by either selecting **>No Simulation<**, **>On<** or **>Off<** (Fig. 49-1 pict. 3).

Necessarily observe the previous safety information on the simulation and the possible risks (effects on following plant sections) on page 130!

50 Menu Diagnostics Signal Analysis

This menu is used to scan and to review the incoming signal from the sensor. Moreover the sensor function can be tested here.

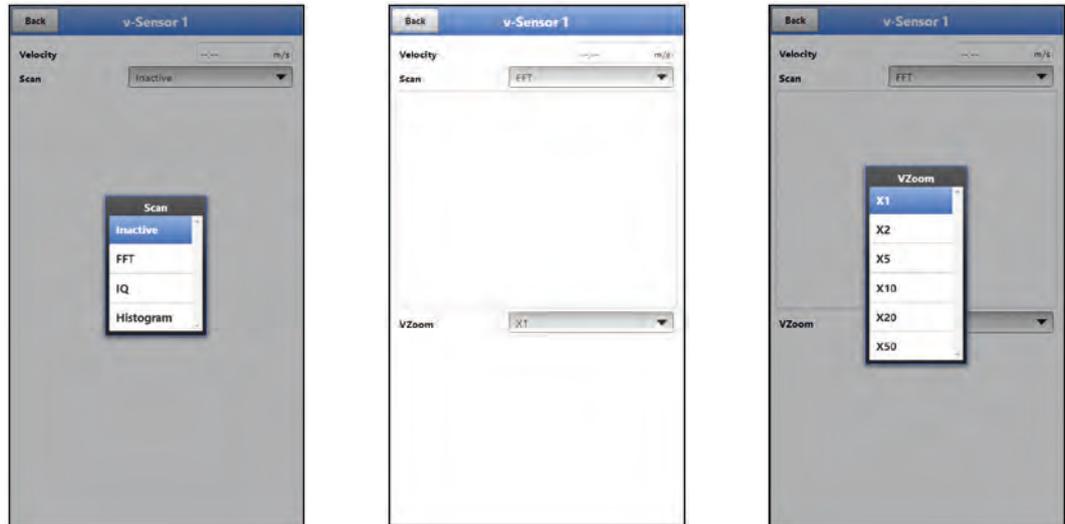


Fig. 50-1 Signal analysis selection menu / FFT / IQ

Select from the options below:

- **>Inactive<**
No signal scan/evaluation.
- **>FFT<** (Fig. 50-1 pict. 2)
Digital signals directly detected by the sensor are split up into their frequency components and are indicated for further analysis e.g. to search frequency interferences; primarily required by service personnel
>VZoom< of chart:
 - X1, X2, X5, X10, X20 and X50
- **>IQ<**
Frequency analysis of received signals by taking calculated curves (sine/cosine) to determine the direction into account; primarily required by service personnel
>VZoom< of chart (Fig. 50-1 pict. 3):
 - X1, X2, X5, X10, X20 and X50

A Fast-Fourier-Transform takes place and the scaling is not available once the **>FFT<** (representation of the frequency spectrum) box is checked.
- **>Histogram<**
Graphic velocity spread to determine the statistically most frequent velocity value; primarily required by service personnel
>VZoom< of chart:
 - X1, X2, X5, X10, X20 and X50

51 Menu Diagnostics Simulation

DANGER



Effects on plant sections

The simulation of NivuFlow Mobile outputs will directly affect any following plant sections without any safety locking measures.

Observe the hints contained within the warning on page 130!

Stop the simulation with "Back".

This menu allows simulation of theoretical flow. Simulation is carried out by entering assumed level and velocity values. These values **do not** really exist.

Use either the >--<, >-<, >+< or >++< fields to enter smaller steps or specify absolute values (higher steps) directly in the >Velocity< field.

- = Decreases the level by 0.01 m or the velocity by 0.01 m/s per step
- = Decreases the level by 0.001 m or the velocity by 0.001 m/s per step
- + = Increases the level by 0.001 m or the velocity by 0.001 m/s per step
- ++ = Increases the level by 0.01 m or the velocity by 0.01 m/s per step

By using the simulated values (based on the channel dimension parameters set) NivuFlow Mobile calculates the prevailing flow.

Choosing >Flow< automatically indicates the calculated value.

>DO 1< shows the currently selected function.

The >Analog Output< option will output the voltage at the previously determined output.



Fig. 51-1 Simulation

Maintenance and Cleaning

WARNING



Disconnect instrument from mains power

Disconnect the instrument from mains power and safeguard the higher system against restart before you begin maintenance works.

Disregarding may lead to electric shocks.

WARNING



Check danger due to explosive gases

Make sure to observe all regulations regarding safety at work as well as danger due to explosive gases prior to beginning mounting, installation and maintenance works. Use a gas warner.

When working in channel systems make sure to avoid electrostatic charge:

- *Avoid unnecessary movements to minimise the risk of static energy accumulating.*
- *Discharge any possible static electricity from your body before you begin to install the sensor.*

Disregarding may lead to personal injury or damage your facility.

WARNING



Germ contamination possible

Due to being frequently used in wastewater applications, some portions of the measurement system may be loaded with hazardous germs. This is why precautionary measures shall be taken while being in contact with cables and sensors.

Wear protective clothing.

52 Maintenance

52.1 Maintenance Interval

The Type NivuFlow Mobile transmitters are conceived to be virtually free of calibration, maintenance and wear.

NIVUS, however, recommend having the entire measurement system inspected by the NIVUS customer service **once per year**.

Depending on the area of use the maintenance intervals may vary. Extent and intervals of maintenance depend on the following conditions:

- Measurement principle of sensors
- Material wear
- Measurement medium and hydraulic conditions
- General regulations for the operators of the measurement facility
- Ambient conditions

In addition to the annual inspection NIVUS recommends a complete maintenance of the measurement system by the NIVUS customer service **after ten years the latest**.

In general, the inspection of instruments/sensors is a basic measure which helps to increase operational safety as well as the lifetime.

52.2 Customer Service Information

For annual inspection of the entire measurement system or complete maintenance after ten years the latest contact our customer service:

NIVUS GmbH – Customer Service

Phone +49 (0) 7262 9191 - 922

Customercenter@nivus.com

53 Cleaning

53.1 Transmitter

WARNING



Disconnect instrument from mains power

Observe to disconnect the transmitter from mains power.

Disregarding may induce the risk of electrical shocks.

DANGER



Danger due to electrostatic discharge

Clean the device only with a damp cloth.

Disregarding invalidates the device's explosion protection due to possible static charge.

In such a case the unit poses a threat to the user's life and may cause an ignition in an explosive atmosphere.

When closed and locked the NivuFlow Mobile enclosure complies with IP68 protection degree and hence is less sensitive. **Do not** use high-pressure cleaners however.

Do not use sharp cleansing agents or solvents. Light household cleaners or soapy water can be used instead.

53.2 Power Adapter / Battery Charger

Clean power adapter/battery charger and charging tray only with a **slightly damp** cloth. The components are not protected against the ingress of moisture.

53.3 Sensors

Information on how to maintain and to clean the sensors shall be necessarily observed. Such information can be found in the according technical description or instruction manual.

Technical descriptions or instruction manuals are part of the sensor delivery.

54 Dismantling/Disposal

Improper disposal may be harmful to the environment.

- ➡ Always dispose equipment components and packaging materials according to applicable local regulations on environmental standards for electronic products:
 1. Disconnect the instrument from mains power.
 2. Remove connected cables.
 3. Remove batteries and if defect dispose accordingly.
 4. Remove the transmitter's buffer battery and separately dispose accordingly.



EC WEEE-Directive

This symbol indicates that the Directive 2012/19/EU on waste electrical and electronic equipment requirements shall be observed on the disposal of the equipment. NIVUS GmbH supports and promotes the recycling and environmentally friendly, separate collection/disposal of waste electrical and electronic equipment in order to protect the environment and human health. Observe the local disposal regulations and laws. NIVUS GmbH is registered with the EAR, therefore public collection and return points in Germany can be used for disposal.

The unit contains a buffer battery (Lithium coin cell), which must be disposed separately.

55 Installation of spare parts and parts subject to wear and tear

We herewith particularly emphasise that replacement parts or accessories not supplied by NIVUS moreover are not certified and approved by NIVUS too. Installation and/or the use of such products hence may negatively influence predetermined constructional characteristics of the measurement system or even lead to instrument failures.

NIVUS cannot be held responsible for any damage resulting due to the use of non-original parts and non-original accessories.

56 Accessories

NFM0 ZAPB 1215	Rechargeable battery pack with sockets; nominal voltage: 12 V; capacity: 15 Ah
NFM0 ZAPB 1215 E	Rechargeable battery pack with sockets for NFM with ATEX approval zone 1; nominal voltage: 12 V; capacity: 15 Ah
NFM0 ZLAD	Power adapter/battery charger for NFM / NFM battery pack; supply voltage: 100...240 V AC, 50/60 Hz
NFM0 ZVER PS	2-wire connection cable for external power supply connection to NFM (one side with plug for multifunction socket, other side with open cable ends); cable length 5 m
NFM0 ZAB 01	Display and operation module for NFM: IP67-certified 8" outdoor tablet; resolution: 1280x800; operating system: Android; device communication: WLAN; other communication modes: USB, Bluetooth, modem 2G, 3G and 4G
NFM0 ZVER AEA	Connection cable, NFM analog input; supplied by NFM (one side with plug for multifunction socket, other side with open cable ends); cable length 10 m
NFM0 ZVER DE	Connection cable, NFM digital input (one side with plug for multifunction socket, other side with open cable ends); cable length 10 m
NFM0 ZVS1	Connector box, IP67 with NFM connection plug for connection to NFM

<i>ZUB0 KAB NMC 10</i>	2-pole, preconfigured cable with open cable ends for connection to Connector Box; cable length 10 m
<i>ZUB0 KAB NMC 20</i>	2-pole, preconfigured cable with open cable ends for connection to Connector Box; cable length 20 m
<i>ZUB0 KAB NMC 30</i>	2-pole, preconfigured cable with open cable ends for connection to Connector Box; cable length 30 m
<i>NFM0 ZSBL IRE</i>	Hoop guards (pair), for protection of connection sockets and to fasten the Connector box on the NFM
<i>NFM0 ZHAK NFM 01</i>	Suspension bracket to fasten the NFM on step irons incl. brackets for suspension of sensor cables; material: stainless steel 1.4571
<i>NFM0 ZHAK NFM 02</i>	Suspension bracket to fasten the NFM on step irons; material: stainless steel 1.4571
<i>NFM5 GUMMI PUFFER</i>	Rubber buffers, set of 4 pcs.
<i>NFM0 Z ANT1</i>	NFM GPRS T-Shape antenna Ex-It GSM/3G, cable length 2.5 m, for connection to NFM with GPRS data remote transmission
<i>ZUB0 NFM SCHLOSS</i>	Padlock for Ex-version transmitter (to secure the device when used in Ex areas)
<i>ZUB0 NFM MAGNET</i>	Solenoid (magnet) for NFM/NFS
<i>BSL0 EP 220-20</i>	EnerPro 220 Tr / 20kA, overvoltage protection for power lines
<i>BSL0 EP 220-5</i>	EnerPro 220 Tr / 5kA, overvoltage protection for power lines
<i>BSL0 DP 2X12/12</i>	DataPro 2x1-12V/12V-11µH-Tr(N), 20.000 A leakage current, 2-wired for sensor lines

Table 8 Spare parts and accessories



You can find more accessories in the valid NIVUS price list.

Index

3	3D-View	83
A		
Accessories.....	136	
Accident level.....	14	
Air freight.....	21, 22	
Alert.....	120	
Antenna.....	43	
Approvals.....	142	
Ex.....	26	
others.....	26	
Article number.....	24, 27, 74, 100	
Automatic data transmission.....	68	
B		
Basic menus	56	
Battery		
runtime.....	64	
Battery capacity		
battery.....	116	
Battery charger	12, 26, 35, 36, 37, 38, 42, 136	
Battery charging status.....	100	
Battery compartment		
charging.....	34, 37, 38	
discharging	34, 37, 38	
Battery life.....	36	
Battery type.....	34, 116	
Branches.....	2	
Buffer battery	16	
C		
Cable		
sensor connection.....	39	
Calming section	39	
Capacity	36	
battery.....	116	
Capacity indication		
battery.....	76	
Certificates.....	142	
Certification of intrinsic safety.....	18	
Channel profiles.....	78	
Channel shape.....	39	
Charge capacity		
rechargeable battery.....	36	
Charging tray	35, 36	
Cleaning.....	16, 19, 134, 135	
Codes.....	141	
Colour code		
wires	11	
Commissioning example.....	57	
Compress.....	99	
Connectable sensors	24	
Connection sockets.....	32	
Connections	11, 19, 22	
Connector box.....	22, 41, 136	
Continuous event mode.....	109	
Continuous operation.....	109	
Copyright.....	3	
Credits.....	141	
Current measurement data	94	
Customer service	135	
Cycle mode	109	
D		
Damping.....	84	
Data transmission	26, 27, 43	
Data transmission, automatic	68	
Date.....	103	
Delete storage.....	99	
Delivery	21	
Device construction.....	23	
Device identification	24	
Device types	27	
Diagnostics	93, 128	
h-Sensors.....	129	
Inputs/Outputs	130	
principles.....	128	
signal analysis	132	
simulation.....	133	
v-Sensor.....	129	
Digital Inputs	91	
Digital Outputs	92	
Dismantling	136	
Display		
overview.....	54	
Disposal	19, 136	
battery.....	37	
materials	19	
products	19	
Document modifications.....	4	
Doppler principle	29	
Download	10, 99	
E		
EC WEEE-Directive	136	
Enclosure	26	
Enclosure dimensions.....	24	
Error messages.....	56, 74, 104	
Event interval	109	
Event mode.....	109	
Explosive gases	15, 31, 134	

F	
FFT	132
Firmware version	100
G	
Gaskets	
on the enclosure cover	32
Germs	16, 134
GPRS	111
antenna	43
DNS	112
E-mail	114
FTP	113
Modem state	111
MQTT	113
SIM-Card	112
H	
h suppressed	84
Hoop guards	22
Hotline	44
Humidity	26
I	
In-/Outputs	
Connector box	41
single external connection	41
Installation	31
level sensor	39
radar sensor	39
Installation place	31
Interface	
mobile communications	43
USB	11, 18, 23, 68, 97
Interfaces	13
communication	56
Internal buffer battery	103
K	
Keep the manual	19
L	
Language of the country	3
Laws on wastes	19
Liability disclaimer	17
Licenses	141
Load parameters	99
Low-flow suppression	83
M	
Maintenance	134
Maintenance Interval	134
Measurement principle	26
N	
Nameplate	19, 24
Names	3
New total	110
NIVUS addresses	2
O	
Operating elements	12
Operating life	26
Operating mode	26, 69, 109, 118
Operating range	29
Operating temperature	26
Operation	
in areas tending to overflow	32
Overview	23
Overvoltage Protection Measures	40
P	
Parameter reset	105
Parts subject to wear and tear	136
Place of installation	39
Power adapter	35, 36, 38, 42, 136
Power failure	103
Power supply	26
Powerdown	105
Predicted runtime	64
Product constuction	23
Property rights	3
Protection	26
Protection degree	32, 135
Protective conductor	15
Provide the manual	19
PU stickers	21, 22, 32
PUK	46, 49, 52, 67, 112
Q	
Q suppressed	84
Qualified expert personnel	10, 33
Qualified personnel	20, 44
Quick start	76, 117
Quick Start	56, 68
R	
Reception inspection	21
Region according language	100
Region settings	76, 100, 117
Repeatedly measure the same measurement place	66
Restart	105
Return	22
Rubber buffers	22, 41, 137
Runtime	64

S		
Safeguards.....	15	
Safety information		
simulation.....	128	
Safety Instructions	14	
Save data to USB	99	
Save parameters	99	
Sell the transmitter	19	
Sensor types.....	39	
Serial number	24, 46, 49, 52, 67, 74	
Service level.....	105	
Service levels.....	104	
Setting up connection		
Android operating system.....	45	
Windows operating system.....	51	
Setting-up connection		
iOS operating system	48	
Signal analysis		
diagnostics.....	132	
FFT	132	
histogram	132	
IQ	132	
Signal strength.....	111	
Signal words, used	14	
Simulation	133	
important information	130	
Solenoid	12	
Spare parts	136	
Specifications.....	26	
SSID.....	67	
Stability	84	
Storage	22	
Storage cycle	26, 109	
Storage temperature.....	26	
Super-PIN	67	
Symbols, used	14	
System time	103	
T		
Time switch.....	103	
Totalising.....	95	
Trained expert personnel.....	16	
Translation	3	
Transport.....	22	
T-shape antenna.....	43	
U		
Universal time UTC.....	103	
USB stick	68, 98	
Use in accordance with the requirements	17	
User's responsibilities	19	
UTC universal time	103	
V		
v suppressed.....	84	
v-Maximum, mounting position	86	
v-Minimum, mounting position	86	
W		
Waking up		
Android.....	45	
iOS	48	
Windows	52	
Warning notices on the product	15	
Wires		
colour code	11	
WLAN.....	110	
WLAN password	66	
Working frequency of radar sensor.....	26	

Credits and Licenses

57 List of references of the licenses and codes used

The transmitter type NivuFlow Mobile uses code of the following Open Source Projects:

- Freetype (<http://www.freetype.org>)
- Libharu (<http://libharu.org>)
- Libjpeg (<http://www.ijg.org>)
- Libpng (<http://www.libpng.org>)
- Zlib (<http://www.zlib.net>)
- Mini-XML (<http://www.msweet.org>)
- Nano-X/nxlib (<http://www.microwindows.org>)
- FLTK (<http://www.fltk.org>)
- Appendix1: LGPL
- Appendix2: MPL



Questions concerning licenses

If you have any questions concerning licenses refer to opensource@nivus.com

Approvals and Certificates

DE / EN / FR	
	EU Konformitätserklärung
	<i>EU Declaration of Conformity</i>
	<i>Déclaration de conformité UE</i>

Für das folgend bezeichnete Erzeugnis:
For the following product:
Le produit désigné ci-dessous:

Bezeichnung:	Portabler Durchflussmessumformer/-datenlogger, Standardausführung NivuFlow Mobile / NivuLevel Mobile
<i>Description:</i>	<i>Portable flow measurement transmitter/data logger, standard version NivuFlow Mobile / NivuLevel Mobile</i>
<i>Désignation:</i>	<i>Débitmètre/enregistreur de données portable, version standard NivuFlow Mobile / NivuLevel Mobile</i>
Typ / Type:	NFM0xxx00 00

erklären wir in alleiniger Verantwortung, dass die auf dem Unionsmarkt ab dem Zeitpunkt der Unterzeichnung bereitgestellten Geräte die folgenden einschlägigen Harmonisierungsvorschriften der Union erfüllen:
we declare under our sole responsibility that the equipment made available on the Union market as of the date of signature of this document meets the standards of the following applicable Union harmonisation legislation:
nous déclarons, sous notre seule responsabilité, à la date de la présente signature, la conformité du produit pour le marché de l'Union, aux directives d'harmonisation de la législation au sein de l'Union:

- 2014/53/EU
- 2011/65/EU

Bei der Bewertung wurden folgende einschlägige harmonisierte Normen zugrunde gelegt bzw. wird die Konformität erklärt in Bezug auf die nachfolgend genannten anderen technischen Spezifikationen:
The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:
L'évaluation est effectuée à partir des normes harmonisées applicable ou la conformité est déclarée en relation aux autres spécifications techniques désignées ci-dessous:

- EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- EN 61326-1:2013
- ETSI EN 301 489-17 V3.2.5
- EN 301 893 V2.1.1 (WLAN)
- EN 62311:2008
- ETSI EN 301 489-1 V2.2.3
- EN 300 328 V2.2.2 (WLAN)
- EN 300 440 V2.2.1 (WLAN)

Diese Erklärung wird verantwortlich für den Hersteller:
This declaration is submitted on behalf of the manufacturer:
Le fabricant assume la responsabilité de cette déclaration:

NIVUS GmbH
Im Taele 2
75031 Eppingen
Germany

abgegeben durch / *represented by / faite par:*
Ingrid Steppe (Geschäftsführerin / *Managing Director / Directeur général*)

Eppingen, den 21.10.2022

Gez. *Ingrid Steppe*

UK Declaration of Conformity

NIVUS GmbH
Im Tale 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

For the following product:

Description:	Portable flow measurement transmitter/data logger, standard version NivuFlow Mobile / NivuLevel Mobile
Type:	NFM0xxx00 00

we declare under our sole responsibility that the equipment made available on the UK market as of the date of signature of this document meets the standards of the following applicable UK harmonisation legislation:

- SI 2017 / 1206 The Radio Equipment Regulations 2017
- SI 2012 / 3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

- BS EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- BS EN 61326-1:2013
- ETSI EN 301 489-17 V3.2.5
- BS EN 301 893 V2.1.1 (WLAN)
- BS EN 62311:2008
- ETSI EN 301 489-1 V2.2.3
- BS EN 300 328 V2.2.2 (WLAN)
- BS EN 300 440 V2.2.1 (WLAN)

This declaration is submitted on behalf of the manufacturer:

NIVUS GmbH
Im Tale 2
75031 Eppingen
Germany

represented by:

Ingrid Steppe (Managing Director)

Eppingen, 21/10/2022

Signed by *Ingrid Steppe*

DE / EN / FR



NIVUS GmbH
 Im Taele 2
 75031 Eppingen
 Telefon: +49 07262 9191-0
 Telefax: +49 07262 9191-999
 E-Mail: info@nivus.com
 Internet: www.nivus.de

EU Konformitätserklärung

EU Declaration of Conformity

Déclaration de conformité UE

Für das folgend bezeichnete Erzeugnis:

For the following product:

Le produit désigné ci-dessous:

Bezeichnung:	"Ex" Portabler Durchflussmessumformer/-datenlogger, Standardausführung NivuFlow Mobile / NivuLevel Mobile
<i>Description:</i>	<i>"Ex" Portable flow measurement transmitter/data logger, standard version NivuFlow Mobile / NivuLevel Mobile</i>
<i>Désignation:</i>	<i>"Ex" Débitmètre/enregistreur de données portable, version standard NivuFlow Mobile / NivuLevel Mobile</i>
Typ / Type:	NFM0xxx0E 0x

erklären wir in alleiniger Verantwortung, dass die auf dem Unionsmarkt ab dem Zeitpunkt der Unterzeichnung bereitgestellten Geräte die folgenden einschlägigen Harmonisierungsvorschriften der Union erfüllen:

we declare under our sole responsibility that the equipment made available on the Union market as of the date of signature of this document meets the standards of the following applicable Union harmonisation legislation:

nous déclarons, sous notre seule responsabilité, à la date de la présente signature, la conformité du produit pour le marché de l'Union, aux directives d'harmonisation de la législation au sein de l'Union:

- 2014/53/EU
- 2014/34/EU
- 2011/65/EU

 
Bei der Bewertung wurden folgende einschlägige harmonisierte Normen zugrunde gelegt bzw. wird die Konformität erklärt in Bezug auf die nachfolgend genannten anderen technischen Spezifikationen:

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

L'évaluation est effectuée à partir des normes harmonisées applicable ou la conformité est déclarée en relation aux autres spécifications techniques désignées ci-dessous:

- EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- EN 301 893 V2.1.1 (WLAN)
- EN IEC 60079-0:2018
- EN 60079-11:2012
- EN 62311:2008
- Draft ETSI EN 301 489-1 V2.2.3
- EN 300 328 V2.2.2 (WLAN)
- EN 300 440 V2.2.1 (WLAN)
- EN IEC 60079-7:2015/A1:2018
- EN 60079-18:2015/A1:2017

Ex-Kennzeichnung / *Ex-designation / Marquage Ex :*



EU-Baumusterprüfbescheinigung / *EU-Type Examination Certificate / Attestation d'examen «UE» de type:*

TÜV 17 ATEX 196722 X issue: 01

Notifizierte Stelle (Kennnummer) / *Notified Body (Identif. No.) / Organisme notifié (N° d'identification)*

TÜV NORD CERT GmbH, Am TÜV 1, 45307 Essen, Germany

(0044)

Diese Erklärung wird verantwortlich für den Hersteller:

This declaration is submitted on behalf of the manufacturer:

Le fabricant assume la responsabilité de cette déclaration:

NIVUS GmbH
Im Taele 2
75031 Eppingen
Germany

abgegeben durch / *represented by / faite par:*

Ingrid Steppe (Geschäftsführerin / *Managing Director / Directeur général*)

Eppingen, den 21.10.2022

Gez. *Ingrid Steppe*

UK Declaration of Conformity

NIVUS GmbH
Im Täle 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

For the following product:

Description:	"Ex" Portable flow measurement transmitter/data logger, standard version NivuFlow Mobile / NivuLevel Mobile
Type:	NFM0xxx0E 0x

we declare under our sole responsibility that the equipment made available on the UK market as of the date of signature of this document meets the standards of the following applicable UK harmonisation legislation:

- SI 2017 / 1206 The Radio Equipment Regulations 2017
- SI 2016 / 1107 The Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016
- SI 2012 / 3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

- BS EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- BS EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- BS EN 301 893 V2.1.1 (WLAN)
- BS EN IEC 60079-0:2018
- BS EN 60079-11:2012
- BS EN 62311:2008
- Draft ETSI EN 301 489-1 V2.2.3
- BS EN 300 328 V2.2.2 (WLAN)
- BS EN 300 440 V2.2.1 (WLAN)
- BS EN IEC 60079-7:2015/A1:2018
- BS EN 60079-18:2015/A1:2017

Ex-designation:

 I 2G Ex eb ib [ib] mb IIB T4 Gb

EU-Type Examination Certificate:

TÜV 17 ATEX 196722 X issue: 01

Notified Body (Identif. No.):

TÜV Nord CERT GmbH, Am TÜV 1, 45307 Essen, Germany

(0044)

This declaration is submitted on behalf of the manufacturer:

NIVUS GmbH
Im Täle 2
75031 Eppingen
Germany

represented by:

Ingrid Steppe (Managing Director)

Eppingen, 21/10/2022

Signed by *Ingrid Steppe*

EU Konformitätserklärung

EU Declaration of Conformity

Déclaration de conformité UE

Für das folgend bezeichnete Erzeugnis:

For the following product:

Le produit désigné ci-dessous:



NIVUS GmbH
Im Taele 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

Bezeichnung:	Portabler Durchflussmessumformer/-datenlogger mit internem Modem zur Datenfernübertragung über GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile
<i>Description:</i>	<i>Portable flow measurement transmitter/data logger with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile</i>
<i>Désignation:</i>	<i>Débitmètre/enregistreur de données portable avec modem interne pour la transmission de données à distance via GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile</i>
Typ / Type:	NFM0xxxG0 Ex

erklären wir in alleiniger Verantwortung, dass die auf dem Unionsmarkt ab dem Zeitpunkt der Unterzeichnung bereitgestellten Geräte die folgenden einschlägigen Harmonisierungsvorschriften der Union erfüllen:

we declare under our sole responsibility that the equipment made available on the Union market as of the date of signature of this document meets the standards of the following applicable Union harmonisation legislation:

nous déclarons, sous notre seule responsabilité, à la date de la présente signature, la conformité du produit pour le marché de l'Union, aux directives d'harmonisation de la législation au sein de l'Union:

- 2014/53/EU
- 2011/65/EU

Bei der Bewertung wurden folgende einschlägige harmonisierte Normen zugrunde gelegt bzw. wird die Konformität erklärt in Bezug auf die nachfolgend genannten anderen technischen Spezifikationen:

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

L'évaluation est effectuée à partir des normes harmonisées applicable ou la conformité est déclarée en relation aux autres spécifications techniques désignées ci-dessous:

- EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- EN 301 893 V2.1.1 (WLAN)
- EN 301 511 V12.5.1 (GSM/2G)
- EN 301 908-2 V13.1.1 (UMTS/3G)
- EN 62311:2008
- EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- EN 300 328 V2.2.2 (WLAN)
- EN 300 440 V2.2.1 (WLAN)
- EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- EN 301 908-13 V13.2.1 (LTE/4G)

Diese Erklärung wird verantwortlich für den Hersteller:

This declaration is submitted on behalf of the manufacturer:

Le fabricant assume la responsabilité de cette déclaration:

NIVUS GmbH
Im Taele 2
75031 Eppingen
Germany

abgegeben durch / *represented by / faite par:*

Ingrid Steppe (Geschäftsführerin / *Managing Director / Directeur général*)

Eppingen, den 21.10.2022

Gez. *Ingrid Steppe*

UK Declaration of Conformity

NIVUS GmbH
Im Tale 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivas.com
Internet: www.nivas.de

For the following product:

Description:	Portable flow measurement transmitter/data logger with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile
Type:	NFM0xxxG0 Ex

we declare under our sole responsibility that the equipment made available on the UK market as of the date of signature of this document meets the standards of the following applicable UK harmonisation legislation:

- SI 2017 / 1206 The Radio Equipment Regulations 2017
- SI 2012 / 3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

- BS EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- BS EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- BS EN 301 893 V2.1.1 (WLAN)
- BS EN 301 511 V12.5.1 (GSM/2G)
- BS EN 301 908-2 V13.1.1 (UMTS/3G)
- BS EN 62311:2008
- BS EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- BS EN 300 328 V2.2.2 (WLAN)
- BS EN 300 440 V2.2.1 (WLAN)
- BS EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- BS EN 301 908-13 V13.2.1 (LTE/4G)

This declaration is submitted on behalf of the manufacturer:

NIVUS GmbH
Im Tale 2
75031 Eppingen
Germany

represented by:

Ingrid Steppe (Managing Director)

Eppingen, 21/10/2022

Signed by *Ingrid Steppe*

DE / EN / FR

EU Konformitätserklärung

EU Declaration of Conformity

Déclaration de conformité UE



NIVUS GmbH
Im Taele 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

Für das folgend bezeichnete Erzeugnis:

For the following product:

Le produit désigné ci-dessous:

Bezeichnung:	Portabler Durchflussmessumformer/-datenlogger mit internem Modem zur Datenfernübertragung über GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile
<i>Description:</i>	<i>Portable flow measurement transmitter/data logger with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile</i>
<i>Désignation:</i>	<i>Débitmètre/enregistreur de données portable avec modem interne pour la transmission de données à distance via GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile</i>
Typ / Type:	NFM0xxxG0 Gx

erklären wir in alleiniger Verantwortung, dass die auf dem Unionsmarkt ab dem Zeitpunkt der Unterzeichnung bereitgestellten Geräte die folgenden einschlägigen Harmonisierungsvorschriften der Union erfüllen:

we declare under our sole responsibility that the equipment made available on the Union market as of the date of signature of this document meets the standards of the following applicable Union harmonisation legislation:

nous déclarons, sous notre seule responsabilité, à la date de la présente signature, la conformité du produit pour le marché de l'Union, aux directives d'harmonisation de la législation au sein de l'Union:

- 2014/53/EU
- 2011/65/EU

Bei der Bewertung wurden folgende einschlägige harmonisierte Normen zugrunde gelegt bzw. wird die Konformität erklärt in Bezug auf die nachfolgend genannten anderen technischen Spezifikationen:

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

L'évaluation est effectuée à partir des normes harmonisées applicable ou la conformité est déclarée en relation aux autres spécifications techniques désignées ci-dessous:

- EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- EN 301 893 V2.1.1 (WLAN)
- EN 301 511 V12.5.1 (GSM/2G)
- EN 301 908-2 V13.1.1 (UMTS/3G)
- EN 62311:2008
- EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- EN 300 328 V2.2.2 (WLAN)
- EN 300 440 V2.2.1 (WLAN)
- EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- EN 301 908-13 V13.2.1 (LTE/4G)

Diese Erklärung wird verantwortlich für den Hersteller:

This declaration is submitted on behalf of the manufacturer:

Le fabricant assume la responsabilité de cette déclaration:

NIVUS GmbH
Im Taele 2
75031 Eppingen
Germany

abgegeben durch / *represented by / faite par:*

Ingrid Steppe (Geschäftsführerin / *Managing Director / Directeur général*)

Eppingen, den 21.10.2022

Gez. *Ingrid Steppe*

UK Declaration of Conformity

NIVUS GmbH
Im Tale 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivas.com
Internet: www.nivas.de

For the following product:

Description:	Portable flow measurement transmitter/data logger with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile/NivuLevel Mobile
Type:	NFM0xxxG0 Gx

we declare under our sole responsibility that the equipment made available on the UK market as of the date of signature of this document meets the standards of the following applicable UK harmonisation legislation:

- SI 2017 / 1206 The Radio Equipment Regulations 2017
- SI 2012 / 3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

- BS EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- BS EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- BS EN 301 893 V2.1.1 (WLAN)
- BS EN 301 511 V12.5.1 (GSM/2G)
- BS EN 301 908-2 V13.1.1 (UMTS/3G)
- BS EN 62311:2008
- EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- BS EN 300 328 V2.2.2 (WLAN)
- BS EN 300 440 V2.2.1 (WLAN)
- BS EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- BS EN 301 908-13 V13.2.1 (LTE/4G)

This declaration is submitted on behalf of the manufacturer:

NIVUS GmbH
Im Tale 2
75031 Eppingen
Germany

represented by:

Ingrid Steppe (Managing Director)

Eppingen, 21/10/2022

Signed by *Ingrid Steppe*

DE / EN / FR

EU Konformitätserklärung

EU Declaration of Conformity

Déclaration de conformité UE

Für das folgend bezeichnete Erzeugnis:

For the following product:

Le produit désigné ci-dessous:



NIVUS GmbH
Im Taele 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

Bezeichnung:	"Ex" Portabler Durchflussmessumformer/-datenlogger, mit internem Modem zur Datenfernübertragung über GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile
<i>Description:</i>	<i>"Ex" Portable flow measurement transmitter/data logger, with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile</i>
<i>Désignation:</i>	<i>"Ex" Débitmètre/enregistreur de données portable avec modem interne pour la transmission de données à distance via GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile</i>
Typ / Type:	NFM0xxGE Ex

erklären wir in alleiniger Verantwortung, dass die auf dem Unionsmarkt ab dem Zeitpunkt der Unterzeichnung bereitgestellten Geräte die folgenden einschlägigen Harmonisierungsvorschriften der Union erfüllen:

we declare under our sole responsibility that the equipment made available on the Union market as of the date of signature of this document meets the standards of the following applicable Union harmonisation legislation:

nous déclarons, sous notre seule responsabilité, à la date de la présente signature, la conformité du produit pour le marché de l'Union, aux directives d'harmonisation de la législation au sein de l'Union:

- 2014/53/EU
- 2014/34/EU
- 2011/65/EU

Bei der Bewertung wurden folgende einschlägige harmonisierte Normen zugrunde gelegt bzw. wird die Konformität erklärt in Bezug auf die nachfolgend genannten anderen technischen Spezifikationen:

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

L'évaluation est effectuée à partir des normes harmonisées applicable ou la conformité est déclarée en relation aux autres spécifications techniques désignées ci-dessous:

- EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- EN 301 893 V2.1.1 (WLAN)
- EN 301 511 V12.5.1 (GSM/2G)
- EN 301 908-2 V13.1.1 (UMTS/3G)
- EN IEC 60079-0:2018
- EN 60079-11:2012
- EN 62311:2008
- EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- EN 300 328 V2.2.2 (WLAN)
- EN 300 440 V2.2.1 (WLAN)
- EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- EN 301 908-13 V13.2.1 (LTE/4G)
- EN IEC 60079-7:2015/A1:2018
- EN 60079-18:2015/A1:2017

Ex-Kennzeichnung / *Ex-designation* / *Marquage Ex* :

⊕ II 2G Ex eb ib [ib] mb IIB T4 Gb

EU-Baumusterprüfbescheinigung / *EU-Type Examination Certificate* / *Attestation d'examen «UE» de type:*

TÜV 17 ATEX 196722 X issue: 01

Notifizierte Stelle (Kennnummer) / *Notified Body (Identif. No.)* / *Organisme notifié (N° d'identification)*

TÜV NORD CERT GmbH, Am TÜV 1, 45307 Essen, Germany

(0044)

Diese Erklärung wird verantwortlich für den Hersteller:

This declaration is submitted on behalf of the manufacturer:

Le fabricant assume la responsabilité de cette déclaration:

NIVUS GmbH
Im Taele 2
75031 Eppingen
Allemagne

abgegeben durch / *represented by* / *faite par:*

Ingrid Steppe (Geschäftsführerin / *Managing Director* / *Directeur général*)

Eppingen, den 21.10.2022

Gez. *Ingrid Steppe*

UK Declaration of Conformity

NIVUS GmbH
Im Täle 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

For the following product:

Description:	"Ex" Portable flow measurement transmitter/data logger, with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile
Type:	NFM0xxxGE Ex

we declare under our sole responsibility that the equipment made available on the UK market as of the date of signature of this document meets the standards of the following applicable UK harmonisation legislation:

- SI 2017 / 1206 The Radio Equipment Regulations 2017
- SI 2016 / 1107 The Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016
- SI 2012 / 3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

- BS EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- BS EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- BS EN 301 893 V2.1.1 (WLAN)
- BS EN 301 511 V12.5.1 (GSM/2G)
- BS EN 301 908-2 V13.1.1 (UMTS/3G)
- BS EN IEC 60079-0:2018
- BS EN 60079-11:2012
- BS EN 62311:2008
- BS EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- BS EN 300 328 V2.2.2 (WLAN)
- BS EN 300 440 V2.2.1 (WLAN)
- BS EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- BS EN 301 908-13 V13.2.1 (LTE/4G)
- BS EN IEC 60079-7:2015/A1:2018
- BS EN 60079-18:2015/A1:2017

Ex-designation:

 II 2G Ex eb ib [ib] mb IIB T4 Gb

EU-Type Examination Certificate:

TÜV 17 ATEX 196722 X issue: 01

Notified Body (Identif. No.):

TÜV Nord CERT GmbH, Am TÜV 1, 45307 Essen, Germany

(0044)

This declaration is submitted on behalf of the manufacturer:

NIVUS GmbH
Im Täle 2
75031 Eppingen
Germany

represented by:

Ingrid Steppe (Managing Director)

Eppingen, 21/10/2022

Signed by *Ingrid Steppe*

DE / EN / FR

EU Konformitätserklärung

EU Declaration of Conformity

Déclaration de conformité UE

Für das folgend bezeichnete Erzeugnis:

For the following product:

Le produit désigné ci-dessous:



NIVUS GmbH
Im Taele 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

Bezeichnung:	"Ex" Portabler Durchflussmessumformer/-datenlogger, mit internem Modem zur Datenfernübertragung über GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile
<i>Description:</i>	<i>"Ex" Portable flow measurement transmitter/data logger, with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile</i>
<i>Désignation:</i>	<i>"Ex" Débitmètre/enregistreur de données portable avec modem interne pour la transmission de données à distance via GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile</i>
Typ / Type:	NFM0xxxGE Gx

erklären wir in alleiniger Verantwortung, dass die auf dem Unionsmarkt ab dem Zeitpunkt der Unterzeichnung bereitgestellten Geräte die folgenden einschlägigen Harmonisierungsvorschriften der Union erfüllen:

we declare under our sole responsibility that the equipment made available on the Union market as of the date of signature of this document meets the standards of the following applicable Union harmonisation legislation:

nous déclarons, sous notre seule responsabilité, à la date de la présente signature, la conformité du produit pour le marché de l'Union, aux directives d'harmonisation de la législation au sein de l'Union:

- 2014/53/EU
- 2014/34/EU
- 2011/65/EU

 
Bei der Bewertung wurden folgende einschlägige harmonisierte Normen zugrunde gelegt bzw. wird die Konformität erklärt in Bezug auf die nachfolgend genannten anderen technischen Spezifikationen:

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

L'évaluation est effectuée à partir des normes harmonisées applicable ou la conformité est déclarée en relation aux autres spécifications techniques désignées ci-dessous:

- EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- EN 301 893 V2.1.1 (WLAN)
- EN 301 511 V12.5.1 (GSM/2G)
- EN 301 908-2 V13.1.1 (UMTS/3G)
- EN IEC 60079-0:2018
- EN 60079-11:2012
- EN 62311:2008
- EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- EN 300 328 V2.2.2 (WLAN)
- EN 300 440 V2.2.1 (WLAN)
- EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- EN 301 908-13 V13.2.1 (LTE/4G)
- EN IEC 60079-7:2015/A1:2018
- EN 60079-18:2015/A1:2017

Ex-Kennzeichnung / *Ex-designation / Marquage Ex* :



EU-Baumusterprüfbescheinigung / *EU-Type Examination Certificate / Attestation d'examen «UE» de type:*

TÜV 17 ATEX 196722 X issue: 01

Notifizierte Stelle (Kennnummer) / *Notified Body (Identif. No.) / Organisme notifié (N° d'identification)*

TÜV NORD CERT GmbH, Am TÜV 1, 45307 Essen, Germany

(0044)

Diese Erklärung wird verantwortlich für den Hersteller:

This declaration is submitted on behalf of the manufacturer:

Le fabricant assume la responsabilité de cette déclaration:

NIVUS GmbH
Im Taele 2
75031 Eppingen
Germany

abgegeben durch / *represented by / faite par:*

Ingrid Steppe (Geschäftsführerin / *Managing Director / Directeur général*)

Eppingen, den 21.10.2022

Gez. *Ingrid Steppe*

UK Declaration of Conformity

NIVUS GmbH
Im Täle 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

For the following product:

Description:	"Ex" Portable flow measurement transmitter/data logger, with internal modem for data transmission via GPRS/UMTS/LTE NivuFlow Mobile / NivuLevel Mobile
Type:	NFM0xxxGE Gx

we declare under our sole responsibility that the equipment made available on the UK market as of the date of signature of this document meets the standards of the following applicable UK harmonisation legislation:

- SI 2017 / 1206 The Radio Equipment Regulations 2017
- SI 2016 / 1107 The Equipment and Protective Systems Intended for use in Potentially Explosive Atmospheres Regulations 2016
- SI 2012 / 3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

- BS EN 61010-1:2010 + A1:2019 + A1:2019/AC:2019
- BS EN 61326-1:2013
- Draft ETSI EN 301 489-17 V3.2.5
- Draft ETSI EN 301 489-52 V1.2.1
- BS EN 301 893 V2.1.1 (WLAN)
- BS EN 301 511 V12.5.1 (GSM/2G)
- BS EN 301 908-2 V13.1.1 (UMTS/3G)
- BS EN IEC 60079-0:2018
- BS EN 60079-11:2012
- BS EN 62311:2008
- BS EN 301 489-1 V2.2.3
- Draft ETSI EN 301 489-19 V2.2.1
- BS EN 300 328 V2.2.2 (WLAN)
- BS EN 300 440 V2.2.1 (WLAN)
- BS EN 301 908-1 V15.2.0 (UMTS/3G, LTE/4G)
- BS EN 301 908-13 V13.2.1 (LTE/4G)
- BS EN IEC 60079-7:2015/A1:2018
- BS EN 60079-18:2015/A1:2017

Ex-designation:

 II 2G Ex eb ib [ib] mb IIB T4 Gb

EU-Type Examination Certificate:

TÜV 17 ATEX 196722 X issue: 01

Notified Body (Identif. No.):

TÜV Nord CERT GmbH, Am TÜV 1, 45307 Essen, Germany

(0044)

This declaration is submitted on behalf of the manufacturer:

NIVUS GmbH
Im Täle 2
75031 Eppingen
Germany

represented by:

Ingrid Steppe (Managing Director)

Eppingen, 21/10/2022

Signed by *Ingrid Steppe*

DE / EN / FR

EU Konformitätserklärung*EU Declaration of Conformity**Déclaration de conformité UE*

Für das folgend bezeichnete Erzeugnis:

*For the following product:**Le produit désigné ci-dessous:*NIVUS GmbH
Im Täle 2
75031 EppingenTelefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

Bezeichnung:	Ladeschale NFM
<i>Description:</i>	<i>charging station NFM</i>
<i>Désignation:</i>	<i>station de charge NFM</i>
Typ / Type:	NFM02 LADESCH

erklären wir in alleiniger Verantwortung, dass die auf dem Unionsmarkt ab dem Zeitpunkt der Unterzeichnung bereitgestellten Geräte die folgenden einschlägigen Harmonisierungsvorschriften der Union erfüllen:

we declare under our sole responsibility that the equipment made available on the Union market as of the date of signature of this document meets the standards of the following applicable Union harmonisation legislation:

nous déclarons, sous notre seule responsabilité, à la date de la présente signature, la conformité du produit pour le marché de l'Union, aux directives d'harmonisation de la législation au sein de l'Union:

- 2011/65/EU

Bei der Bewertung wurden folgende einschlägige harmonisierte Normen zugrunde gelegt bzw. wird die Konformität erklärt in Bezug die nachfolgend genannten anderen technischen Spezifikationen:

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

L'évaluation est effectuée à partir des normes harmonisées applicables ou la conformité est déclarée en relation aux autres spécifications techniques désignées ci-dessous:

- EN 50581:2012

Diese Erklärung wird verantwortlich für den Hersteller:

This declaration is submitted on behalf of the manufacturer:

Le fabricant assume la responsabilité de cette déclaration:

NIVUS GmbH
Im Täle 2
75031 Eppingen
Allemagne

abgegeben durch / *represented by / faite par:*

Marcus Fischer (Geschäftsführer / *Managing Director / Directeur général*)

Eppingen, den 08.02.2018

Gez. *Marcus Fischer*

UK Declaration of Conformity

NIVUS GmbH
Im Tale 2
75031 Eppingen

Telefon: +49 07262 9191-0
Telefax: +49 07262 9191-999
E-Mail: info@nivus.com
Internet: www.nivus.de

For the following product:

Description:	Charging station NFM
Type:	NFM02 LADESCH

we declare under our sole responsibility that the equipment made available on the UK market as of the date of signature of this document meets the standards of the following applicable UK harmonisation legislation:

- SI 2012 / 3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

The evaluation assessed the following applicable harmonised standards or the conformity is declared in relation to other technical specifications listed below:

- BS EN 50581:2012

This declaration is submitted on behalf of the manufacturer:

NIVUS GmbH
Im Tale 2
75031 Eppingen
Germany

represented by:

Ingrid Steppe (Managing Director)

Eppingen, 20/10/2022

Signed by *Ingrid Steppe*



Translation

(1) **EU-Type Examination Certificate**

(2) Equipment and protective systems intended for use in potentially explosive atmospheres, **Directive 2014/34/EU**



(3) **Certificate Number** TÜV 17 ATEX 196722 X **issue:** 01

(4) for the product: Portable Measuring Transformer
NivuFlow Mobile Typ NFM-0xxx x E and
NivuLevel Mobile Typ NFM-0050 x E

(5) of the manufacturer: NIVUS GmbH

(6) Address: Im Täle 2
75031 Eppingen

Order number: 8003009451

Date of issue: 2019-10-28

(7) The design of this product and any acceptable variation thereto are specified in the schedule to this EU-Type Examination Certificate and the documents therein referred to.

(8) The TÜV NORD CERT GmbH, Notified Body No. 0044, in accordance with Article 17 of the Directive 2014/34/EU of the European Parliament and the Council of 26 February 2014, certifies that this product has been found to comply with the Essential Health and Safety Requirements relating to the design and construction of products intended for use in potentially explosive atmospheres given in Annex II to the Directive.
The examination and test results are recorded in the confidential ATEX Assessment Report No. 19 203 251874.

(9) Compliance with the Essential Health and Safety Requirements has been assured by compliance with:

EN 60079-0:2012+A11:2013 EN 60079-11:2012 EN 60079-7:2015
EN 60079-18:2015

except in respect of those requirements listed at item 18 of the schedule.

(10) If the sign "X" is placed after the certificate number, it indicates that the product is subject to the Specific Conditions for Use specified in the schedule to this certificate.

(11) This EU-Type Examination Certificate relates only to the design, and construction of the specified product. Further requirements of the Directive apply to the manufacturing process and supply of this equipment. These are not covered by this certificate.

(12) The marking of the product shall include the following:

II 2 G Ex eb ib [ib] mb IIB T4 Gb

TÜV NORD CERT GmbH, Langemarckstraße 20, 45141 Essen, notified by the central office of the countries for safety engineering (ZLS), Ident. Nr. 0044, legal successor of the TÜV NORD CERT GmbH & Co. KG Ident. Nr. 0032

The head of the notified body

Rodér

Hannover office, Am TÜV 1, 30519 Hannover, Tel. +49 511 998-61455, Fax +49 511 998-61590

This certificate may only be reproduced without any change, schedule included.
Excerpts or changes shall be allowed by the TÜV NORD CERT GmbH



(13) **SCHEDULE**

(14) **EU-Type Examination Certificate No. TÜV 17 ATEX 196722 X issue 01**

(15) Description of product

Together with the belonging sensors, the Portable Measuring Transformer NivuFlow Mobile type NFM-0xxx x E and NivuLevel Mobile type NFM-0050 x E are used for the measurement of the flow speed and the flow level in partly or fully filled pipes and channels via supersonic technology. The Portable Measuring Transformer NivuFlow Mobile/NivuLevel Mobile type NFM... is operated stationary.

The permissible ambient temperature range is -15 °C ... +50 °C.

Electrical data

Supply voltage $U_n = 12 \text{ V d. c.}$
(Internal plug connections) Powered with max. 2 x 12 V/15Ah VRLA-Pb-batteries;

External supply circuit in type of protection Intrinsic Safety Ex ib IIB
(X1R [Uin], Only for connection to an intrinsically safe circuit
X1B [GND]) Maximum values:
 $U_i = 14,5 \text{ V}$
 $I_i = 1,25 \text{ A}$
 $P_i = 18,1 \text{ W}$
The effective internal capacitances and inductances are negligibly small.

1 wire circuit in type of protection Intrinsic Safety Ex ib IIB
(CSM connector X10E [GND], Maximum values:
X10F [1 wire];
DSM connector X8E [GND], X8F [1 wire]) $U_o = 3,7 \text{ V}$
 $I_o = 57,3 \text{ mA}$
 $P_o = 53 \text{ mW}$
Characteristic line: linear

Ex ib	IIB		
	65 mH	10 mH	1 mH
max. permissible external inductance	65 mH	10 mH	1 mH
max. permissible external capacitance	9.4 µF	21 µF	37 µF

5 V circuit in type of protection Intrinsic Safety Ex ib IIB
(CSM connector X10E [GND], Maximum values:
X10J [+5 V-Ex];
DSM connector $U_o = 5,93 \text{ V}$
X8E [GND], X8J [+5 V-Ex]) $I_o = 91,7 \text{ mA}$
 $P_o = 135,9 \text{ mW}$
Characteristic line: linear

Ex ib	IIB		
	1 mH	0.2 mH	0.1 mH
max. permissible external inductance	1 mH	0.2 mH	0.1 mH
max. permissible external capacitance	14 µF	23 µF	30 µF



Schedule to EU-Type Examination Certificate No. TÜV 17 ATEX 196722 X issue 01

RS485 interface pressure, output in type of protection Intrinsic Safety Ex ib IIB
(CSM connector X10G [- RxTx], X10H [+ RxTx])

Maximum values:

$U_o = 3.7 \text{ V}$
 $I_o = 95.1 \text{ mA}$
 $P_o = 88 \text{ mW}$

Characteristic line: linear

Ex ib	IIB		
max. permissible external inductance	25 mH	10 mH	1 mH
max. permissible external capacitance	11 μF	18 μF	36 μF

RS485 interface pressure, input in type of protection Intrinsic Safety Ex ib IIB
(CSM connector X10G [- RxTx], X10H [+ RxTx])

Maximum values:

$U_i = 7.21 \text{ V}$
 $I_i = 176 \text{ mA}$
 $P_i = 317.2 \text{ mW}$

The effective internal capacitances and inductances are negligibly small.

Radar sensor supply in type of protection Intrinsic Safety Ex ib IIB
(Connector X1A, X1B)

Maximum values:

$U_o = 9.87 \text{ V}$
 $I_o = 629 \text{ mA}$
 $P_o = 6.21 \text{ W}$

Characteristic line: rectangular

Ex ib	IIB		
max. permissible external inductance	0.2 mH	0.1 mH	0.05 mH
max. permissible external capacitance	5 μF	8 μF	11.9 μF

RS485 interface, output in type of protection Intrinsic Safety Ex ib IIB
(Connector X1C, X1D)

Maximum values:

$U_o = 3.7 \text{ V}$
 $I_o = 95.1 \text{ mA}$
 $P_o = 88 \text{ mW}$

Characteristic line: linear

Ex ib	IIB		
max. permissible external inductance	25 mH	10 mH	1 mH
max. permissible external capacitance	11 μF	18 μF	36 μF



Schedule to EU-Type Examination Certificate No. TÜV 17 ATEX 196722 X issue 01

RS485 interface, input in type of protection Intrinsic Safety Ex ib IIB
(Connector X1C, X1D) Only for connection to an intrinsically safe circuit
Maximum values:
 $U_i = 10.21 \text{ V}$
 $I_i = 248.8 \text{ mA}$
 $P_i = 633.8 \text{ mW}$
The effective internal capacitances and inductances are negligibly small.

Analogue input no. 1 /2 in type of protection Intrinsic Safety Ex ib IIB
(Connector X1G, X1F; X1H, X1J) Maximum values:
NivuLevel Mobile type NFM-0050 x E: $U_o = 22.2 \text{ V}$
Connector X7C, X7E; X7B, X7D) $I_o = 33 \text{ mA}$
 $R = 48 \text{ } \Omega$
 $P_o = 624 \text{ mW}$
Characteristic line: trapezoidal

Ex ib	IIB		
	max. permissible external inductance	20 mH	1 mH
max. permissible external capacitance	0.52 μF	0.56 μF	1 μF

Analogue input no. 3 in type of protection Intrinsic Safety Ex ib IIB
(Connector X1K, X1M) Maximum values:
 $U_o = 3.7 \text{ V}$
 $I_o = <1 \text{ mA}$
 $P_o = <1 \text{ mW}$
Characteristic line: linear

Ex ib	IIB		
	max. permissible external inductance	100 mH	10 mH
max. permissible external capacitance	19 μF	24 μF	38 μF

Analogue input no. 3 in type of protection Intrinsic Safety Ex ib IIB
(Connector X1K, X1M) Only for connection to an intrinsically safe circuit
Maximum values:
 $U_i = 5.53 \text{ V}$
 $I_i = 33.5 \text{ mA}$
 $P_i = 185.4 \text{ mW}$
The effective internal capacitances and inductances are negligibly small.



Schedule to EU-Type Examination Certificate No. TÜV 17 ATEX 196722 X issue 01

Analogue output in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1L, X1M) Maximum values:
 $U_o = 15.78 \text{ V}$
 $I_o = 177.4 \text{ mA}$
 $P_o = 700 \text{ mW}$
 Characteristic line: linear

Ex ib	IIB		
	max. permissible external inductance	5.5 mH	1 mH
max. permissible external capacitance	1 μF	2.4 μF	2.6 μF

Digital input in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1N, X1P) Maximum values:
 $U_o = 3.7 \text{ V}$
 $I_o = < 1 \text{ mA}$
 $P_o = < 1 \text{ mW}$
 Characteristic line: linear

Ex ib	IIB		
	max. permissible external inductance	100 mH	1 mH
max. permissible external capacitance	19 μF	38 μF	81 μF

Digital input in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1N, X1P) Only for connection to an intrinsically safe circuit
 Maximum values:
 $U_i = 19.69 \text{ V}$
 $I_i = 4.23 \text{ mA}$
 $P_i = 83.3 \text{ mW}$
 The effective internal capacitances and inductances are negligibly small.

Piezo circuits in type of protection Intrinsic Safety Ex ib IIB
 (CSM connector X10 A/B and C/D,
 DSM connector X8 A/B and C/D) Only for connection
 to the belonging sensors of the manufacturer
 Max. output energy: 146 μJ

Relay output in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1S, X1T, X1U) Only for connection to an intrinsically safe circuit
 Maximum values:
 $U_i = 26 \text{ V}$
 $I_i = 100 \text{ mA}$
 $P_i = 2.6 \text{ W}$
 The effective internal capacitances and inductances are negligibly small.



Schedule to EU-Type Examination Certificate No. TÜV 17 ATEX 196722 X issue 01

SIM-card circuit in type of protection Intrinsic Safety Ex ib IIB
(SIM-CARD connector) Maximum values:
 $U_o = 4.5 \text{ V}$
 $I_o = 283 \text{ mA}$
 $P_o = 319 \text{ mW}$
 Characteristic line: linear

	Ex ib		IIB	
	max. permissible external inductance	1 mH	0.1 mH	0.02 mH
max. permissible external capacitance	21 μF	51 μF	120 μF	

The rules for interconnection of intrinsically safe circuits have to be observed.

(16) Drawings and documents are listed in the ATEX Assessment Report No. 19 203 251874.

(17) Specific Conditions for Use

1. Electrostatic charge has to be avoided for all housing parts and the interlock; the manual of the manufacturer has to be observed.
2. Charging of the supply batteries is only permitted outside of the explosion hazardous area with the charger of the manufacturer or with a separately certified charger (intrinsically safe charge circuit); the manual of the manufacturer has to be observed.
3. Change of the supply batteries / backup battery is only permitted outside of the explosion hazardous area.
4. Only permissible batteries according to the manufacturer's operating instructions are allowed to be used.
5. The memory stick is only permitted to be used outside of the explosion hazardous area at the USB port.
6. The change of the SIM card is only permitted outside of the explosion hazardous area. See "Electrical data" for operation in the explosion hazardous area.
7. Operation is only allowed in vertical position (plug-connectors downwards).
8. The housing has to be additionally secured by an interlock provided by the manufacturer.
9. The battery in the right-hand housing part (connections MP1/MP2) is not allowed to be connected, if the external power supply is used.
10. The connections at X8 are only permissible for use of the manufacturer for firmware-updates in the safe area.

(18) Essential Health and Safety Requirements

no additional ones

- End of Certificate -

		<h2 style="margin: 0;">IECEX Certificate of Conformity</h2>	
<p>INTERNATIONAL ELECTROTECHNICAL COMMISSION IEC Certification System for Explosive Atmospheres <small>for rules and details of the IECEx Scheme visit www.iecex.com</small></p>			
Certificate No.:	IECEX TUN 18.0008X	Page 1 of 4	<u>Certificate history:</u> Issue 0 (2018-07-27)
Status:	Current	Issue No: 1	
Date of Issue:	2019-11-13		
Applicant:	NIVUS GmbH Im Täle 2, 75031 Eppingen Germany		
Equipment:	Portable Measuring Transformer NivuFlow Mobile type NFM-0xxx x E, NivuLevel Mobile type NFM-0050 x E		
Optional accessory:			
Type of Protection:	Increased safety "e", intrinsic safety "i", encapsulation "m"		
Marking:	Ex eb ib [ib] mb IIB T4 Gb		
Approved for issue on behalf of the IECEx Certification Body:		Christian Roder Head of the IECEx Certification Body	
Position:		 _____	
Signature: (for printed version)		_____ 2019-11-13	
Date:		_____	
1. This certificate and schedule may only be reproduced in full. 2. This certificate is not transferable and remains the property of the issuing body. 3. The Status and authenticity of this certificate may be verified by visiting www.iecex.com or use of this QR Code.			
Certificate issued by:			
TÜV NORD CERT GmbH Hanover Office Am TÜV 1, 30519 Hannover Germany			

		<h2>IECEX Certificate of Conformity</h2>
Certificate No.:	IECEX TUN 18.0008X	Page 2 of 4
Date of issue:	2019-11-13	Issue No: 1
Manufacturer:	NIVUS GmbH Im Täle 2, 75031 Eppingen Germany	
Additional manufacturing locations:		
<p>This certificate is issued as verification that a sample(s), representative of production, was assessed and tested and found to comply with the IEC Standard list below and that the manufacturer's quality system, relating to the Ex products covered by this certificate, was assessed and found to comply with the IECEX Quality system requirements. This certificate is granted subject to the conditions as set out in IECEX Scheme Rules, IECEX 02 and Operational Documents as amended</p>		
STANDARDS : The equipment and any acceptable variations to it specified in the schedule of this certificate and the identified documents, was found to comply with the following standards		
IEC 60079-0:2011 Edition:6.0	Explosive atmospheres - Part 0: General requirements	
IEC 60079-11:2011 Edition:6.0	Explosive atmospheres - Part 11: Equipment protection by intrinsic safety "i"	
IEC 60079-18:2014 Edition:4.0	Explosive atmospheres – Part 18: Equipment protection by encapsulation "m"	
IEC 60079-7:2015 Edition:5.0	Explosive atmospheres – Part 7: Equipment protection by increased safety "e"	
<p style="text-align: center;">This Certificate does not indicate compliance with safety and performance requirements other than those expressly included in the Standards listed above.</p>		
TEST & ASSESSMENT REPORTS: A sample(s) of the equipment listed has successfully met the examination and test requirements as recorded in:		
Test Report:	DE/TUN/ExTR18.0013/00	
Quality Assessment Report:	DE/TUN/QAR13.0011/06	

	<h2 style="text-align: center;">IECEX Certificate of Conformity</h2>
Certificate No.: IECEX TUN 18.0008X	Page 3 of 4
Date of issue: 2019-11-13	Issue No: 1
EQUIPMENT: Equipment and systems covered by this Certificate are as follows:	
Together with the belonging sensors, the "Portable Measuring Transformer"	
NivuFlow Mobile type NFM-0xxx x E and	
NivuLevel Mobile type NFM-0050 x E	
are used for the measurement of the flow speed and the flow level in partly or fully filled pipes and channels via supersonic technology.	
The Portable Measuring Transformer type NivuFlow Mobile NFM is operated stationary.	
The permissible ambient temperature range is -15 °C ... +50 °C.	
For further information, see attachment.	
SPECIFIC CONDITIONS OF USE: YES as shown below:	
<ol style="list-style-type: none">1. Electrostatic charge has to be avoided for all housing parts and the interlock; the manual of the manufacturer has to be observed.2. Charging of the supply batteries is only permitted outside of the explosion hazardous area with the charger of the manufacturer or with a separately certified charger (intrinsically safe charge circuit); the manual of the manufacturer has to be observed.3. Change of the supply batteries / backup battery is only permitted outside of the explosion hazardous area.4. Only permissible batteries according to the manufacturer's operating instructions are allowed to be used.5. The memory stick is only permitted to be used outside of the explosion hazardous area at the USB port.6. The change of the SIM card is only permitted outside of the explosion hazardous area. See "Electrical data" for operation in the explosion hazardous area.7. Operation is only allowed in vertical position (plug-connectors downwards).8. The housing has to be additionally secured by an interlock provided by the manufacturer.9. The battery in the right-hand housing part (connections MP1/MP2) is not allowed to be connected, if the external power supply is used.10. The connections at X8 are only permissible for use of the manufacturer for firmware-updates in the safe area.	



IECEX Certificate of Conformity

Certificate No.: **IECEX TUN 18.0008X**

Date of issue: 2019-11-13

Page 4 of 4

Issue No: 1

DETAILS OF CERTIFICATE CHANGES (for issues 1 and above)

- Mechanical changes
- Layout changes
- Electrical data partly changed
- Special Conditions partly changed
- New type with less components "NivuLevel Mobile type NFM-0050 x E"

Annex:

[Attachment_Issue 1_NivuFlow Mobile.pdf](#)

TÜV NORD CERT GmbH
 Hannover Office
 Am TÜV 1
 30519 Hannover
 Germany



Page 1 of 5
 Attachment to IECEx TUN 18.0008 X Issue No.: 01

Product:

Together with the belonging sensors, the Portable Measuring Transformer NivuFlow Mobile type NFM-0xxx x E and NivuLevel Mobile type NFM-0050 x E are used for the measurement of the flow speed and the flow level in partly or fully filled pipes and channels via supersonic technology. The Portable Measuring Transformer NivuFlow Mobile/NivuLevel Mobile type NFM... is operated stationary.

The permissible ambient temperature range is -15 °C ... +50 °C.

Electrical data

Supply voltage $U_n = 12 \text{ V d. c.}$
 (Internal plug connections) Powered with max. 2 x 12 V/15Ah VRLA-Pb-batteries;

External supply circuit in type of protection Intrinsic Safety Ex ib IIB
 (X1R [Uin], Only for connection to an intrinsically safe circuit
 X1B [GND]) Maximum values:
 $U_i = 14.5 \text{ V}$
 $I_i = 1.25 \text{ A}$
 $P_i = 18.1 \text{ W}$
 The effective internal capacitances and inductances are negligibly small.

1 wire circuit in type of protection Intrinsic Safety Ex ib IIB
 (CSM connector X10E [GND], Maximum values:
 X10F [1 wire];
 DSM connector X8E [GND], X8F [1 wire]) $U_o = 3.7 \text{ V}$
 $I_o = 57.3 \text{ mA}$
 $P_o = 53 \text{ mW}$
 Characteristic line: linear

	Ex ib		IIB	
	max. permissible external inductance	65 mH	10 mH	1 mH
max. permissible external capacitance	9.4 µF	21 µF	37 µF	

5 V circuit in type of protection Intrinsic Safety Ex ib IIB
 (CSM connector X10E [GND], Maximum values:
 X10J [+5 V-Ex];
 DSM connector $U_o = 5.93 \text{ V}$
 X8E [GND], X8J [+5 V-Ex]) $I_o = 91.7 \text{ mA}$
 $P_o = 135.9 \text{ mW}$
 Characteristic line: linear

	Ex ib		IIB	
	max. permissible external inductance	1 mH	0.2 mH	0.1 mH
max. permissible external capacitance	14 µF	23 µF	30 µF	

TÜV NORD CERT GmbH
Hannover Office
Am TÜV 1
30519 Hannover
Germany



Page 2 of 5
Attachment to IECEx TUN 18.0008 X issue No.: 01

RS485 interface pressure, output in type of protection Intrinsic Safety Ex ib IIB
(CSM connector X10G [- RxTx], X10H [+ RxTx]) Maximum values:

$U_o = 3.7 \text{ V}$
 $I_o = 95.1 \text{ mA}$
 $P_o = 88 \text{ mW}$
Characteristic line: linear

Ex ib	IIB		
max. permissible external inductance	25 mH	10 mH	1 mH
max. permissible external capacitance	11 μF	18 μF	36 μF

RS485 interface pressure, input in type of protection Intrinsic Safety Ex ib IIB
(CSM connector X10G [- RxTx], X10H [+ RxTx]) Only for connection to an intrinsically safe circuit
Maximum values:

$U_i = 7.21 \text{ V}$
 $I_i = 176 \text{ mA}$
 $P_i = 317.2 \text{ mW}$
The effective internal capacitances and inductances are negligibly small.

Radar sensor supply in type of protection Intrinsic Safety Ex ib IIB
(Connector X1A, X1B) Maximum values:

$U_o = 9.87 \text{ V}$
 $I_o = 629 \text{ mA}$
 $P_o = 6.21 \text{ W}$
Characteristic line: rectangular

Ex ib	IIB		
max. permissible external inductance	0.2 mH	0.1 mH	0.05 mH
max. permissible external capacitance	5 μF	8 μF	11.9 μF

RS485 interface, output in type of protection Intrinsic Safety Ex ib IIB
(Connector X1C, X1D) Maximum values:

$U_o = 3.7 \text{ V}$
 $I_o = 95.1 \text{ mA}$
 $P_o = 88 \text{ mW}$
Characteristic line: linear

Ex ib	IIB		
max. permissible external inductance	25 mH	10 mH	1 mH
max. permissible external capacitance	11 μF	18 μF	36 μF

TÜV NORD CERT GmbH
 Hannover Office
 Am TÜV 1
 30519 Hannover
 Germany



Page 3 of 5
 Attachment to IECEx TUN 18.0008 X issue No.: 01

RS485 interface, input in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1C, X1D) Only for connection to an intrinsically safe circuit
 Maximum values:
 $U_i = 10.21 \text{ V}$
 $I_i = 248.8 \text{ mA}$
 $P_i = 633.8 \text{ mW}$
 The effective internal capacitances and inductances are negligibly small.

Analogue input no. 1 / 2 in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1G, X1F; X1H, X1J) Maximum values:
 NivuLevel Mobile type NFM-0050 x E: $U_o = 22.2 \text{ V}$
 Connector X7C, X7E; X7B, X7D) $I_o = 33 \text{ mA}$
 $R = 48 \text{ } \Omega$
 $P_o = 624 \text{ mW}$
 Characteristic line: trapezoidal

Ex ib	IIB		
max. permissible external inductance	20 mH	1 mH	0.1 mH
max. permissible external capacitance	0.52 μF	0.56 μF	1 μF

Analogue input no. 3 in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1K, X1M) Maximum values:
 $U_o = 3.7 \text{ V}$
 $I_o = <1 \text{ mA}$
 $P_o = <1 \text{ mW}$
 Characteristic line: linear

Ex ib	IIB		
max. permissible external inductance	100 mH	10 mH	1 mH
max. permissible external capacitance	19 μF	24 μF	38 μF

Analogue input no. 3 in type of protection Intrinsic Safety Ex ib IIB
 (Connector X1K, X1M) Only for connection to an intrinsically safe circuit
 Maximum values:
 $U_i = 5.53 \text{ V}$
 $I_i = 33.5 \text{ mA}$
 $P_i = 185.4 \text{ mW}$
 The effective internal capacitances and inductances are negligibly small.

TÜV NORD CERT GmbH
Hannover Office
Am TÜV 1
30519 Hannover
Germany



Page 4 of 5
Attachment to IECEx TUN 18.0008 X issue No.: 01

Analogue output (Connector X1L, X1M)	in type of protection Intrinsic Safety Ex ib IIB Maximum values: $U_o = 15.78 \text{ V}$ $I_o = 177.4 \text{ mA}$ $P_o = 700 \text{ mW}$ Characteristic line: linear												
	<table border="1"> <thead> <tr> <th>Ex ib</th> <th colspan="3">IIB</th> </tr> </thead> <tbody> <tr> <td>max. permissible external inductance</td> <td>5.5 mH</td> <td>1 mH</td> <td>0.1 mH</td> </tr> <tr> <td>max. permissible external capacitance</td> <td>1 μF</td> <td>2.4 μF</td> <td>2.6 μF</td> </tr> </tbody> </table>	Ex ib	IIB			max. permissible external inductance	5.5 mH	1 mH	0.1 mH	max. permissible external capacitance	1 μF	2.4 μF	2.6 μF
Ex ib	IIB												
max. permissible external inductance	5.5 mH	1 mH	0.1 mH										
max. permissible external capacitance	1 μF	2.4 μF	2.6 μF										
Digital input (Connector X1N, X1P)	in type of protection Intrinsic Safety Ex ib IIB Maximum values: $U_o = 3.7 \text{ V}$ $I_o = < 1 \text{ mA}$ $P_o = < 1 \text{ mW}$ Characteristic line: linear												
	<table border="1"> <thead> <tr> <th>Ex ib</th> <th colspan="3">IIB</th> </tr> </thead> <tbody> <tr> <td>max. permissible external inductance</td> <td>100 mH</td> <td>1 mH</td> <td>0.1 mH</td> </tr> <tr> <td>max. permissible external capacitance</td> <td>19 μF</td> <td>38 μF</td> <td>81 μF</td> </tr> </tbody> </table>	Ex ib	IIB			max. permissible external inductance	100 mH	1 mH	0.1 mH	max. permissible external capacitance	19 μF	38 μF	81 μF
Ex ib	IIB												
max. permissible external inductance	100 mH	1 mH	0.1 mH										
max. permissible external capacitance	19 μF	38 μF	81 μF										
Digital input (Connector X1N, X1P)	in type of protection Intrinsic Safety Ex ib IIB Only for connection to an intrinsically safe circuit Maximum values: $U_i = 19.69 \text{ V}$ $I_i = 4.23 \text{ mA}$ $P_i = 83.3 \text{ mW}$ The effective internal capacitances and inductances are negligibly small.												
Piezo circuits (CSM connector X10 A/B and C/D, DSM connector X8 A/B and C/D)	in type of protection Intrinsic Safety Ex ib IIB Only for connection to the belonging sensors of the manufacturer Max. output energy: 146 μJ												
Relay output (Connector X1S, X1T, X1U)	in type of protection Intrinsic Safety Ex ib IIB Only for connection to an intrinsically safe circuit Maximum values: $U_i = 26 \text{ V}$ $I_i = 100 \text{ mA}$ $P_i = 2.6 \text{ W}$ The effective internal capacitances and inductances are negligibly small.												

TÜV NORD CERT GmbH
 Hannover Office
 Am TÜV 1
 30519 Hannover
 Germany



Page 5 of 5
 Attachment to IECEx TUN 18.0008 X issue No.: 01

SIM-card circuit in type of protection Intrinsic Safety Ex ib IIB
 (SIM-CARD connector) Maximum values:
 $U_o = 4.5 \text{ V}$
 $I_o = 283 \text{ mA}$
 $P_o = 319 \text{ mW}$
 Characteristic line: linear

	Ex ib		IIB	
	1	2	3	4
max. permissible external inductance	1 mH	0.1 mH	0.02 mH	
max. permissible external capacitance	21 μF	51 μF	120 μF	

The rules for interconnection of intrinsically safe circuits have to be observed.

Special Conditions for Safe Use:

1. Electrostatic charge has to be avoided for all housing parts and the interlock; the manual of the manufacturer has to be observed.
2. Charging of the supply batteries is only permitted outside of the explosion hazardous area with the charger of the manufacturer or with a separately certified charger (intrinsically safe charge circuit); the manual of the manufacturer has to be observed.
3. Change of the supply batteries / backup battery is only permitted outside of the explosion hazardous area.
4. Only permissible batteries according to the manufacturer's operating instructions are allowed to be used.
5. The memory stick is only permitted to be used outside of the explosion hazardous area at the USB port.
6. The change of the SIM card is only permitted outside of the explosion hazardous area. See "Electrical data" for operation in the explosion hazardous area.
7. Operation is only allowed in vertical position (plug-connectors downwards).
8. The housing has to be additionally secured by an interlock provided by the manufacturer.
9. The battery in the right-hand housing part (connections MP1/MP2) is not allowed to be connected, if the external power supply is used.
10. The connections at X8 are only permissible for use of the manufacturer for firmware-updates in the safe area.